CONVAY TRAILERTENTS



1063

Step-by-step assembly instructions by Photographs. Hints on assembly and dismantling.



All Conway Trailer Tents featur

ASSEMBLY INSTRUCTIONS

MODEL
Corniche
Campa/Campa De Luxe
Colt/Colt De Luxe
Calypso

PAGE NO'S.
2,3 6,7
2,3 4,5
2,3 8,9
10, 11


For all models, apart from the Calypso, follow the instructions illustrated on these pages, then to complete assembly:

for Comiche see pages 6,7 for Campa/Campa De Luxe see pages 4,5 see pages 8,9


Pages 12-16 show exploded view of trailers and extension frames with list of parts.

These simple instructions show you in easy stages all you need to know on how to assemble your Conway Trailer Tent. Every model shares the same basic assembly system but there are variations in the final stages for each model. When you have completed all the stages shown here, just unfold the relevant pages for your model to finish off.


A Conway Trailer Tent will take you only minutes to erect, and needs the minimum of effort — it really is child's play.

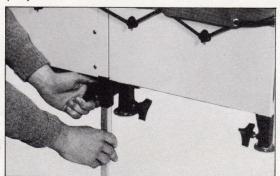


1. Unhitch trailer from car. Position on as level ground as possible. Drop down the four trailer corner jacks.

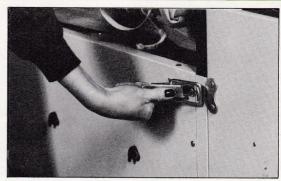


3. Drop the four corner kitchen support jacks to within ½ inch of ground. Release the two protex fasteners on either side of the kitchen, which will in turn release the kitchen from trailer.

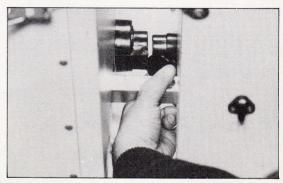

4. Now slide kitchen away enough to disconnect 7 pin plug.

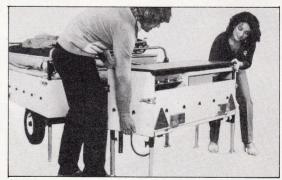

5. Slide the kitchen off carrying rails and away from the trailer.

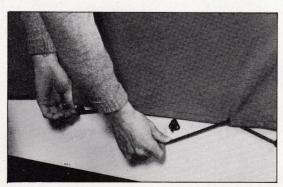

2. Remove cover by detaching elastic cord from black plastic cleats.




6. Swing over left hand cabin roof support frames and then same on right hand side.

e a fast simple assembly system



7. Lift up the two hinged arms to form the 5th roof support pole.



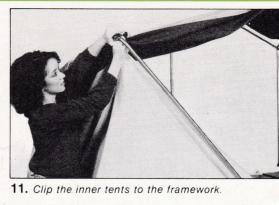

8. Extend each of the 4 cabin support poles by pushing upwards simultaneously at front and back. Locate the small button clip in the centre at the back of 5 holes in each pole. Adjust as necessary when pegging out.



12. Pull down all walls of cabin canvas.



9. Fold over each bed board and mattress to each side. Check that each bed leg is securely located



10. Release elastic bands restraining inner tents and mattresses.



6

CONWAY CORNICHE

The flagship of the Conway range, the Corniche is practical as well as supremely comfortable. Its zip-on extension allows overnight stopping with the minimum of effort, and on site its abundance of superb features make it the last word in camping luxury.



14. Layout framework for short 1·4m extension. See parts list overleaf for detailed diagram.




17. Pull forward extension canvas from main tent and locate short canopy poles through gussets.



18. If the tent is to be used in the Weekender position, the loose wall should now be zipped in and the tent pegged out with all zips closed.




15. Connect centre extension roof pole to main cabin by means of hook and attach to centre extension 'A' frame.

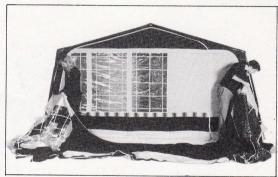


19. Zip main extension canvas to short Weekender extension.




16. Add side cabin roof poles and legs.

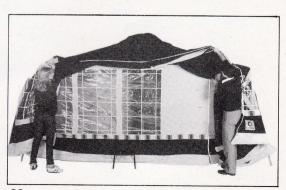

20. Throw canvas back over main tent.

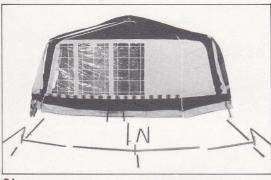

21. Layout main extension frame. See parts list overleaf for detailed diagram.

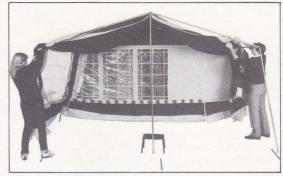

24. Pull extension canvas forward over extension frame.




22. (i) Slide extension roof poles over short canopy poles of Weekender extension.
(ii) Connect centre roof pole to main extension 'A' frame.



25. Locate three short canopy poles.




23. Connect legs and side roof poles to main extension 'A' frame.

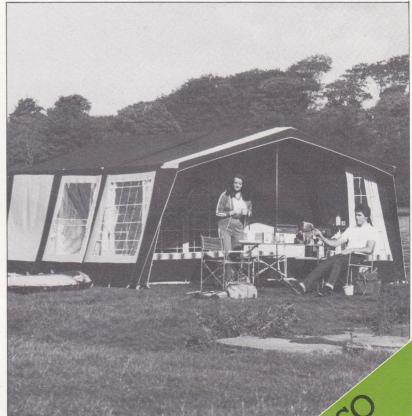

26. Adjust frame as necessary and peg out with all zips closed. The removable panel should be zipped into main extension when pegging out.



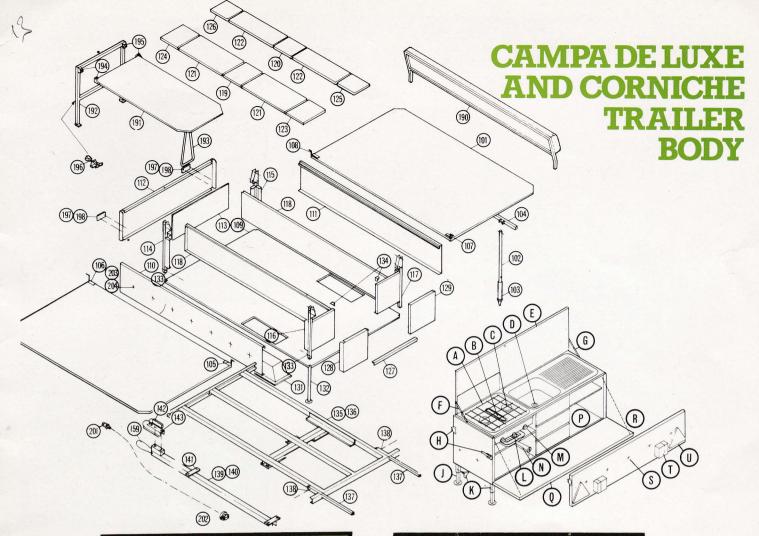

Ref.	Part No.	No./Trailer	Description
101	83165		BED BOARD — LH & RH.
102	83141	2	BED SUPPORT LEG — INNER TUBE.
103	83142	2	BED SUPPORT LEG — OUTER TUBE.
104	83148	2	BED STIFFENING ROD WITH HINGE BOLTS AND LOCK NUTS.
105	83156	ONE	LH REAR BED HINGE — LONG CRANK.
106	83157	ONE	LH FRONT BED HINGE — LONG CRANK.
107	83158	ONE	RH REAR BED HINGE — SHORT CRANK.
108	83159	ONE	RH FRONT BED HINGE — SHORT CRANK.
109	83700	ONE	TRAILER BASEBOARD.
110	83701	ONE	TRAILER SIDE PANEL — LH.
111	83702	ONE	TRAILER SIDE PANEL — RH.
112	83703	ONE	TRAILER FRONT PANEL.
113	83704	ONE	INSIDE FACING FOR FRONT PANEL.
114	83705	ONE	CORNER PIECE — LH FRONT.
115	83706	ONE	CORNER PIECE - RH FRONT.
116	83707	ONE	CORNER PIECE WITH PANEL — LH REAR.
117	83708	ONE	CORNER PIECE WITH PANEL — RH REAR.
118	83709	2	CUPBOARD INSIDE PANEL — LH & RH.
119	83733	ONE	CUPBOARD CENTRE PIECE — LH.
120	83734	ONE	CUPBOARD CENTRE PIECE — RH.
121	83727	2	CUPBOARD DOOR — LH.
122	83728	2	CUPBOARD DOOR — RH.
123	83729	ONE	CUPBOARD END PIECE — LH REAR.
124	83730	ONE	CUPBOARD END PIECE — LH FRONT.
125	83731	ONE	CUPBOARD END PIECE — RH REAR.
126	83732	ONE	CUPBOARD END PIECE — RH FRONT.
127	83718	ONE	KICKING STRIP.
128	83719	ONE	CLADDING FOR LH REAR PANEL.
129	83720	ONE	CLADDING FOR RH REAR PANEL.
131	83722	2	WHEEL ARCH. LH & RH.
132	83179	4	TRAILER SUPPORT LEG JACK.
133	83180	4	TRAILER SUPPORT LEG JACK LOCKING SCREW.
134	83723	2	CORNER PIECE FOR REAR PANEL.
136	83751	1	CHASSIS
137	83752	2	KITCHEN CARRYING RAIL.
138	83180	2	KITCHEN CARRYING RAIL LOCKING SCREW.
140	83753	1	TOWBAR — SEE MAINTENANCE MANUAL.

Ref.	Part No.	No./Trailer	Description
141		4	TOWBAR LOCKNUTS.
142	83183	ONE	50mm COUPLING — NONE BRAKED TRAILER.
143	83184	2	COUPLING BOLT & LOCK NUT.
191	83150		TABLE.
192	83151	ONE TABLE	TABLE SUPPORT FRAME.
193	83152	ONE TABLE	TABLE HINGED LEG.
194	83153	ONE TABLE	TABLE LOCATING BRACKET — LH.
195	83154	ONE TABLE	TABLE LOCATING BRACKET — RH.
196	83155	2 TABLE	TABLE LOCKING BRACKET WITH SCREW.
198	83226	2	FRONT WHITE REFLECTOR.
201	83222	1-TRAILER	SEVEN PIN PLUG.
202	83227		SOCKET FOR SERVICE PIN PLUG.
203	83224		COVER ANCHORAGE BUTTON — TRIANGULAR TYPE.
204	83228		COVER ANCHORAGE BUTTON — CIRCULAR TYPE.
205	83225		PROTEX FASTENER.


Spares for kitchen

Ref.	Part. No.	No/Kitchen	Description
Α	83542	ONE	COOKERTOPGRID
В	83541A	ONE	CENTRE GRILL
C	83541B	2	SIDE BURNER
D	83212	ONE	SINK WASTE AND PLUG
E	83546	ONE	KITCHENTOP
F	83203	ONE	LH KITCHEN TOP STAY
G	83202	ONE	RH KITCHEN TOP STAY
H	83225	4	PROTEX FASTENER
J	83179	4	SUPPORT LEG JACK
K	83180	4	LOCKING SCREW
L	83541C	ONE	GRILL CONTROL KNOB
M	83541D	2	SIDE BURNER CONTROL KNOB
N	83543	ONE	GRILL PAN AND WIRE
Р	83545	2	DRAWER
Q	83537-8	ONE	REAR FLAP
R		2	SUPPORT CHAIN 28" LONG
S	83228	9	COVER ANCHORAGE BUTTON
Т	83583	2	REAR LIGHT
U	83582	2	REFLECTOR
V	83736	2	HINGE FOR KITCHEN TOP
W	83363	2	HINGE FOR REAR FLAP

M

CABIN FRAME FOR ALL MODELS

Colt, Campa and Campa De Luxe Trailer Tents

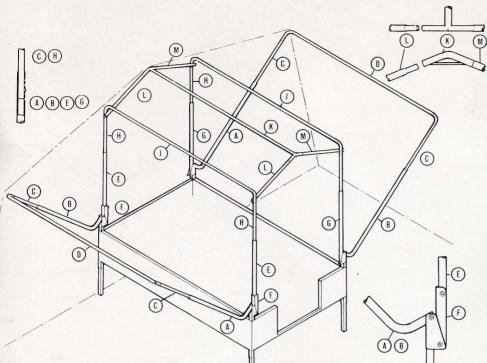

Ref.	Part No.	No./Trailer	Description
Α	83813	2	LOWER CABIN POLE. LH REAR & RH FRONT.
В	83814	2	LOWER CABIN POLE, LH FRONT & RH REAR.
C	83815	4	UPPER CABIN POLE. LH & RH.
D	83816	2	CABIN ROOF POLE. LH & RH.
E	83817	2	LOWER CENTRAL CABIN POLE. LH REAR & LH FRONT.
F	83346	2	HINGE FRAME BRACKET.
G	83818	2	LOWER CENTRAL CABIN POLE, RH REAR & RH FRONT.
H	83819	4	UPPER CENTRAL CABIN POLE, LH & RH REAR & FRONT.
J	83820	2	CENTRAL CABIN ROOF POLE LH & RH.
K	83821	ONE	CABIN RIDGE POLE.
L	83822	2	RIDGE POLE TIE PIECE WITH BUTTON CLIP — LH.
М	83823	2	RIDGE POLE TIE PIECE WITHOUT BUTTON CLIP — RH.

Corniche Trailer Tents

Ref.	Part No.	No./Trailer	Description
Α	83335	2	LOWER CABIN POLE. LH REAR & RH FRONT.
В	83336	2	LOWER CABIN POLE. LH FRONT & RH REAR.
С	83337	4	UPPER CABIN POLE. LH & RH.
D	83338	2	CABIN ROOF POLE. LH & RH.
Ε	83339	2	LOWER CENTRAL CABIN POLE. LH REAR & LH FRONT.
F	83346	2	HINGE FRAME BRACKET.
G	83340	2	LOWER CENTRAL CABIN POLE. RH REAR & RH FRONT.
Н	83341	4	UPPER CENTRAL CABIN POLE. LH & RH REAR & FRONT.
J	83342	2	CENTRAL CABIN ROOF POLE. LH & RH.
K	83343	ONE	CABIN RIDGE POLE.
L	83344	2	RIDGE POLE TIE PIECE WITH BUTTON CLIP — LH.
М	83345	2	RIDGE POLE TIE PIECE WITHOUT BUTTON CLIP — RH.

CORNICHE EXTENSION FRAME

List of parts for extension and sun canopy frames

