

1980


# CONWAY TRAILERS

GENERAL HINTS FOR CAMPING

CARE AND PROTECTION OF YOUR CANVAS


MAINTENANCE DETAILS

## CONWAY CAPRI ERECTION INSTRUCTIONS

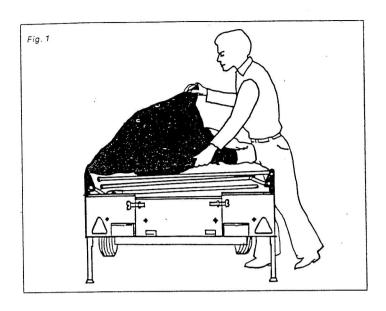



- Unhitch trailer from car. Position on as level ground as possible. Drop down the 4 Corner Jack Legs.
- 2. Remove cover.


3. Lift over right hand and centre frame taking the strain on centre frame. See Fig 2.

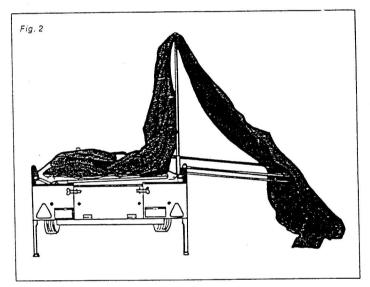



- 4. Lift over left hand frame and locate button clip in hinged arm in centre hole of securing arm. See Fig 3.
- 5. Extend all three roof frames.
- 6. Lift over bed board and mattresses. See Fig 4.
- 7. Release elastic retaining straps and clip inner tent to frame.

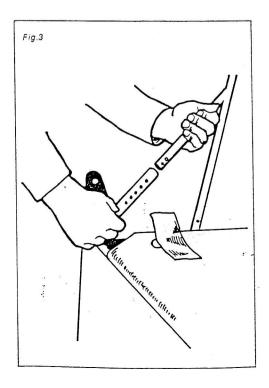

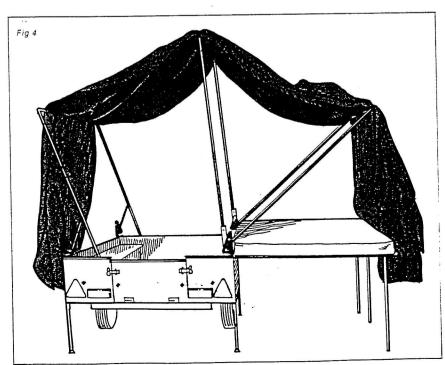

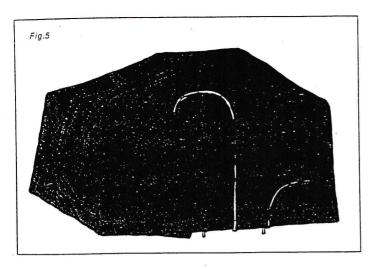

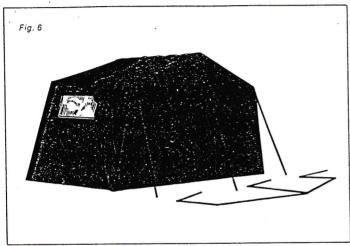


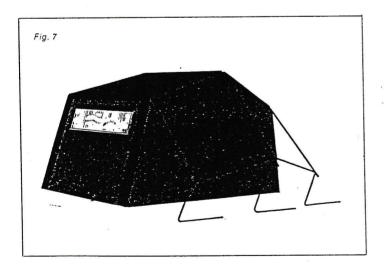


- 8. Pull cabin walls down from roof of trailer.
- 9. Adjust cabin frame as necessary. Ensure that left and right hand roof frames are equal distances from the ground. See Fig 5.
- 10. Peg out with all zips closed in the following sequence.
  - (i) Back corners, ensure towbar gusset is in correct position.
  - (ii) Front corners.
  - (iii) All intermediate points.

#### Conway Popular Extension

- 1. Attach to cabin by means of zips.
- 2. Throw extension canvas back over roof of cabin.
- 3. Remove extension frame from bag.
- 4. Extend extension roof poles to approximately twothirds their length. Locate hooks of 2 outside roof poles, but not centre one.
- 5. Connect remainder of extension frame, but leave bottom section of each leg loose. (See Figure 6.)
- 6. Connect centre roof pole to apex of extension frame, and then locate spike in cabin frame.
- 7. Attach 2 side roof poles to front frame. (See Figure 7.)
- 8. Pull forward extension canvas and locate over spikes. (See Figure 8.)
- 9. Lift extension frame to correct height, and tension roof poles correctly.
- 10. Peg out with all zips closed. (See Figure 9.)

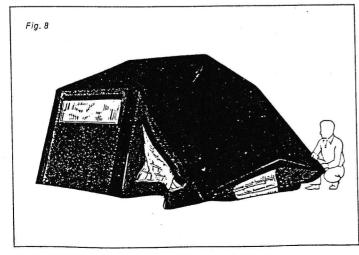



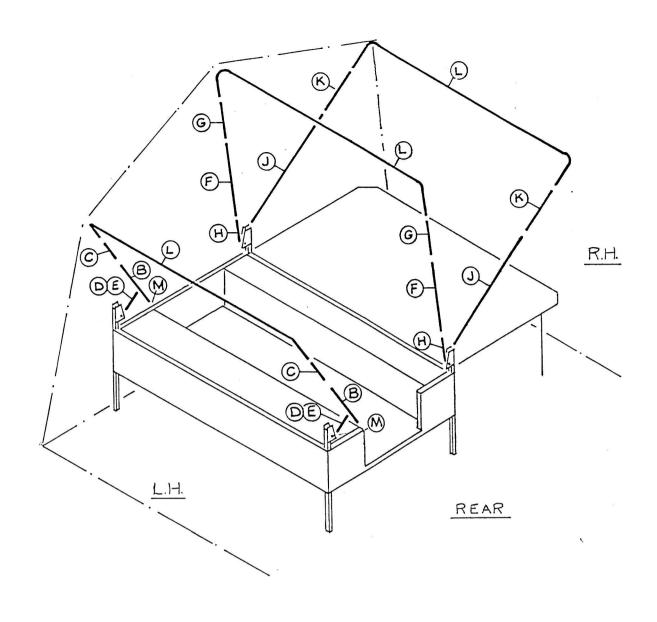

# CABIN FRAME FOR CAPRI TRAILER TENT

## LIST OF PARTS FOR ONE CABIN.

K 80328 2 UPPER " - R.H.	ABCDEFGHJ	80320 80321 80322 80323 80324 80325 80326 80106 80327	0320 ONE 0321 ONE 0322 2 0323 2 0324 2 0325 2 0326 2 30106 2	LOWER CABIN POLE - LH.REAR  " " - L.H.FRONT  UPPER " - L.H.  L.H. FIXING STRUT-INNER TUBE  L.H. " - OUTER "  LOWER CABIN POLE-R.H/CENTRE  UPPER " - R.H/CENTRE  HINGE FRAME BRACKET  LOWER CABIN POLE-R.H.
K 80328 2 UPPER " - R.H.  L 80329 3 CABIN ROOF POLE  M 80561 2 HINGE BRACKET FOR POLES A'&B'	J K L	80327 80328 80329	30329 3	LOWER CABIN POLE-R.H.  UPPER " - R.H.  CABIN ROOF POLE