



CONWAY


CARDINAL ERECTING INSTRUCTIONS

The following instructions are intended as a step-by-step guide to help you erect your Conway Unit. Please read your Owners Manual thoroughly where you will find other helpful information within the section on Pitching.


Main Cabin 1-26

Awning Extension 27-38


Optional Storage/Toilet Extension 39-42

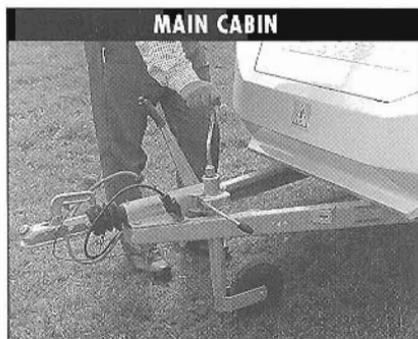


1. Apply handbrake and detach trailer from the car. Ensure trailer is as level as possible using adjustment in the jockey wheel. On uneven ground aid levelling by using wooden blocks or other aids beneath the wheels.

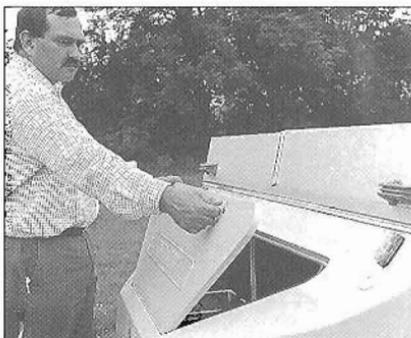

2. Unlock and lift the bottle box lid. Remove the corner steady brace handle, plywood pads and any other items required. Ensure the gas regulator is fitted and turned on.

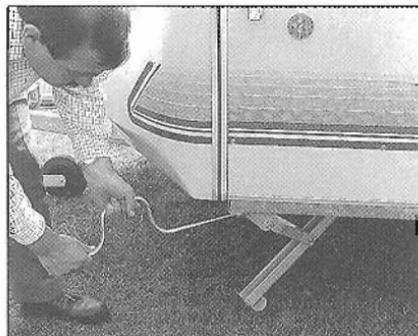

3. Wind down the corner steadies onto the plywood pads provided, without exerting any pressure. (see instruction 10.)

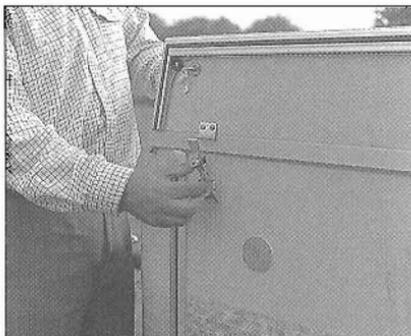

4. Release four corner roof catches. Lift the corner by the door by hand to enable the door to be opened freely. Open the door and remove the winch handle.



5. Slide up the winch socket cover and insert the winch handle.




6. Turn the handle in the direction indicated on the socket cover until the setting cable is taut. Check periodically that the roof is rising equally at all four corners.



7. Pull out the rear bed until it reaches the bed end stop. Remove the bed support bars from under the mattress.




8. Fit the rear bed support bars to the slots cut into the chassis and to the bracket under the bed board. Repeat for the front bed.

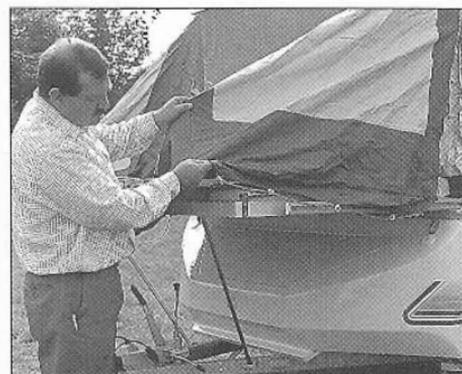

9. Fit the canvas loosely around each bed board but do not secure with the elasticated cord at this stage.



10. Ensure that the lower door is not catching or binding and then give each corner steady a further full one and a half turns.

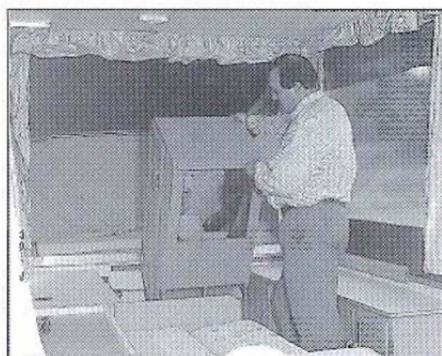


11. Now step inside the trailer and lift the hinged wardrobe.




12. When vertical - slide the wardrobe across and into position on top of the cupboard units.



13. Lift over the kitchen unit, ensure the round peg at the base of the hinged flap fits into the corresponding hole in the base of the unit.

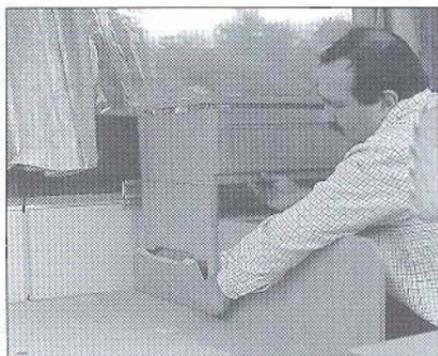

14. Now lift the kitchen unit at the left hand side and secure at the correct height by seating on top of the hinged flap. Unclip the waste hose beneath the sink and locate in the opening in the base unit.

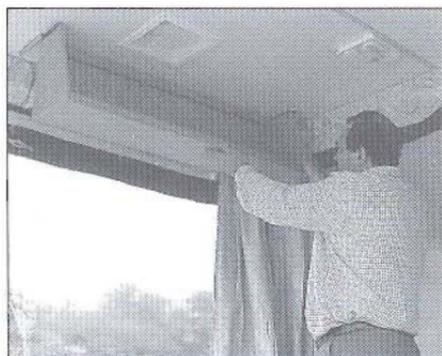

15. Remove the shelf unit from its storage position under the table and fit to the brackets on the roof above the kitchen. The right hand bracket should be engaged first.



16. Remove the corner roof support bars from under the mattress, locate the open end over the plastic lug in the bed end frame.




17. Push the bed end frame into the position and hold by fitting the first end of the roof support bar to slotted bracket. Repeat for each corner.




18. Fit the hooks at the front of the inner tents to the appropriate bracket. Once fitted the inner tents can remain clipped to the bed end frame, but must be unclipped from the front brackets before lowering your camper.




19. Unclip the top door section from the roof and lower whilst stepping outside the trailer.

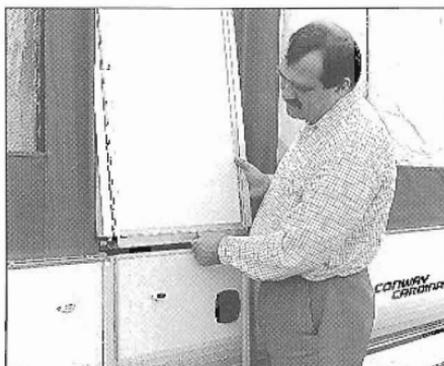

20. Close the bottom door and pushing the top door section upwards fit the channel at the base of the upper door over the lower door. Fit the plastic pegs in the upper door frame into the holes at the side of the bottom door.

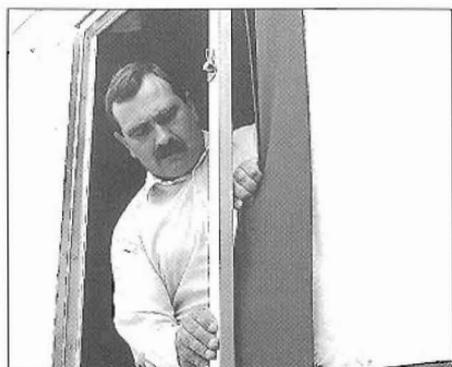


21. Release door catches and step inside the trailer, secure the plate at the top of the door with the white plastic turn buckles. Fit the canvas to the door by turning the hard edge through 180 degrees and pressing firmly into the door channel.

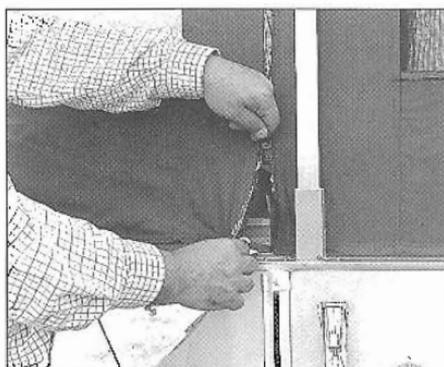

22. Ensure that the bottom of the small PVC flap is pulled to the outside. Connect the hook eye, fully pull down zip-repeat on all four corners.



23. Fit the elasticated shock cord to the lugs fitted to the underside of each bedboard.

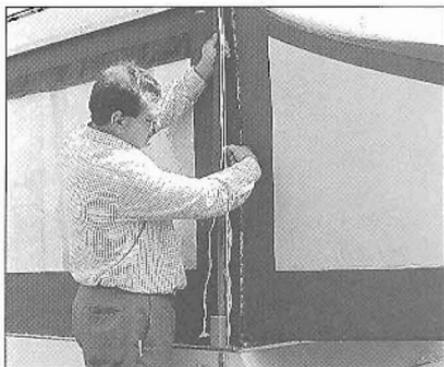

24. Fit the canvas covers to the four corner lifting posts.



25. To add the finishing touch, thread the hooks onto the curtains and insert onto sliders on fixed curtain rail. The curtains can then be left in situ when folding.



26. The spare wheel is mounted under the trailer at the back. It can be released using the corner steady brace.

SPECIAL POINTS TO NOTE:

1. The roof should not be raised or lowered when the corners steadies are under full tension.
2. Failure to fit the bed support bars when the beds are in the extended position will result in damage to the sliding mechanism.
3. Check when lowering the roof that all corners come down evenly: if one tends to stick, possibly due to ground being uneven, stop winding and assist the sticking corner. If the roof is persistent in sticking, then wind up fully and start again.
4. Be careful not to over wind the crank, either when raising or lowering the roof.
5. Always check that the kitchen, wardrobe, door and roof light etc. have been folded away/closed before attempting to fold the trailer.
6. Should the tent be wet when folding away, the mattresses which are vinyl backed, should be turned over to protect the bedding.
7. If the door casing is not quite square with the door, this can be adjusted by raising or lowering the corner steadies by up to one full turn, thus correctly aligning the door.
8. On Final Folding - engage the three roof clamps, not the one nearest to the door. Ensure lifting cables are under slight tension, i.e. not slack. Finally engage the last corner clamp after putting the winch handle away.

ERECTING THE AWNING



27. Remove the awning canvas from its bag and slide the white corded section through the awning channelling fitted to the camper roof.



28. Fold the awning canvas back onto the roof of the camper.



29. If the camper and the awning are being erected at the same time it is easier to fit the awning before the roof is raised.



30. Then proceed to erect the camper as per instructions 5-25.




31. Layout the awning frame as shown, connecting together all sprung sections. See the parts list drawing for a more detailed diagram.




32. Hook the centre roof pole to the plastic eye in the front of the camper roof and then connect to the front A frame.

OPTIONAL STORAGE/TOILET ANNEXE

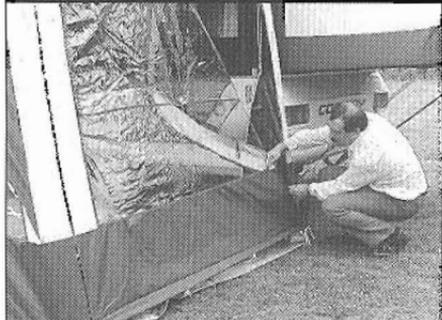

39. Unpeg and zip out the right hand awning wall.

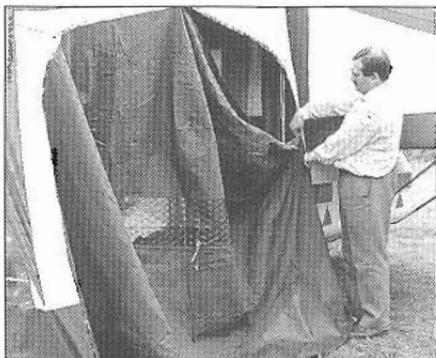

40. Replace with the annexe canvas.



41. Fit the annexe frame as shown from inside the awning.



42. Adjust the frame and peg out.




CONWAY

CARDINAL AWNING FRAME PARTS

NOTE: Due to model differences it is vital to quote the Model Type and both Model No. and Serial No. visible on the Trailer Chassis Plate fitted to the nearside front corner, when ordering Awning Frame Parts.

AWNING FRAME PARTS

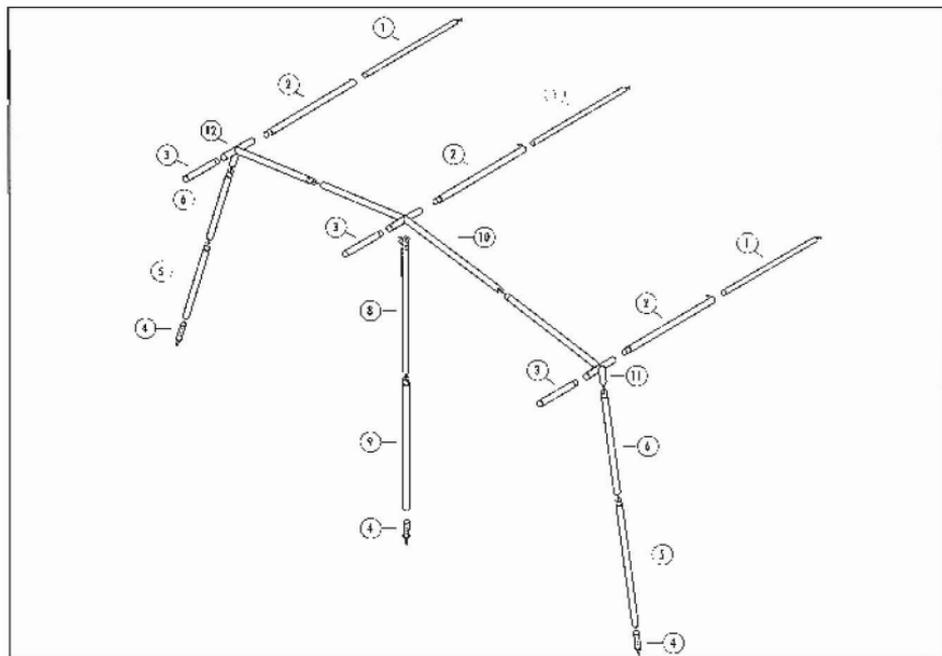

REF NO.	QTY	DESCRIPTION
1	3	LONG HOOKED POLE
2	3	EXTENDING SPRING POLE
3	3	STUB CANOPY POLE
4	3	ADJUSTABLE FOOT
5	2	LOWER SUPPORT LEG
6	2	UPPER SUPPORT LEG
8	1	SUPPORT LEG & CLIP
9	1	LOWER SUPPORT LEG
10	1	4 - WAY CENTRE BRANCH
11	1	4 - WAY RIGHT HAND BRANCH
12	1	4 - WAY LEFT HAND BRANCH