

ERECTION INSTRUCTIONS FOR DANDY 4, 4/5 & 5

The erection instructions are described as if standing at the rear of the Dandy looking at the door.

The section with the door is referred to as "the door section"

The section with the opening window is referred to as "the window section"

Apply handbrake, level trailer by adjusting jockey wheel (when erecting or folding the Dandy in strong winds, put the left side into the wind). The trailer can be turned into the required position after the Dandy has been assembled.

Remove trailer cover. Pull out jacks to full extent and drop legs. If on soft ground, press legs into ground with foot before tightening screws.

Put the roof onto the ground on the right hand side and attach the end of the nylon cord to the roof edge fastening buttons and lift the bed. As it reaches the vertical position you will find it starts to lift the roof. Open the other bed, again checking that the nylon cords are fixed to the buttons.

Lift the door section and open the door immediately, thus ensuring the section will not fall. Take any of the roof poles and lift the window section slightly and fit the pole into the bracket. Then, using the pole, push up the section. Step inside the trailer and hook the other end of the pole into the bracket over the door. Go to the right of the trailer and release the cords from the buttons, which are now under the beds, and push the tube, which erected the roof, inwards until they make contact with the retainers on the sections. Release the bolts holding the side board to the right bed/settee. Lift the side board and fit the plug, located at the end of the tube in the side curtain, into the socket in the side board. Fit the elastics on the side curtains to the buttons at the back of the side boards and also under the bed settee. Do the same for the other side and secure the elastics at the end of the roof to the buttons under the bed settee. Tighten the edge of the roof by fastening the rope to the buttons at one end, then tighten the other side. Step inside the Dandy and assemble the folding cupboard and place the combined cooker and sink unit onto the cupboard. Connect the waste pipe to the bottom of the sink and ensure the other end is placed into the fixed tube in the bottom cupboard. Fit a roof pole above each bed to give extra support to the roof.

To assemble the bed settee, lift the larger cushion and you will find a tubular frame with webbing attached. Raise this and secure the two 2' tubes to support this frame. Place the large cushion against it and you have your settee ready for use.

Your trailer is now fully erected and ready to live in.

To dismantle the Dandy, first ensure the window is closed properly and then reverse erection instructions above, remembering to re-attach the nylon cord to the roof buttons so that they will hold the roof up whilst you are dropping the window and door sections. Hold the roof clear with one hand while lifting the right bed with the other. Pull on the roof to lift the bed, thus carrying the roof clear. Fold the roof neatly on top, tucking in the nylon cords which are now on the buttons ready for the next time you open up the Dandy.

USEFUL INFORMATION

The door has a night latch. This is operated by pushing the handle on the lock upwards, thus locking the door.

ERECTION INSTRUCTIONS FOR DANDY 4, 4/5 & 5

Continuation...../

Recommended tyre pressure is 26 p.s.i.

The only maintenance on the Dandy are the two grease nipples on the hitch.

Hubs should be greased every 10,000 miles. If in doubt refer to Dandy Caravans.

Turn the mattresses daily to ventilate.



Dandy Forum
Where Camping Just Gets Better
www.dandyforum.co.uk

