

CONWAY TRAILERS 1981

Step-by-step assembly instructions by Photographs.
Hints on assembly and dismantling.

2

All Conway Trailer Tents feature this:

ASSEMBLY INSTRUCTIONS


MODEL	FOLLOW PAGE NO'S.
CAMPA DE LUXE	2-3-4-5
CORNICHE	2-3-6-7
COLT	2-3-8

For every model follow the instructions illustrated on these pages, then to complete assembly —


for Campa de Luxe see Pages 4,5
for Corniche see Pages 6,7
for Colt see Page 8

These simple instructions show you in easy stages all you need to know on how to assemble your Conway Trailer Tent. Every model shares the same basic assembly system but there are variations in the final stages for each model. When you have completed all the stages shown here, just unfold the relevant pages for your model to finish off.


A Conway Trailer Tent will take you only minutes to erect, and needs the minimum of effort — it really is child's play.

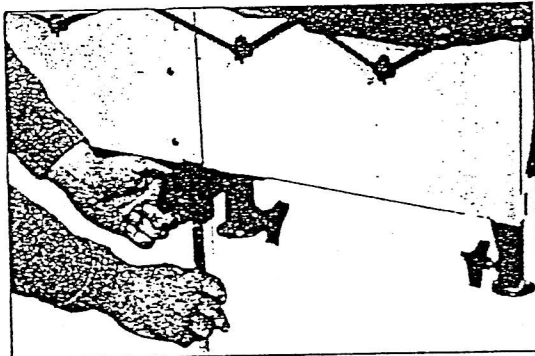


1. Unhitch trailer from car. Position on as level ground as possible. Drop down the four trailer corner jacks.

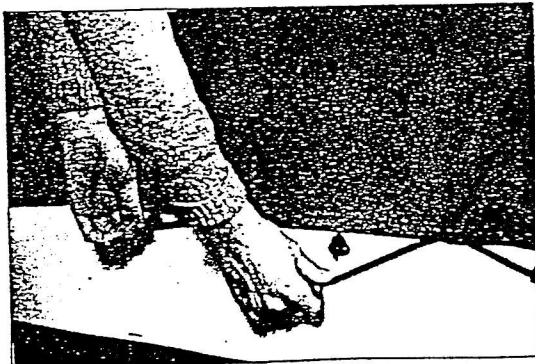


2. Remove cover by detaching elastic cord from black plastic cleats.

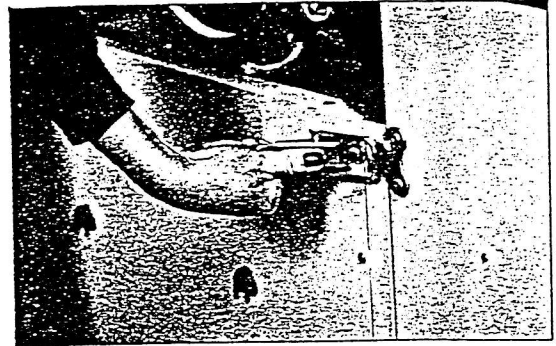

3. Drop the four corner kitchen support jacks to within 1/2 inch of ground. Release the two protex fasteners on either side of the kitchen, which will in turn release the kitchen from trailer.

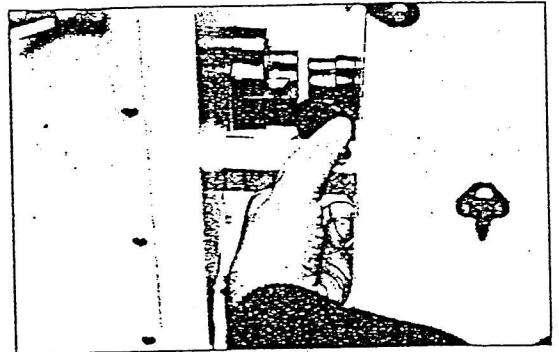

4. Now slide kitchen away enough to disconnect 7 pin plug.

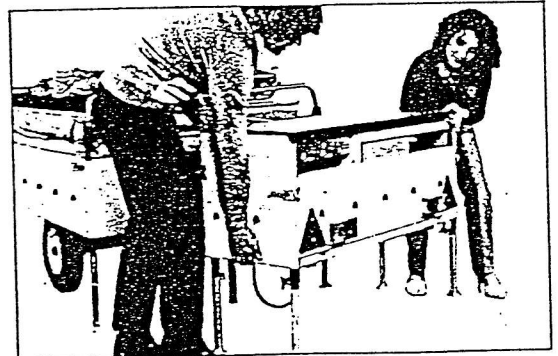


5. Slide the kitchen off carrying rails and away from the trailer.




6. Swing over left hand cabin roof support frames and then same on right hand side.

Initial fast simple assembly system


3

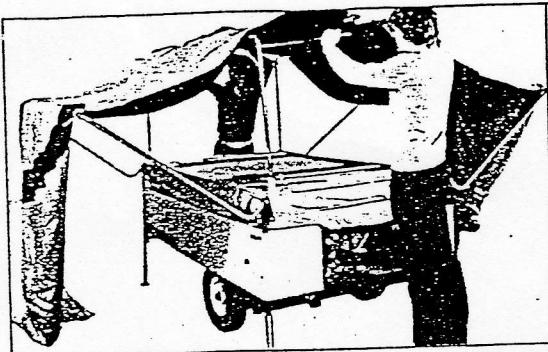


7. Lift up the two hinged arms to form the 5th roof support pole.

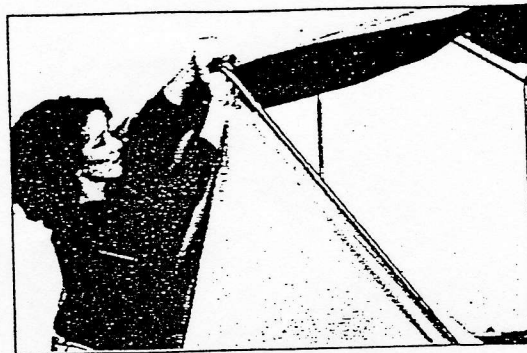


11. Clip the inner tents to the framework.

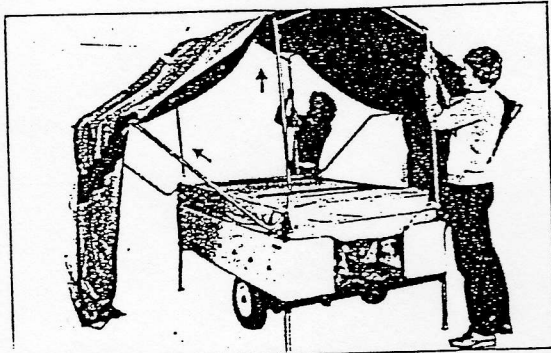

8. Extend each of the 4 cabin support poles by pushing upwards simultaneously at front and back. Locate the small button clip in the centre at the back of 5 holes in each pole. Adjust as necessary when pegging out.

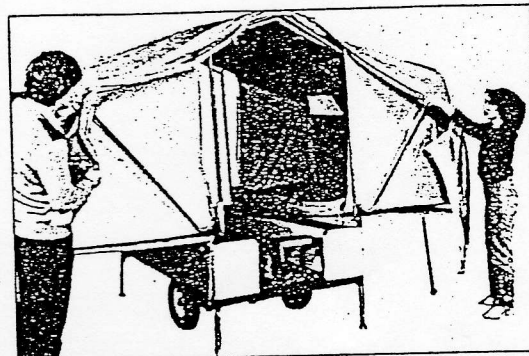


12. Pull down all walls of cabin canvas.

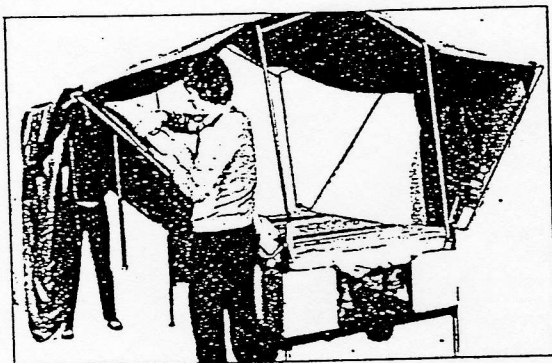

9. Fold over each bed board and mattress to each side. Check that each bed leg is securely located and adjust as necessary.




10. Release elastic bands restraining inner tents and mattresses.

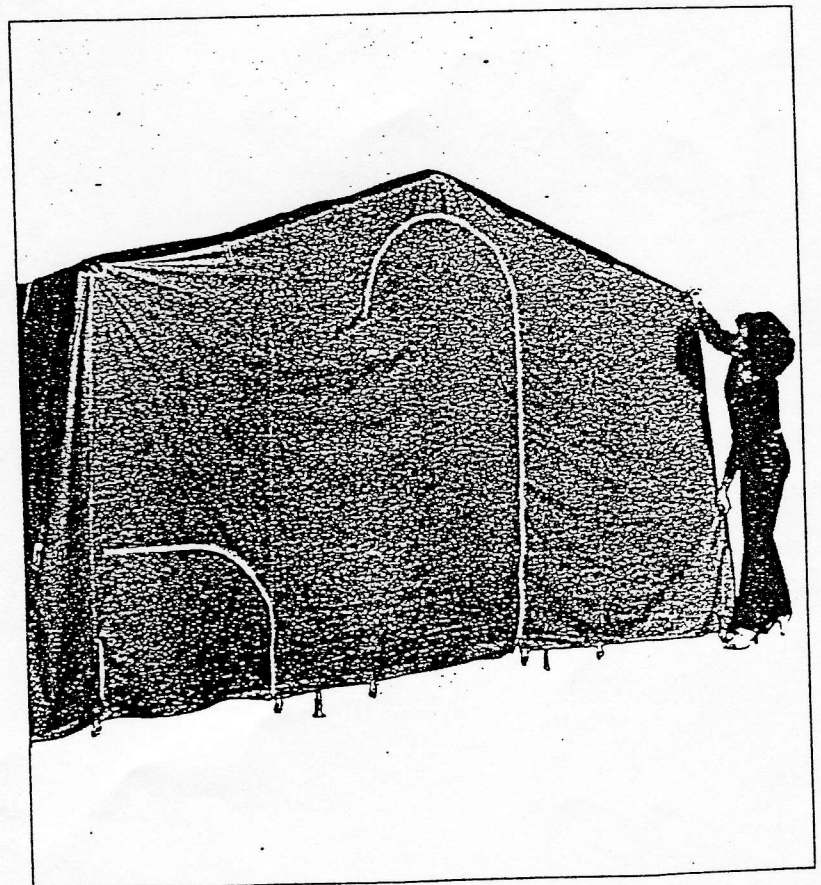


6

CONWAY CORNICHE


The flagship of the Conway range, the Corniche is practical as well as supremely comfortable. Its zip-on extension allows overnight stopping with the minimum of effort, and on site its abundance of superb features make it the last word in camping luxury.

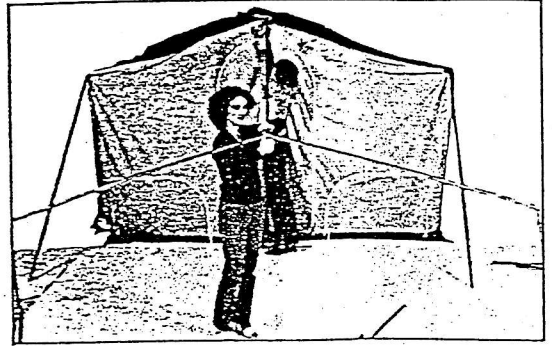


17. Connect centre cabin roof pole to main tent frame and attach to centre extension "A" frame.

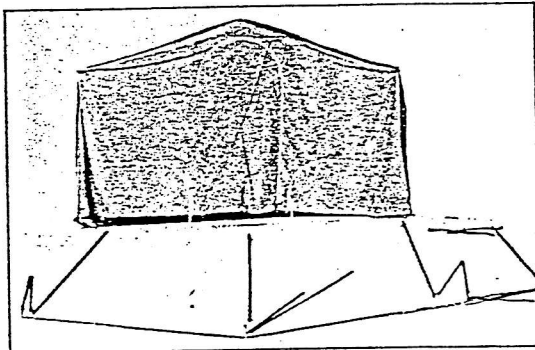


14. Layout framework of tent extension. Leave sun canopy poles in plastic bag. See parts list overleaf for detailed diagram.

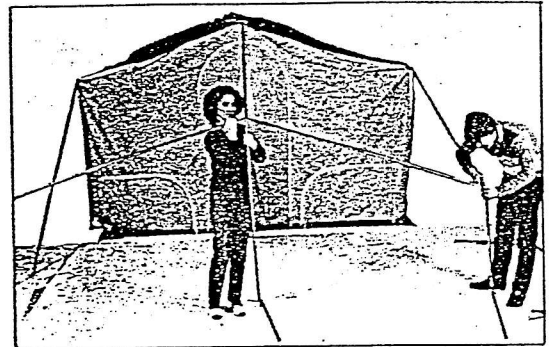


18. Add side cabin roof poles and legs leaving bottom section of front support legs broken.

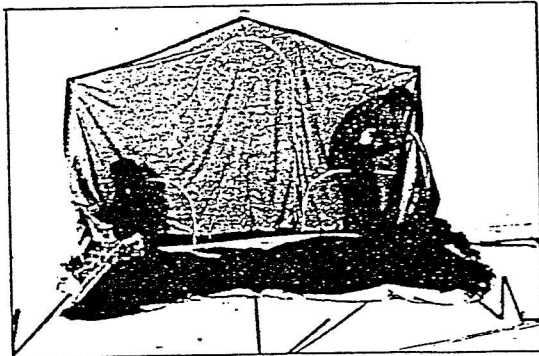


15. Zip extension canvas to main tent.

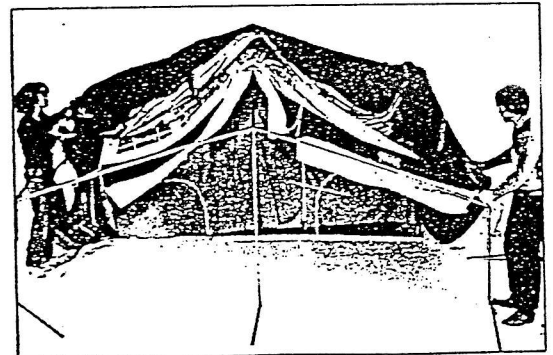


19. Pull extension canvas over roof support frame.

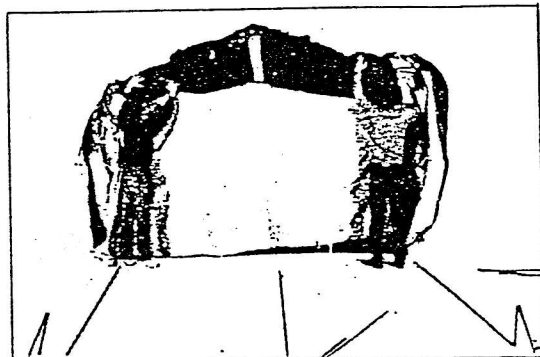


16. Then throw canvas over on top of main tent.

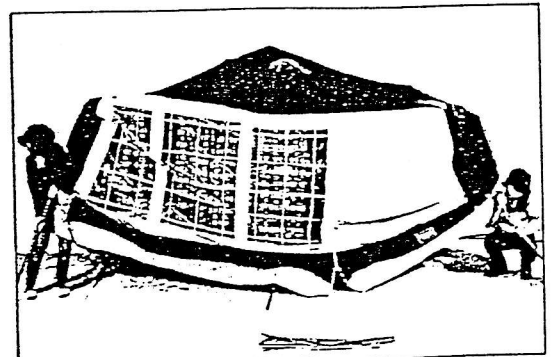


20. Connect three front support pole legs and lift extension to full height.

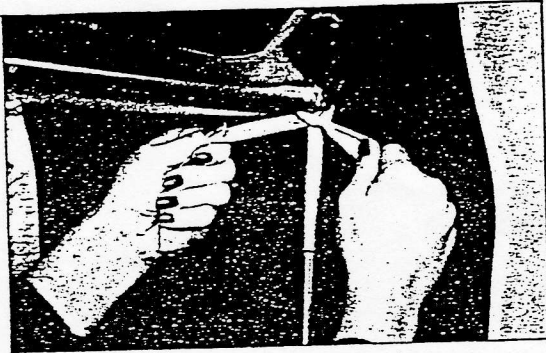

21. Now tie two front corner interior tie tapes.

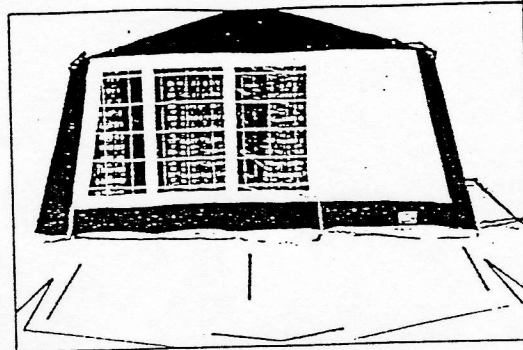


25. Layout framework for sun canopy.

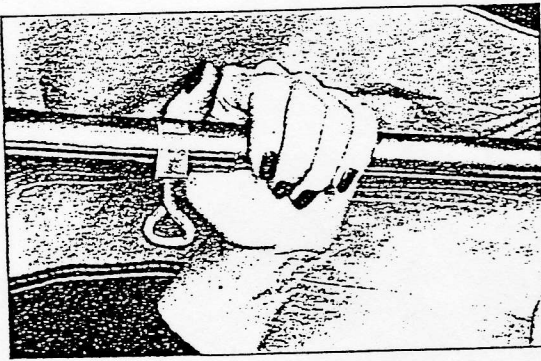


22. Extend extension roof support poles.



26. Slide front sun roof "A frame" through sleeve and connect in centre ensuring holes at corner and centre face main tent. Connect and extend centre and side roof support poles.

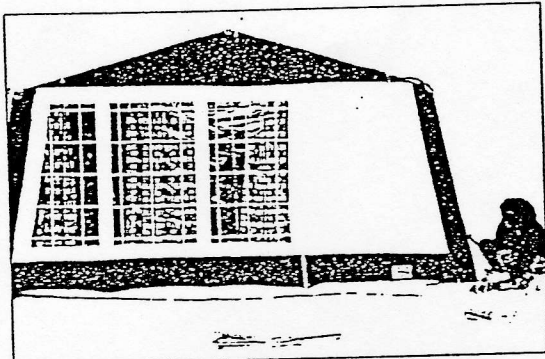

23. Peg out at corners only.

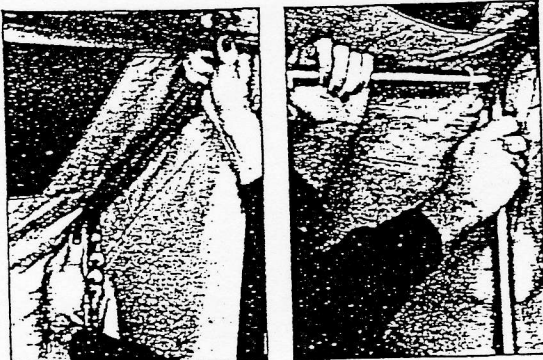

24. Fit kitchen extension frame then finish pegging out.

