# CONVAY TRAILERTENTS



# 1063

Step-by-step assembly instructions by Photographs. Hints on assembly and dismantling.



## All Conway Trailer Tents featur

# **ASSEMBLY INSTRUCTIONS**

MODEL
Corniche
Campa/Campa De Luxe
Colt/Colt De Luxe
Calypso

PAGE NO'S.
2,3 6,7
2,3 4,5
2,3 8,9
10, 11


For all models, apart from the Calypso, follow the instructions illustrated on these pages, then to complete assembly:

for Comiche see pages 6,7 for Campa/Campa De Luxe see pages 4,5 see pages 8,9

Pages 12-16 show exploded view of trailers and extension frames with list of parts.

These simple instructions show you in easy stages all you need to know on how to assemble your Conway Trailer Tent. Every model shares the same basic assembly system but there are variations in the final stages for each model. When you have completed all the stages shown here, just unfold the relevant pages for your model to finish off.


A Conway Trailer Tent will take you only minutes to erect, and needs the minimum of effort — it really is child's play.

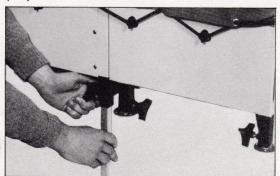


1. Unhitch trailer from car. Position on as level ground as possible. Drop down the four trailer corner jacks.




**3.** Drop the four corner kitchen support jacks to within ½ inch of ground. Release the two protex fasteners on either side of the kitchen, which will in turn release the kitchen from trailer.

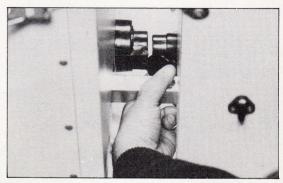

**4.** Now slide kitchen away enough to disconnect 7 pin plug.

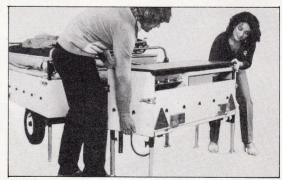

**5.** Slide the kitchen off carrying rails and away from the trailer.

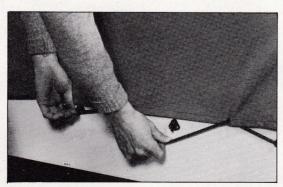

2. Remove cover by detaching elastic cord from black plastic cleats.




**6.** Swing over left hand cabin roof support frames and then same on right hand side.

# e a fast simple assembly system



7. Lift up the two hinged arms to form the 5th roof support pole.



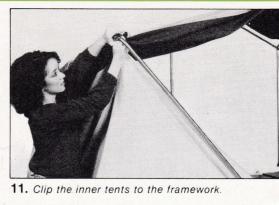


8. Extend each of the 4 cabin support poles by pushing upwards simultaneously at front and back. Locate the small button clip in the centre at the back of 5 holes in each pole. Adjust as necessary when pegging out.



12. Pull down all walls of cabin canvas.



9. Fold over each bed board and mattress to each side. Check that each bed leg is securely located

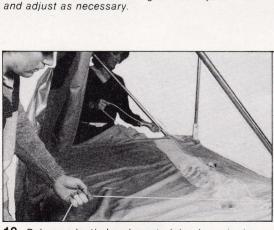

10. Release elastic bands restraining inner tents and mattresses.




# CONWAY COLT AND CO

The Colt features integral extension for plenty of living area, and 24 cu. ft. of storage space so that you can pack all your camping equipment into the trailer.

And our unique folding system means

And our unique folding system means that you can pack up with wet canvas without wetting bedding and other equipment.

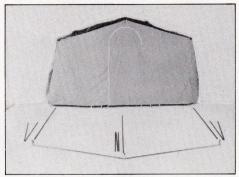


14. Layout structure of tent extension. See parts list overleaf for detailed diagram.




17. Connect "A" frame to centre roof support pole.



**18.** Connect 3 front support legs leaving bottom half broken, then add outside roof support poles.

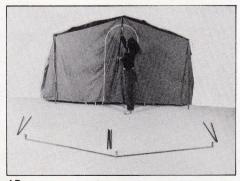


**15.** Connect three roof support poles.

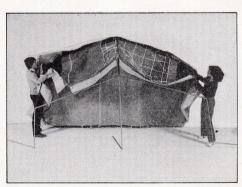


**19.** Unroll canvas and pull down over extension frame.



16. Please note centre pole has smallest hook.

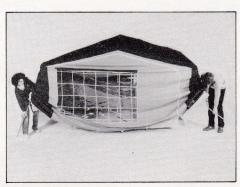


**20.** Connect the front 'Broken' legs and raise extension to full height.

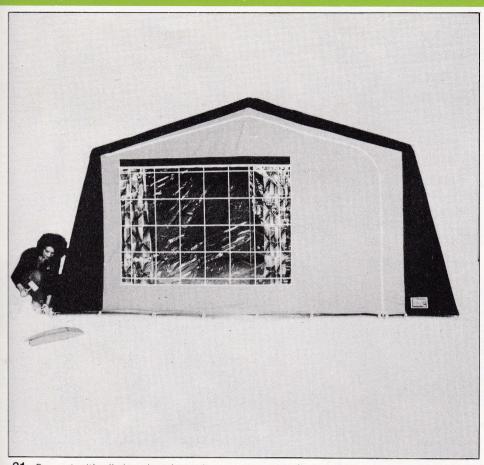

21. Peg out with all zips closed pegging out at corners first, and ensuring gusset at rear is in line with tow-bar.

# COLT, CAMPA AND CALYPSO TRAILER BODY

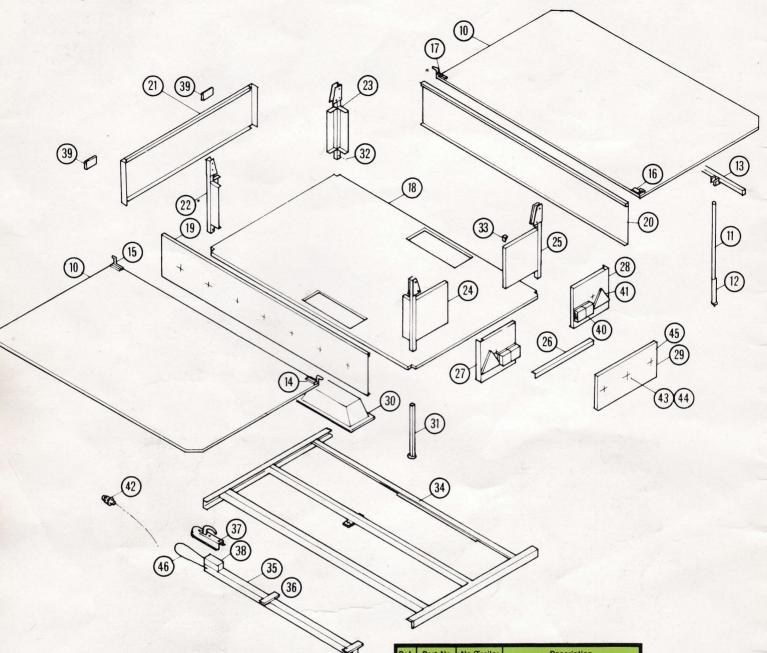


Ref.	Part No.	No./Trailer	Description	
10	83165	2	BED BOARD - LH & RH.	
11	83141	4	BED SUPPORT LEG — INNER TUBE.	
12	83142	4	BED SUPPORT LEG — OUTER TUBE.	
13	83148	2	BED STIFFENING ROD WITH HINGE BOLTS AND LOCK NUTS.	
14	83156	ONE	LH REAR BED HINGE — LONG CRANK.	
15	83157	ONE	LH FRONT BED HINGE — LONG CRANK.	
16	83158	ONE	RH REAR BED HINGE — SHORT CRANK.	
17	83159	ONE	RH FRONT BED HINGE — SHORT CRANK.	
18	83699	ONE	TRAILER BASEBOARD.	
19	83811	ONE	SIDE PANEL — LH.	
20	83811	ONE	SIDE PANEL RH.	
21	83812	ONE	FRONT PANEL.	
22	83705	ONE	CORNER PIECE — LH FRONT.	
23	83706	ONE	CORNER PIECE — RH FRONT.	
24	83707	ONE	CORNER PIECE — LH REAR.	
25	83708	ONE	CORNER PIECE — RH REAR.	
26	83718	ONE	KICKING STRIP.	
27	83719	ONE	CLADDING FOR LH REAR PANEL COMPLETE WITH LIGHTS, ETC.	

Ref.	Part No.	No./Trailer	Description	
28	83720	ONE	CLADDING FOR RH REAR PANEL COMPLETE WITH LIGHTS, ETC.	
29	83721	ONE	REAR DOOR COMPLETE.	
30	83722	2	WHEEL ARCH.	
31	83179	4	SUPPORT LEG JACK.	
32	83180	4	SUPPORT LEG JACK LOCKING SCREW.	
33	83723	2	CORNER PIECE FOR REAR PANEL.	
34	83810	ONE	CHASSIS.	
35	83800	ONE	TOWBAR (SEE MAINTENANCE MANUAL).	
36		4	TOWBAR LOCKNUT.	
37	83637	ONE	50mm COUPLING (FOR BRAKED TRAILER — SEE MAINTENANCE MANUAL).	
38	83184	2	COUPLING BOLT & LOCKNUT.	
39	83226	2	FRONT WHITE REFLECTOR.	
40	83221	2	REAR ROAD LIGHT.	
41	83223	2	REAR RED REFLECTOR.	
42	83222	ONE	SEVEN PIN PLUG.	
43	83224		COVER ANCHORAGE BUTTON  — TRIANGULAR TYPE.	
44	83228		COVER ANCHORAGE BUTTON  — CIRCULAR TYPE.	
45	83225		PROTEX FASTENER.	
46			SAFETY CABLE & U BOLT.	
190	83613		BACKREST (OPTIONAL).	

## M

#### **CABIN FRAME FOR ALL MODELS**

#### Colt, Campa and Campa De Luxe Trailer Tents

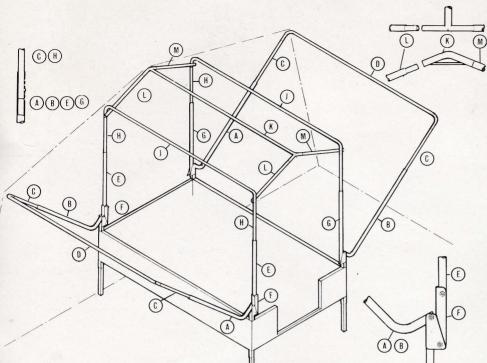


Ref.	Part No.	No./Trailer	Description
Α	83813	2	LOWER CABIN POLE. LH REAR & RH FRONT.
В	83814	2	LOWER CABIN POLE. LH FRONT & RH REAR.
C	83815	4	UPPER CABIN POLE. LH & RH.
D	83816	2	CABIN ROOF POLE. LH & RH.
E	83817	2	LOWER CENTRAL CABIN POLE. LH REAR & LH FRONT.
F	83346	2	HINGE FRAME BRACKET.
G	83818	2	LOWER CENTRAL CABIN POLE, RH REAR & RH FRONT.
H	83819	4	UPPER CENTRAL CABIN POLE, LH & RH REAR & FRONT.
J	83820	2	CENTRAL CABIN ROOF POLE LH & RH.
K	83821	ONE	CABIN RIDGE POLE.
L	83822	2	RIDGE POLE TIE PIECE WITH BUTTON CLIP — LH.
M	83823	2	RIDGE POLE TIE PIECE WITHOUT BUTTON CLIP — RH.

#### Corniche Trailer Tents

Ref.	Part No.	No./Trailer	Description
Α	83335	2	LOWER CABIN POLE. LH REAR & RH FRONT.
В	83336	2	LOWER CABIN POLE, LH FRONT & RH REAR.
С	83337	4	UPPER CABIN POLE. LH & RH.
D	83338	2	CABIN ROOF POLE. LH & RH.
Ε	83339	2	LOWER CENTRAL CABIN POLE. LH REAR & LH FRONT.
F	83346	2	HINGE FRAME BRACKET.
G	83340	2	LOWER CENTRAL CABIN POLE. RH REAR & RH FRONT.
Н	83341	4	UPPER CENTRAL CABIN POLE. LH & RH REAR & FRONT.
J	83342	2	CENTRAL CABIN ROOF POLE. LH & RH.
K	83343	ONE	CABIN RIDGE POLE.
L	83344	2	RIDGE POLE TIE PIECE WITH BUTTON CLIP — LH.
М	83345	2	RIDGE POLE TIE PIECE WITHOUT BUTTON CLIP — RH.


#### **CORNICHE EXTENSION FRAME**

List of parts for extension and sun canopy frames

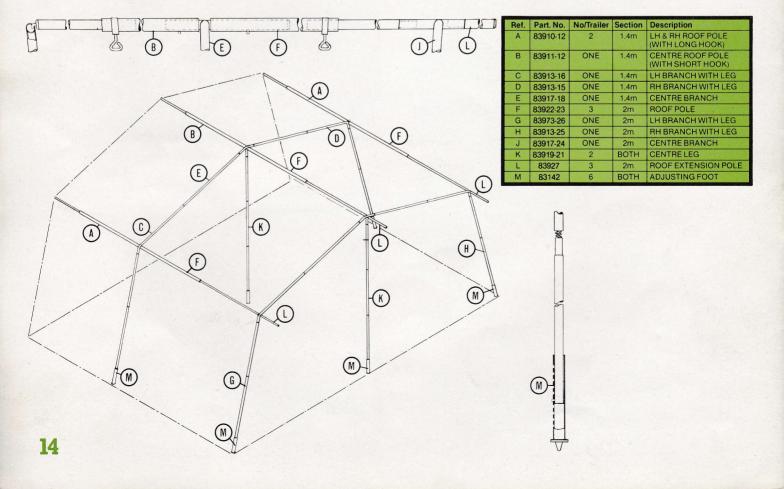

### CAMPA, CAMPA DE LUXE EXTENSION FRAME

List of parts for canopy and extension frames

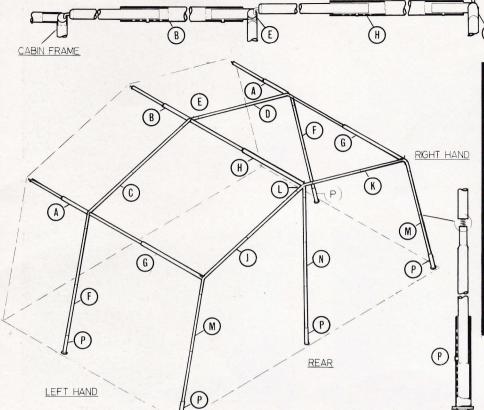

Ref.	Part No.	No./Trailer	Section	Description
A	83871-73	2	CANOPY	LH & RH ROOF POLE (WITH LONG HOOK).
В	83872-73	ONE	CANOPY	CENTRE ROOF POLE (WITH SHORT HOOK).
С	83876-78	ONE	CANOPY	LH BRANCH WITH STRAIGHT POLE.
D	83877-78	ONE	CANOPY	RH BRANCH WITH STRAIGHT POLE.
E	83879	ONE	CANOPY	CENTRE BRANCH.
F	83874-75	2	CANOPY	LH & RH SUPPORT LEG.
G	83880-82	2	EXTENSION	LH & RH ROOF POLE (WITH SHORT HOOK).
H	83881-82	ONE	EXTENSION	CENTRE ROOF POLE (WITH SHORT HOOK).
J	83883-85	ONE	EXTENSION	LH BRANCH WITH STRAIGHT POLE.
K	83884-85	ONE	EXTENSION	RH BRANCH WITH STRAIGHT POLE.
L	83886	ONE	EXTENSION	CENTRE BRANCH.
M	83874-75	2	EXTENSION	LH & RH SUPPORT LEG.
N	83887-89	ONE	EXTENSION	CENTRE SUPPORT LEG.
P	83142	5	CAN/EXT.	ADJUSTING FOOT.

#### **COLT EXTENSION FRAME**

