


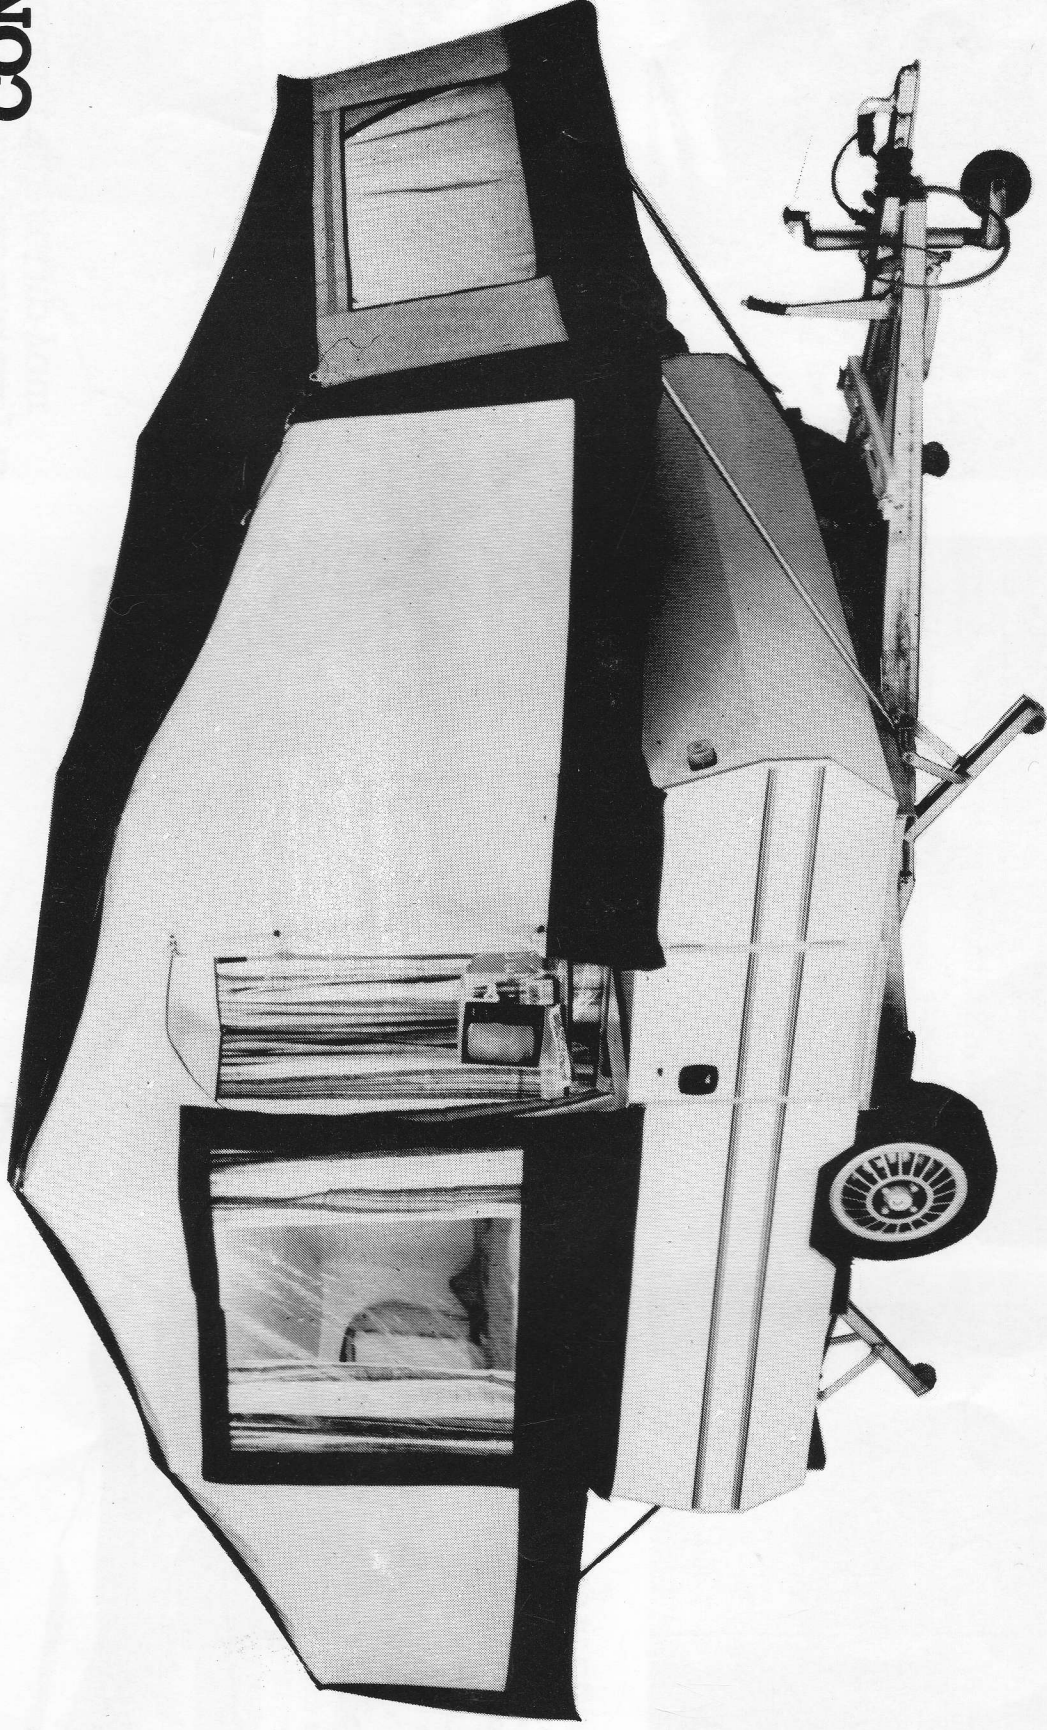

CRUISER


Step-by-Step Instruction Leaflet

CRUISER Trailer

Please use these simple and easy-to-follow instructions to set up your Cruiser Trailer

1 Remove trailer from car, apply handbrake fully and then level using the jockey wheel.

2 Remove cover and lower 4 wind down corner steadies.

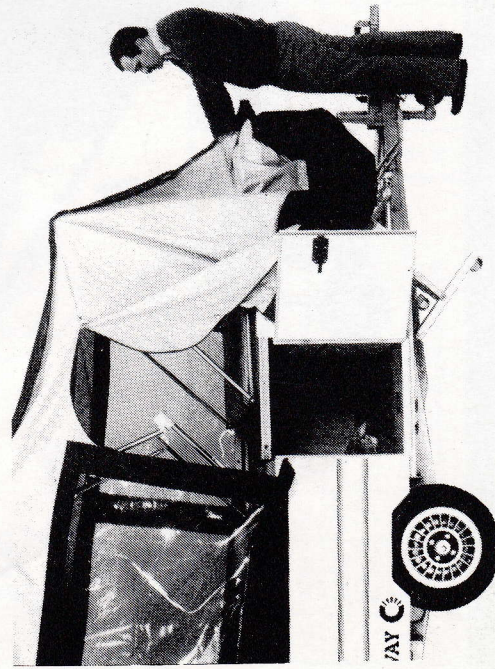

Repeat for the front bed board.


8




3 Pull down the folded sides of the tent canvas and loosen canvas tucked into the ends.

4


Open both the canvas and trailer doors and fold back.

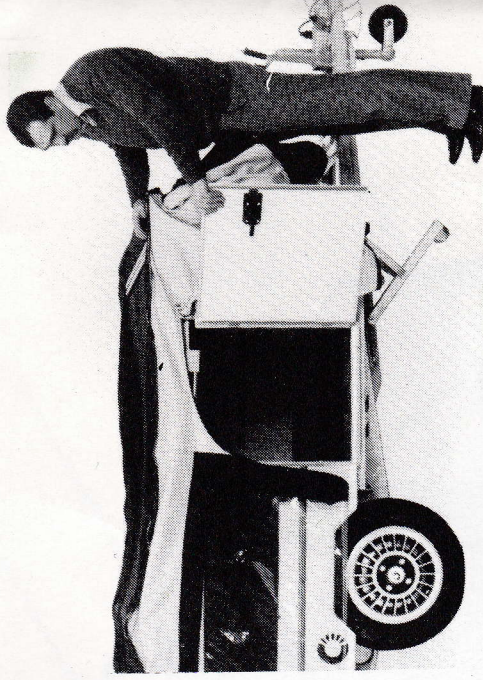


9 Fasten the elasticated shock cord along the side of the canvas to the buttons located underneath the bed boards.

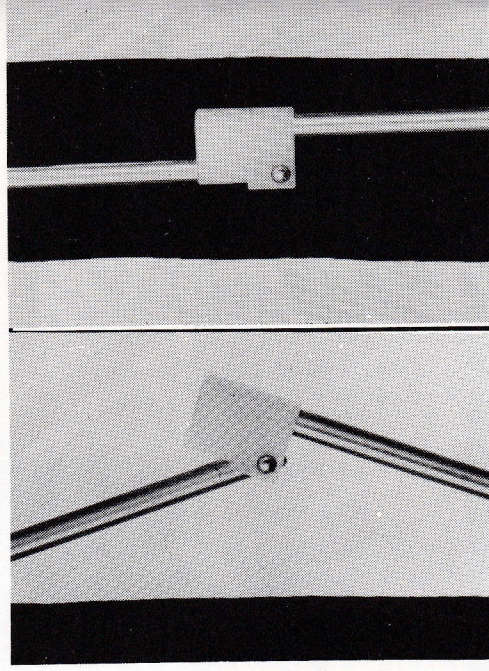


10 Step inside the trailer and straighten the CONNAUMATIC® bracket to the vertical position.

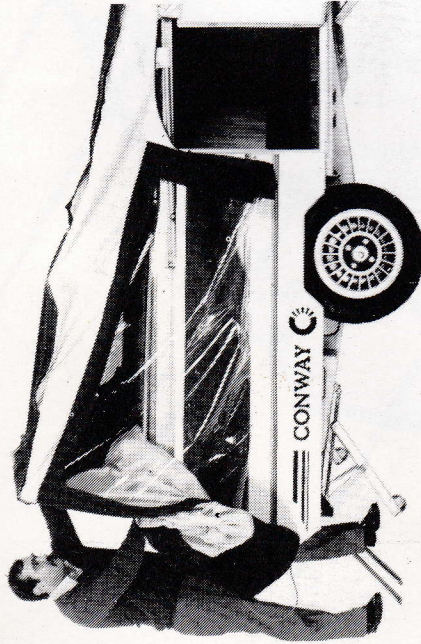


5 Standing at the back of the trailer, lift the top cross frame members and work up and down 3 or 4 times. This allows air in underneath the canvas enabling smoother working of the CONNAUMATIC® system.

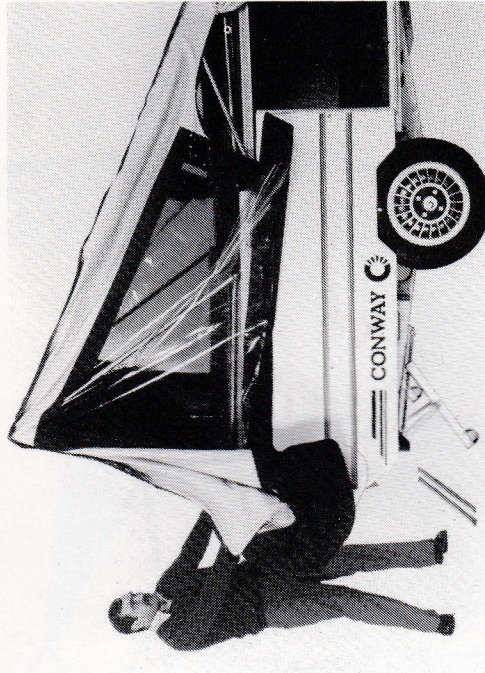


6 Whilst still holding the cross frame member, slide out the bed by pulling on the handle provided. As the bed slides out the frame and canvas will automatically lift into position.

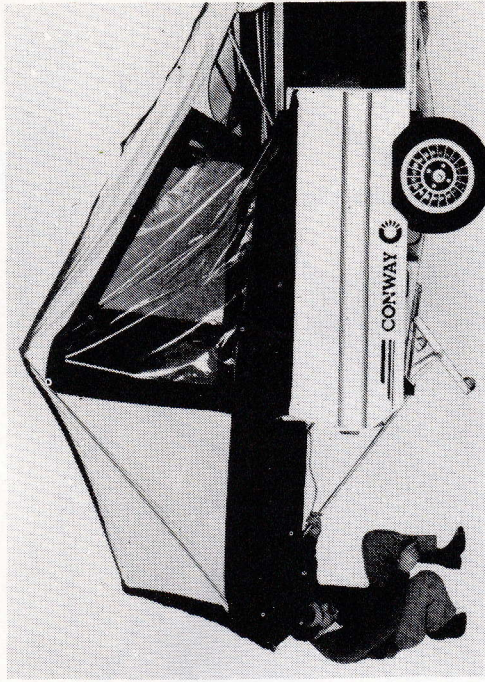

7 Pull the bed out fully until it hits the end stops and fit the two legs.

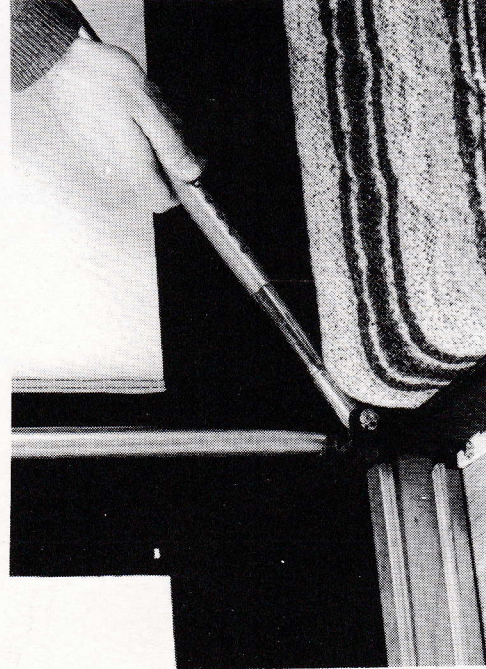

11 Close the zip door and extend the side frame brackets in each corner.

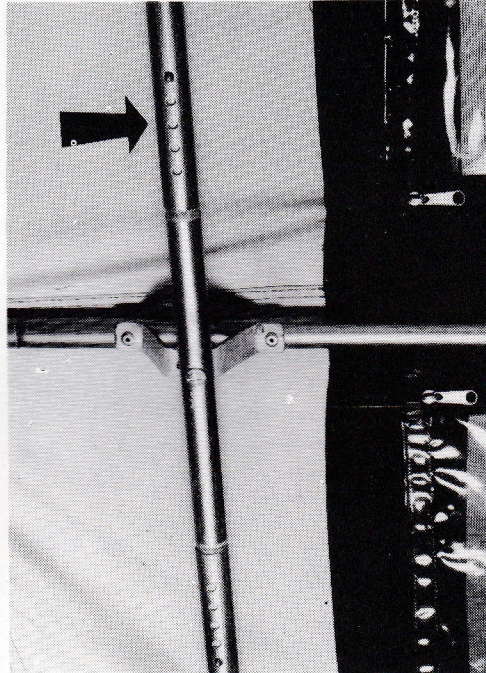


12 Adjust the horizontal cross-members as necessary. *N.B. Before lowering the canvas the button clip should be in the central position as shown.*



13 Lift over hinged kitchen unit.

Fit inner tents, curtains and roof linings. *N.B. Once fitted, the inner tents can remain but must be unclipped. Linings and curtains should be removed before collapsing the framework.*

14

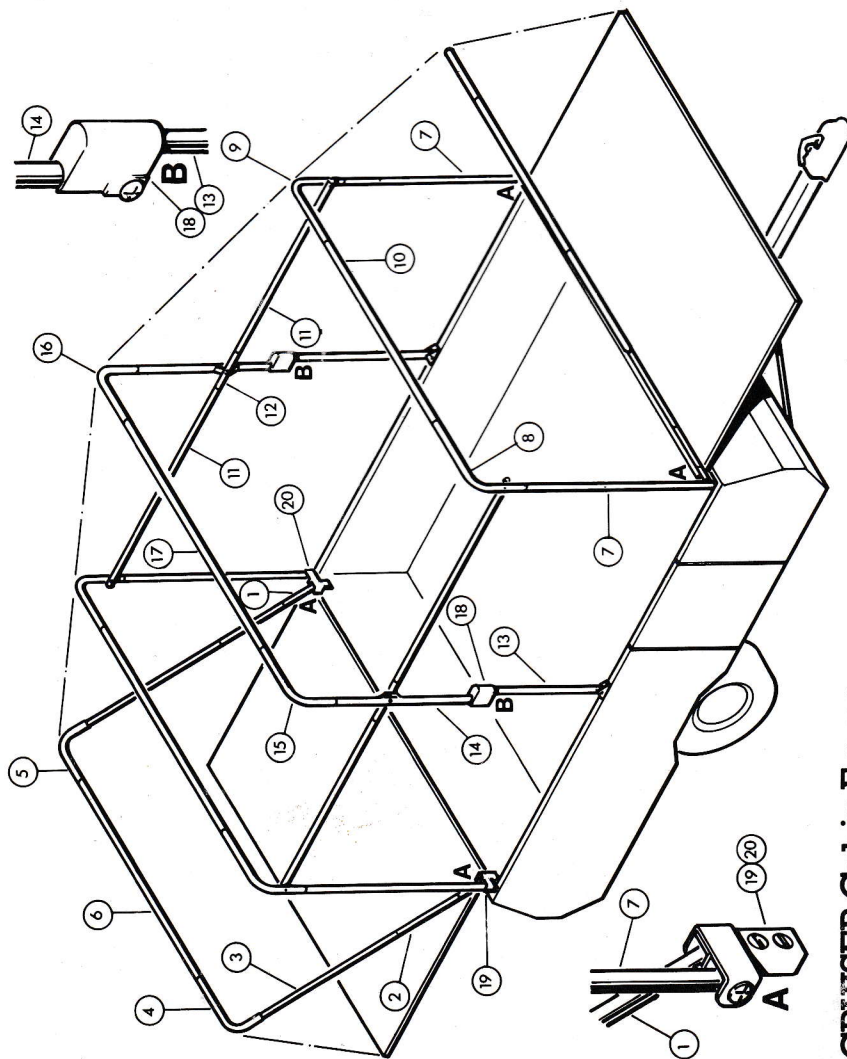


CRUISER Cabin Frame

Ref. No.	Part No.	Qty	Description	Ref. No.	Part No.	Qty	Description
1	84101	4	Outer Bed Frame Bottom Upright	11	84111	4	Horizontal Ties Outer Pole
2	84102	4	Outer Bed Frame Middle Upright	12	84112	2	Horizontal Ties Central Pole
3	84103	4	Outer Bed Frame Upper Upright	13	84113	2	Central Ridge Frame Lower Upright
4	84104	2	Outer Bed Frame Corner Pole R.H.	14	84114	2	Central Ridge Frames Upper Upright
5	84105	2	Outer Bed Frame Corner Pole L.H.	15	84115	1	Central Ridge Frame Corner Piece R.H.
6	84106	2	Outer Bed Frame Roof Pole	16	84116	1	Central Ridge Frame Corner Piece L.H.
7	84107	4	Inner Bed Frame Upright	17	84117	1	Central Ridge Frame Roof Pole
8	84108	2	Inner Bed Frame Corner Pole R.H.	18	84118	2	Central Ridge Frame "Connaumatic" Brackets
9	84109	2	Inner Bed Frame Corner Pole L.H.	19	84119	2	Bed End Brackets R.H.
10	84110	2	Inner Bed Frame Roof Pole	20	84120	2	Bed End Brackets L.H.

Due to a process of ever-continuing product improvement, some details contained in this brochure may change. However, the information is correct at the time of going to press.



Conway Leisure Products Ltd,
Skull House Lane, Appley Bridge,
Wigan WN6 9DW.

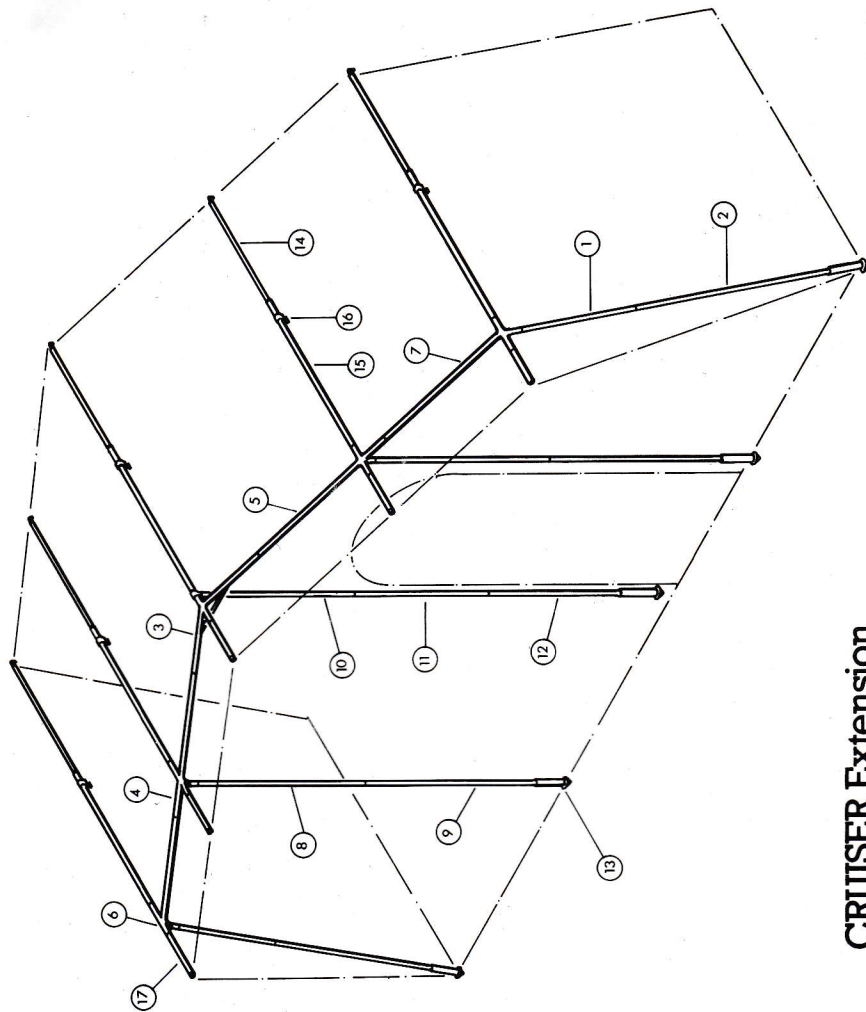

CRUISER Extension

Ref. No.	Part No.	Qty	Description	Ref. No.	Part No.	Qty	Description
1	84121	2	Main Frame Outer Leg - Upper	10	84130	1	Central Leg Upper Pole
2	84122	2	Main Frame Outer Leg - Lower	11	84131	1	Central Leg Middle Pole
3	84123	1	Main Frame Central Roof Pole	12	84132	1	Central Leg Lower Pole
4	84124	1	Main Frame Inner Roof Pole L.H.	13	84133	5	Adjustable Feet
5	84125	1	Main Frame Inner Roof Pole R.H.	14	84134	5	Roof Poles Inner
6	84126	1	Main Frame Outer Roof Pole L.H.	15	84135	5	Roof Poles Outer
7	84127	1	Main Frame Outer Roof Pole R.H.	16	84136	5	Adjuster Screws
8	84128	2	Inner Leg Upper Poles	17	84137	5	Canopy Poles
9	84129	2	Inner Leg Lower Poles				


POINTS TO NOTICE

1 Ensure that all cabin frame sections are in their lowest position and that the CONNAUMATIC® bracket is in the 'OPEN' position before closing the trailer.


2 Always site the trailer on as level ground as possible. Where necessary use the jockey wheel to level the trailer. The four corner steadies should **NOT** be used to level the trailer.

3 Both the canvas and the trailer doors should be OPEN when erecting, and CLOSED when folding the trailer.


4 Remove roof lining and curtains before closing the trailer.

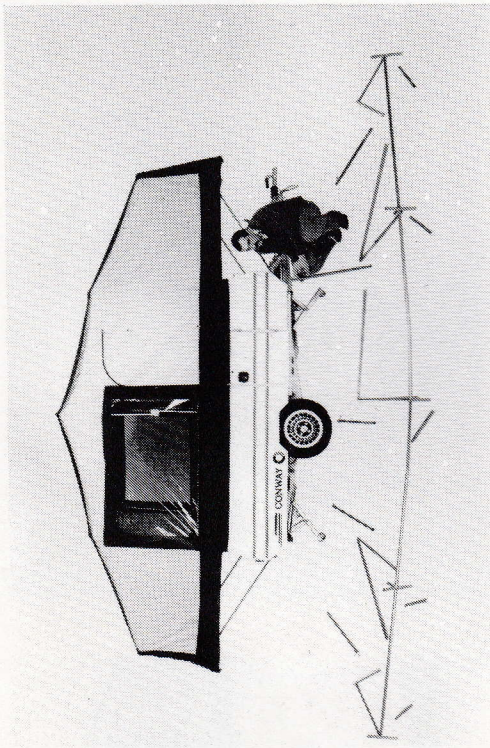


1 Remove the extension frame from the bag, connect all sprung sections and lay the frame out, as shown.

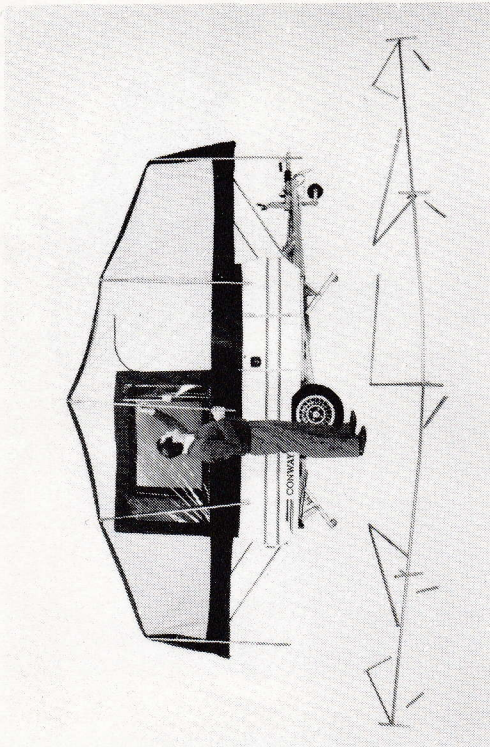


2 Hook the 5 roof poles into the main trailer frame through gussets in canvas.

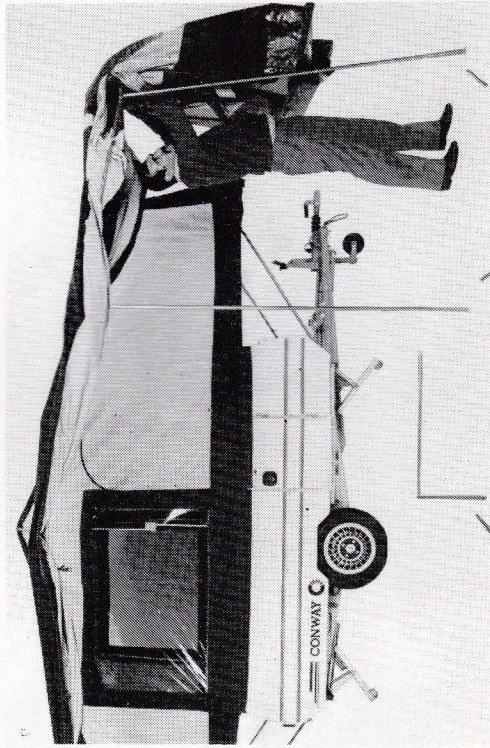

6 Lift the canvas onto the front of the frame.

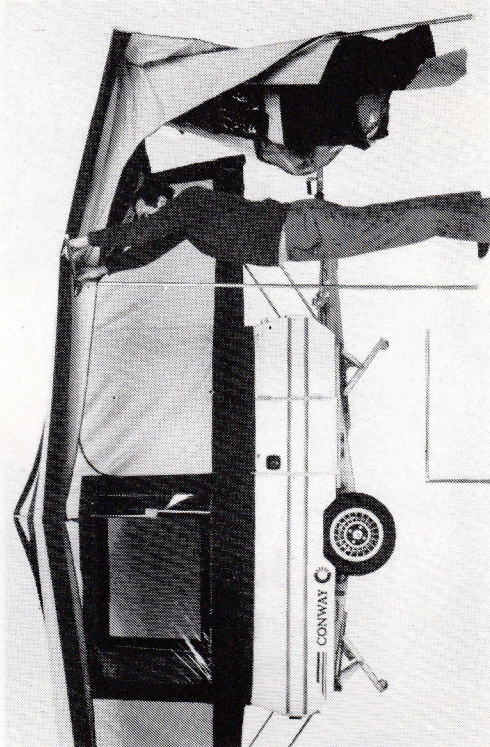


7 Locate the canvas over the front extension brackets and fit the 5 short canopy poles.

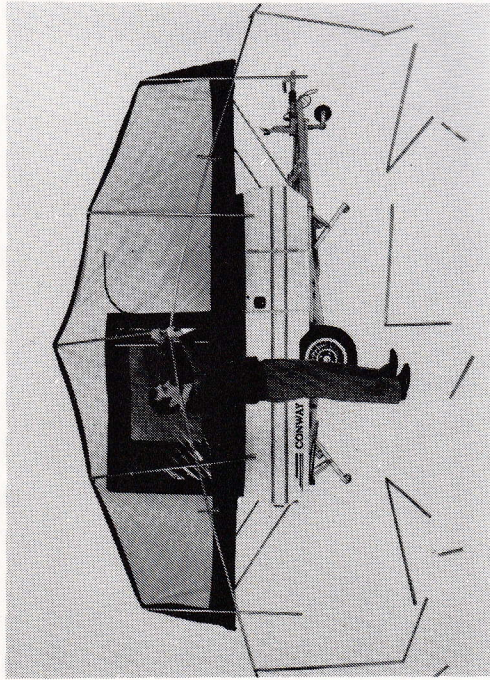


Connect 5 roof poles to front awning frame.

3

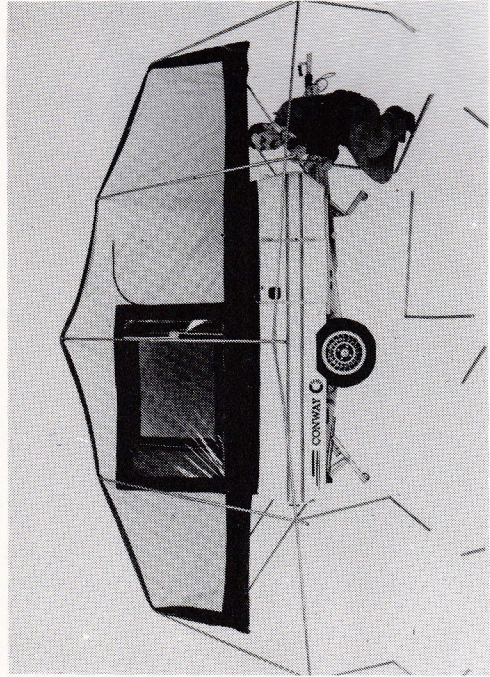

Add two inner legs but leave off centre leg.

4

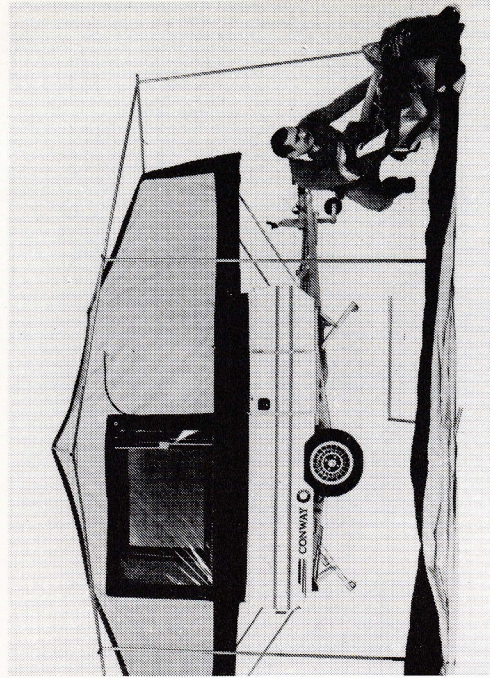

Raise the frame to its full height.
Remove the canvas from the bag and layout in front of the frame.


We suggest that for ease of handling you remove the zip-out front panel.

5




Pull the roof canvas back towards the main trailer.
Remove and relocate two side roof poles through gusset in back corner of extension canvas.

8

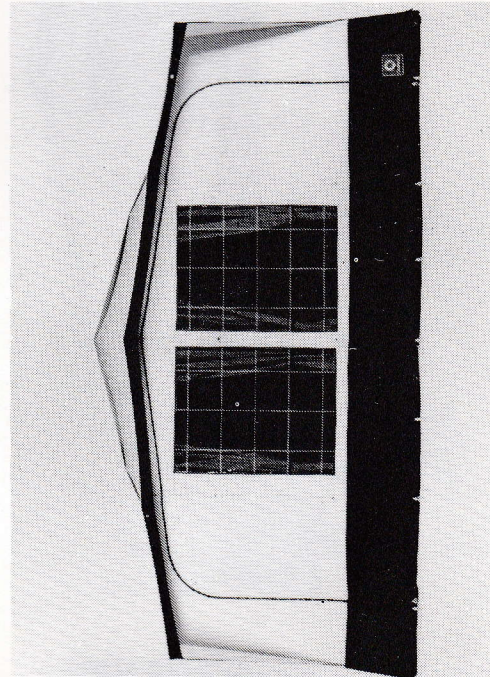

Zip the extension to the main tent, add the centre leg and front panel and after correctly tensioning the canvas, peg-out.

9

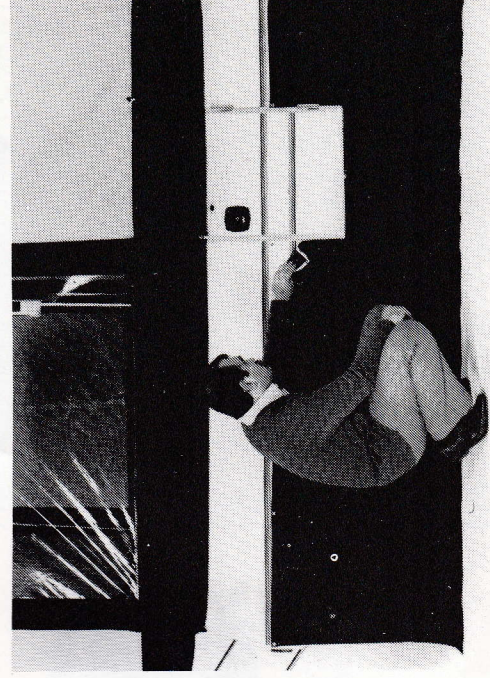

Fit the draught excluder. *N.B. The awning is delivered with the press studs required for the trailer body. These should be fitted in the correct position by punching a small hole in the trailer body and screwing the press stud through the skin.*

10