


ERECTING INSTRUCTIONS

CRUISER ERECTING INSTRUCTIONS

The following instructions are intended as a step-by-step guide to help you erect your Conway Unit. Please read your Owners Manual thoroughly where you will find other helpful information within the section on Pitching.


- Main Cabin 1-12
- Awning Extension 14-22
- Sun Canopy 1-6

Important: Attempting to fit/remove the bed support legs in the extended position will result in bent bed sliders causing difficulty in opening/closing the beds. Ensuring that the bedboards are held in the fully extended position will help you fit the bed support legs correctly. The 4 bed stop pins provided fit into holes in the top of the aluminium bed tracks to prevent the beds sliding inwards.

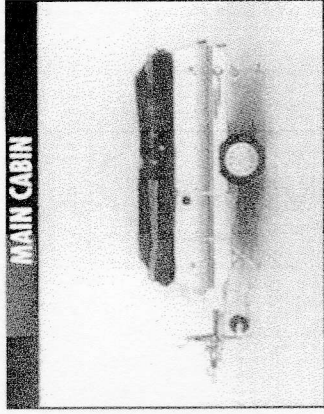


MAIN CABIN


1. Remove trailer from car, fully apply handbrake to vertical position and level trailer using jockey wheel. Remove waterproof cover and wind down 4 corner steadies.

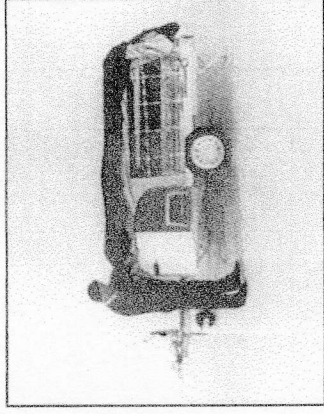


3. Open both canvas and trailer doors and fold back (See special notes)

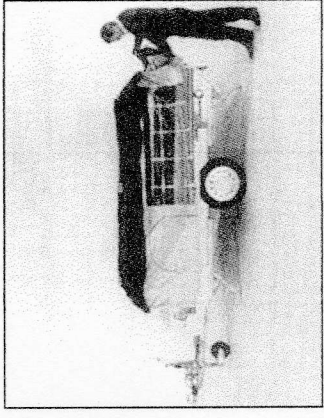


2. Pull down folded sides of canvas and loosen canvas tucked into ends.

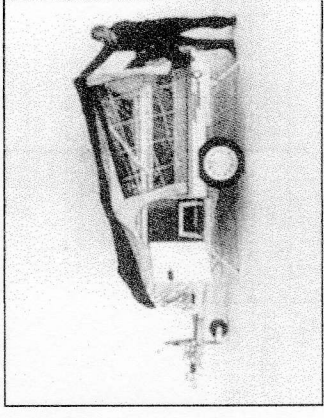


4. Starting at the back of the trailer, lift up the top cross frame and work up and down a few times. This allows air to get under the canvas enabling smooth slide out of the bed frames.

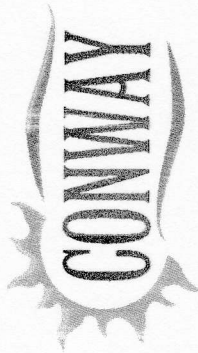


CRUISER ERECTING INSTRUCTIONS CONTINUED

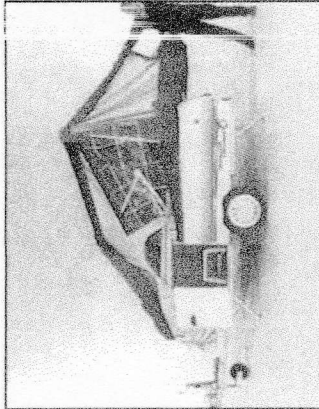

5. Still holding up the cross frame, pull steadily on the bed handle, slide bed out fully until it hits the end stops, the frame will automatically raise the cabin canvas, have someone hold this bed out or fit one of the bed stop pins via the window side zip to prevent the bed sliding in as you proceed. The bed stop pins fit into holes in the top of the aluminium bed slide track.

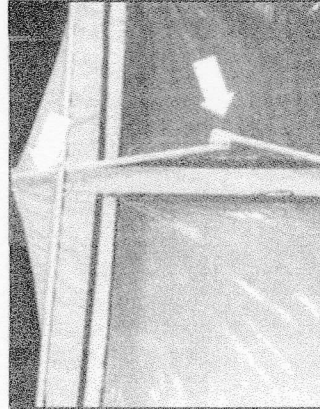


8. Step inside trailer making sure the centre roof ridge pole is central on double roof canvas strips then straighten ridge frame upright by closing the bracket.

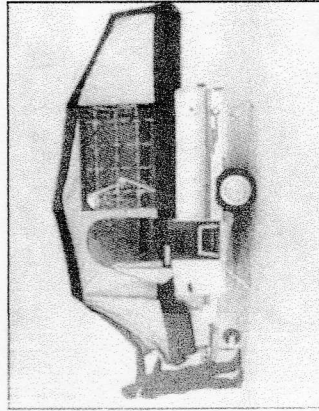

6. Repeat the operation for the front bed. Fitting a second bed stop pin via the open door. ENSURE that both beds are in the fully extended position before attempting to fit the bed support legs.




9. Extend bed end frames at each end and adjust with button clips as necessary to tension body canvas.
NOTE: 1st button for retention when in transit. 2nd button for adjustment when erecting. ENSURE the remaining 2/4 bed pins are now fitted to prevent the beds sliding in.

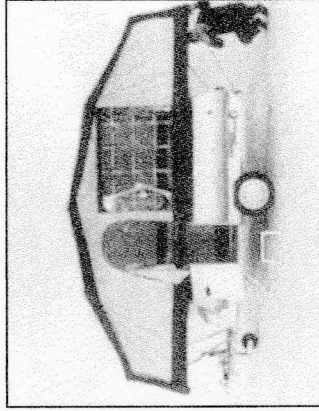

7. ENSURE that the bed support legs are in the fully retracted position. Fit to chassis first and then to brackets on underside of bedboard, giving support to bedboard without forcing upwards. Extend the bed support legs out to button clip only when both legs are fitted. Secure the bed end canvas by fitting shock cord to cleats under bedboard.



CRUISER ERECTING INSTRUCTIONS CONTINUED

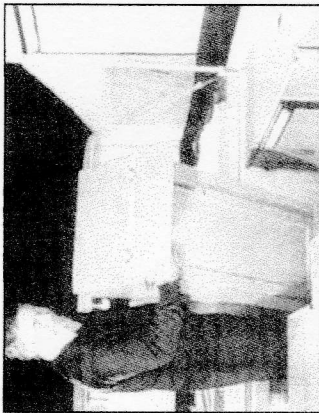

10. ENSURE remaining bed stop pins are fitted before lifting wardrobe into position.



12. Now lift the kitchen unit at the right hand side and secure at the correct height by seating on top of the hinged flap. Unclip the waste hose beneath the sink and locate in the opening in the base unit. Hook shelf brackets on roof pole to site the unit to the left of the kitchen. Fit 'Expandaluxe' curtain wires through top of curtains and clip to ends of horizontal tie bar on cabin frame. Intermediate plastic hooks will help support curtains. Arrange dinette cushions, clip up inner tents and roof liner.
Reverse procedure to close trailer.



11. Lift over the kitchen unit, ensure the round peg at the base of the hinged flap fits into the corresponding hole in the base of the unit.

Special Note:

Ensure that all cabin frame sections are in their lowest position and that the upright brackets are in the 'OPEN' position before closing the trailer.

Always site the trailer on as level ground as possible. Where necessary use the jockey wheel to level the trailer. The four corner steadies should NOT be used to level the trailer.

Both the canvas and the trailer doors should be OPEN when erecting, and CLOSED when folding the trailer. Remove the roof lining and curtains before closing the trailer.

Unclip inner tents and fold neatly on mattresses.


Also: gas tap located on right bulkhead of lower cupboard unit must be in open position i.e. in line with direction of gas pipe before using the cooker. Close tap for transit/storage.




Freedom for Life

CRUISER AWNING INSTRUCTIONS


ERECTING THE AWNING

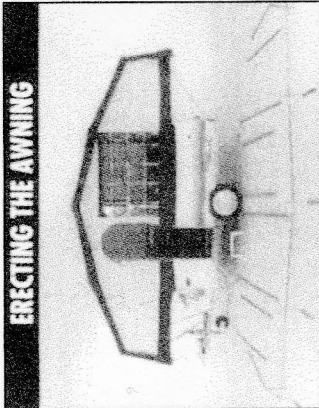


13. Remove awning frame from bag and lay out flat as shown.

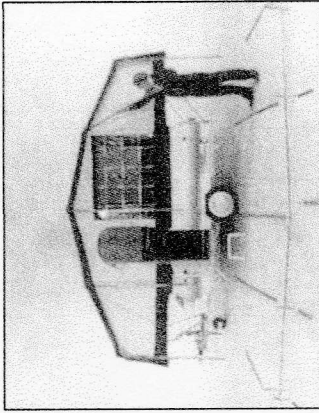


14. Hook five roof poles into holes in trailer frame through gussets in the canvas.

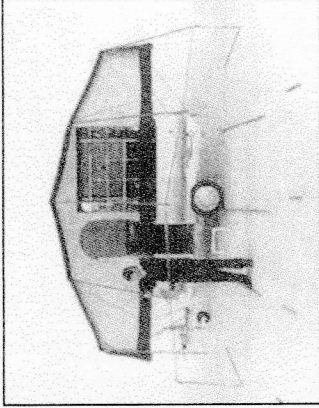

15. Lift front awning frame and connect the five roof poles with front legs 'broken'.

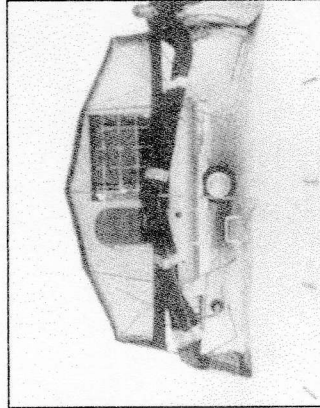

16. Fit two inner legs and centre leg to front frame. Take canvas from bag and lay out over roof poles.
Note: Fit roof canvas only. Add sides and front panels when frame is lifted to full height.

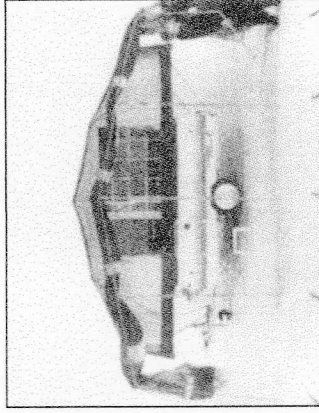


17. Raise frame to full height.




CRUISER AWNING INSTRUCTIONS CONTINUED


Freedom for Life

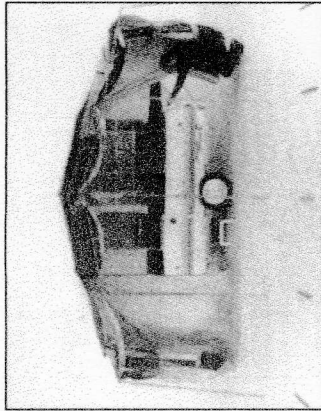

18. Zip awning canvas to main body canvas and underside of beds.

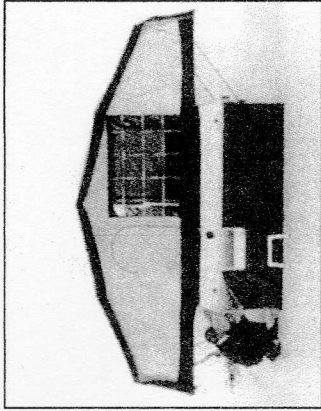

19. Fit the draught skirt by sliding the skirt beading through the aluminium channel fitted at bottom of side panel. When fitted, wheel arch flap press studs will dictate where the 3 press studs with self tapping screws (supplied in peg bag) are to be fitted.

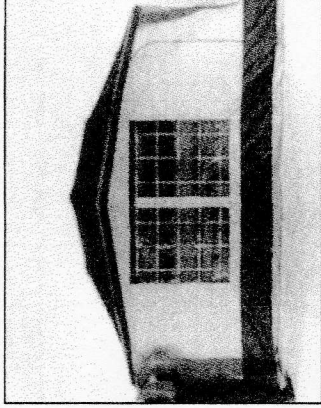


20. Pull awning canvas over front frame, fit stub canopy poles and then tension awning frame. Ensure zip cover is in place and peg out awning.




Freedom for Life


CRUISER DUAL SUN CANOPY INSTRUCTIONS

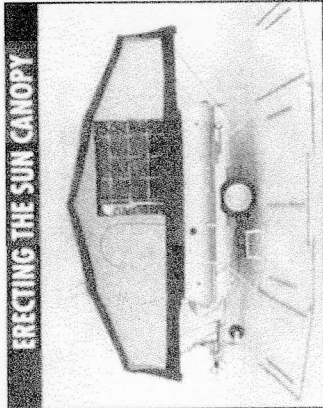


1. Take sun canopy frame from bag and lay out as shown.
A - Attaching to the cabin

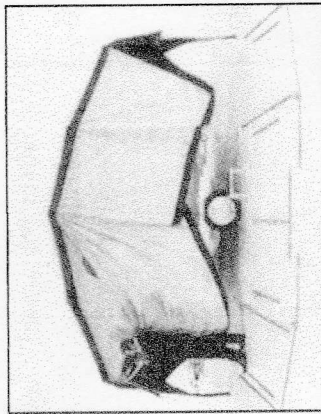


2. Zip sun canopy canvas to main body canvas ensuring zip cover is over zip.

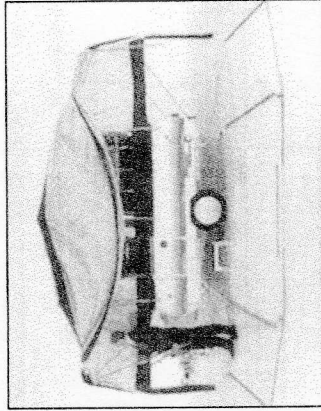


3. Lift canopy canvas and hook into main cabin frame the five roof support poles.

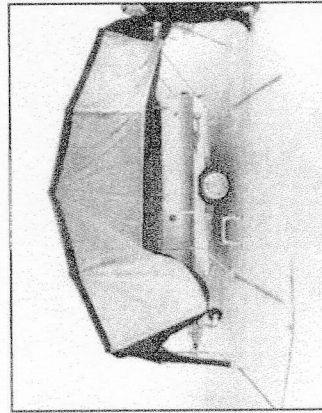

4. Connect straight front centre pole to right hand side leg assembly and feed through canvas sleeve.

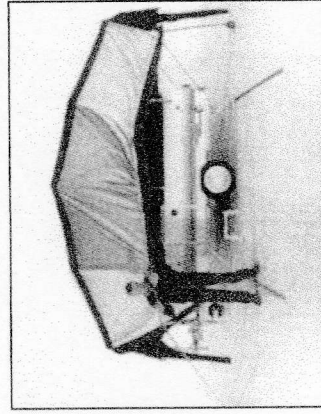

5. Connect left hand leg to centre pole. Ensure eyelets are located over corner spikes.

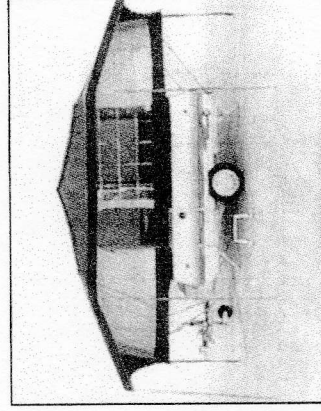

6. Connect five roof poles to the front frame, fit the two other front legs and raise to full height. Tension roof poles and guy out. B - Attaching sun canopy to the awning front entails a similar erection sequence as described. The canvas must first be tied onto the awning front frame by pulling the tape through the stub canopy holes. Selecting the roof poles with C clips, pass through stub canopy holes and clip on to the awning front framework.




CRUISER CABIN, SUN CANOPY & AWNING FRAME PARTS

Freedom for Life

REF NO.	QTY	DESCRIPTION
1	4	BED FRAME UPRIGHT
2	2	NEAR SIDE REAR, OFF SIDE FRONT, BED FRAME MTG BKT
3	2	OFF SIDE REAR, NEAR SIDE FRONT, BED FRAME MTG BKT
4	2	MOUNTING BRACKET
5	2	FRAME UPRIGHT CROSS BRACKET
6	2	CONNAUTMATIC POLE GRIP
7	4	RIVET 1661 - 0613 (AK 303)
8	2	NUT NYLOC M6
9	2	BOLT ROOFING M6 X 40
10	4	SCREW PANHD N08 X 2"
11	6	WASHER 5/16"
12	8	STAR LOCKED FASTENER M6
13	16	STAR LOCKED FASTENER M8
14	4	PIN 57 X 6MM
15	2	PIN 33 X 8MM
16	2	PIN 45 X 10MM
17	4	PIN 70 X 8MM
18	4	OUTER BED FRAME UPRIGHT
19	4	INNER BED FRAME UPRIGHT
20	4	HORIZONTAL OUTER TIE POLE
21	2	HORIZONTAL CENTRE TIE POLE
22	2	RIDGE FRAME UPRIGHT POLE
23	2	LOWER UPRIGHT POLE
24	5	CENTRE POLE
25	2	OUTER NEAR SIDE CORNER POLE
26	2	OUTER OFF SIDE CORNER POLE
27	2	INNER NEAR SIDE CORNER POLE
28	2	INNER OFF SIDE CORNER POLE
29	1	CENTRE NEAR SIDE CORNER POLE
30	1	CENTRE OFF SIDE CORNER POLE


NOTE: Due to model differences it is vital to quote the Model Type and both Model No. and Serial No. visible on the Trailer Chassis Plate fitted to the nearside front cover, when ordering Cabin, Sun Canopy or Extension Frame Parts.

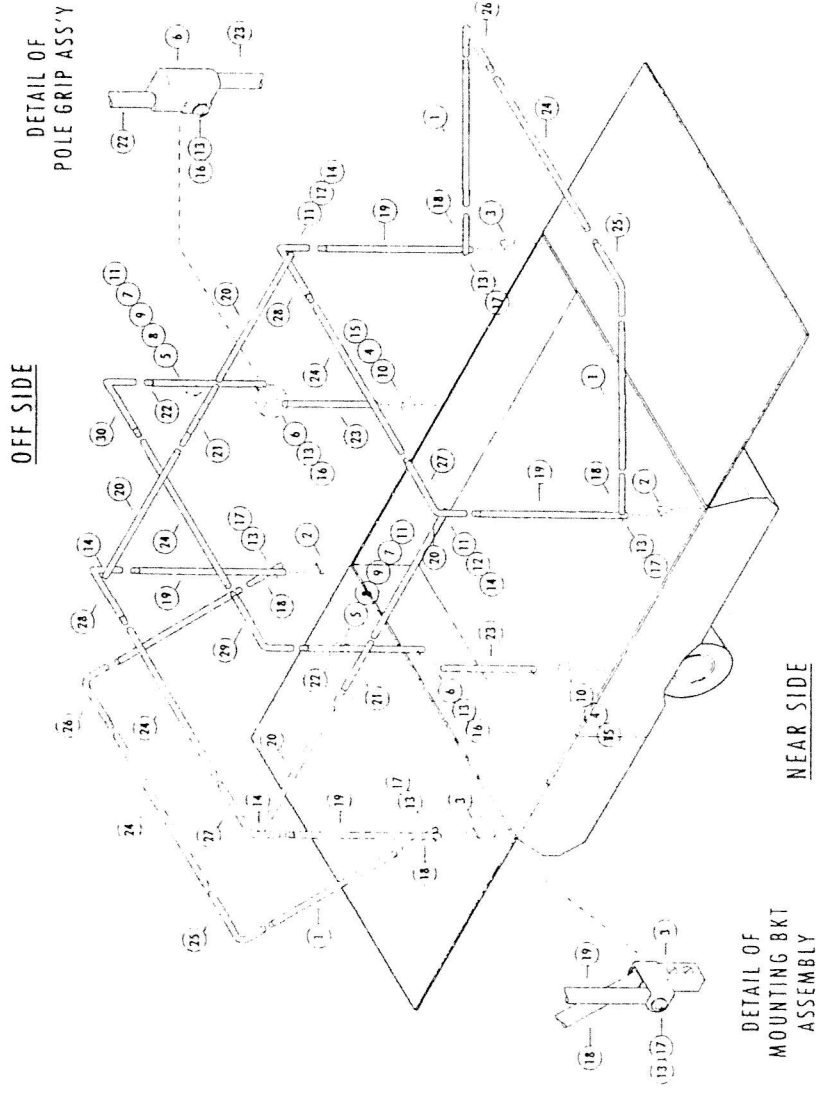



CRUISER DUAL SUN CANOPY FRAME PARTS

NOTE: Poles (No 13) are 'Hook' poles for fitting to cabin. Poles (No 14) are 'Clip-On' poles for fitting to front of awning.

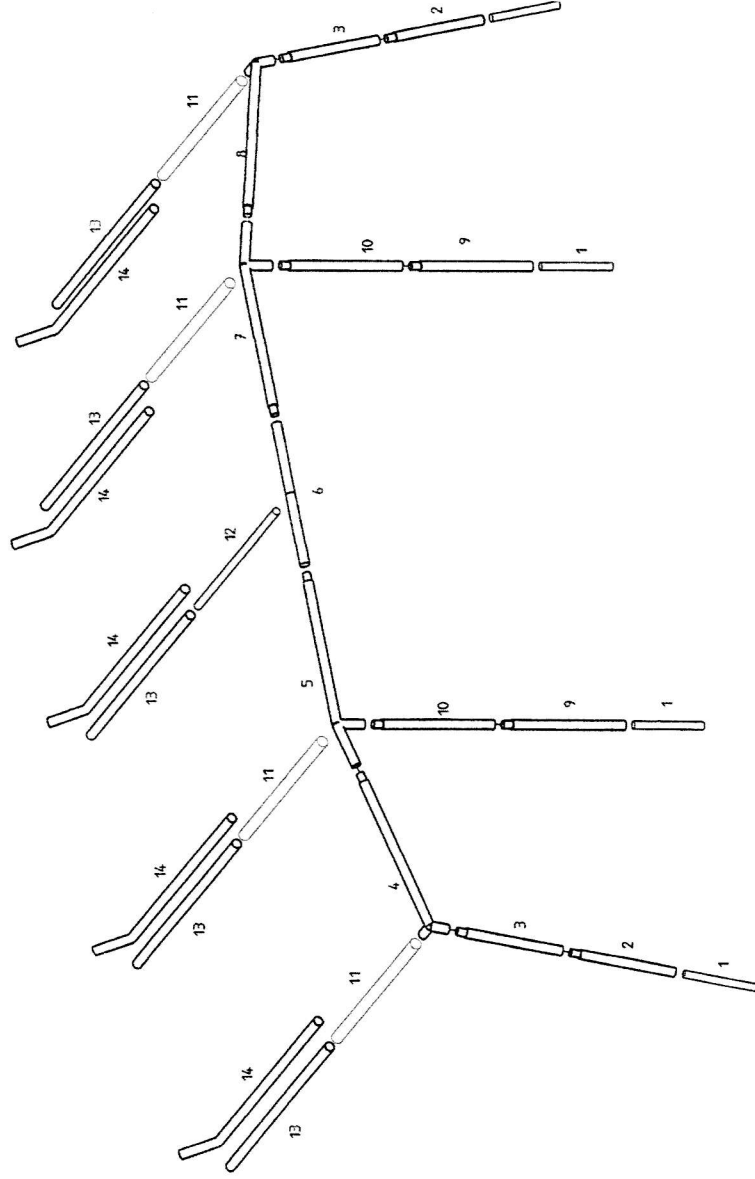



CRUISER-AWNING FRAME PARTS

Freedom for Life

