

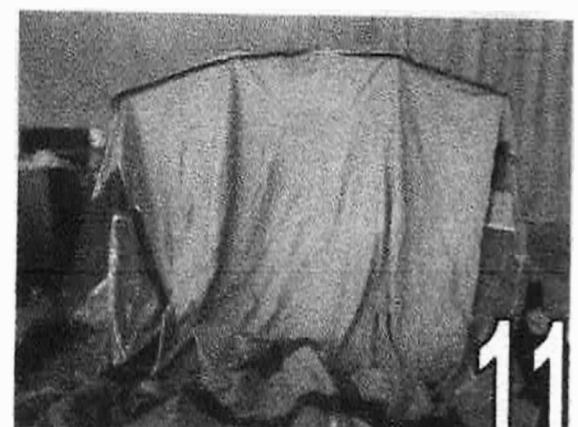
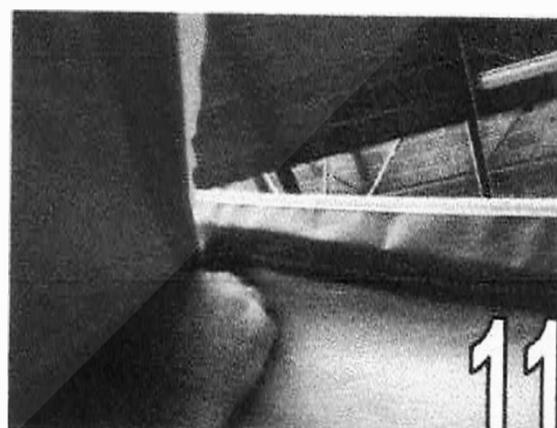
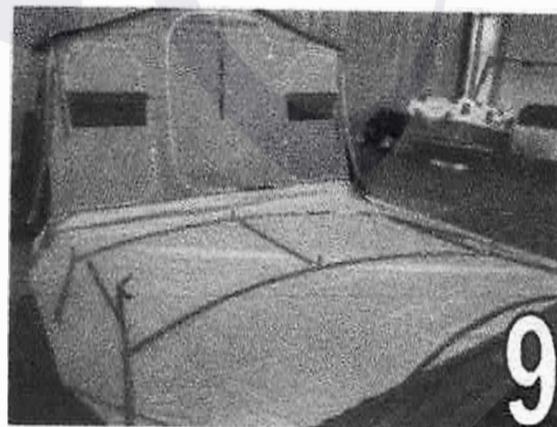
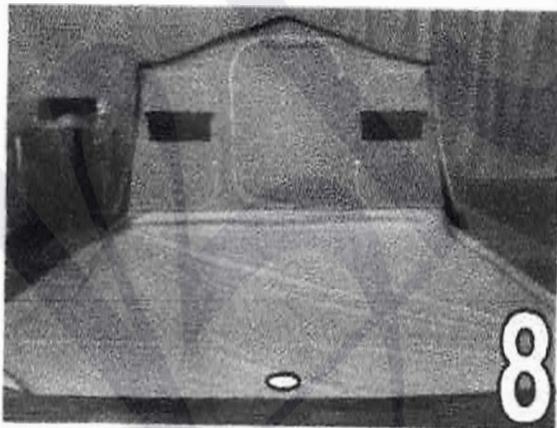
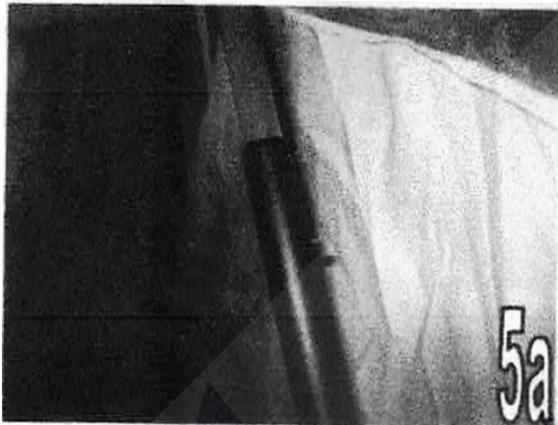
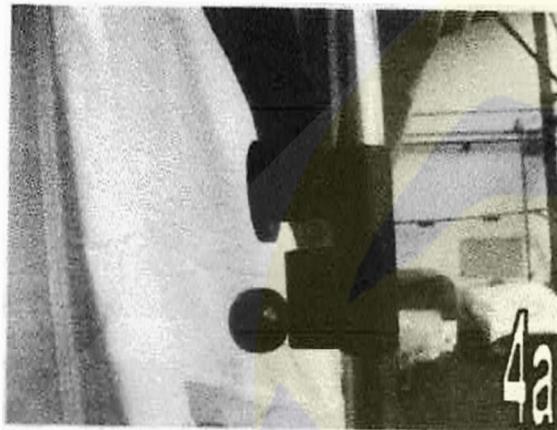
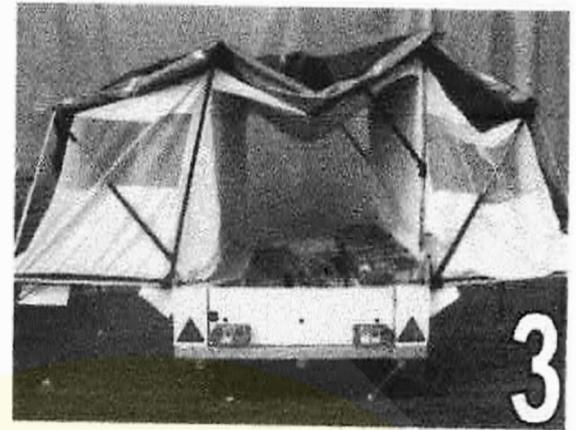











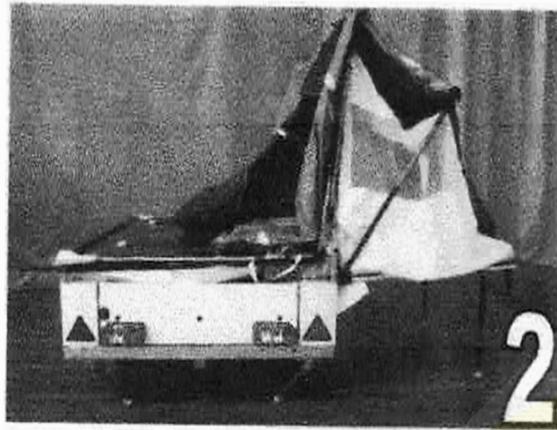


# Raclet Armada

**Assembly guidelines**


**May 2011 Version 1.1**

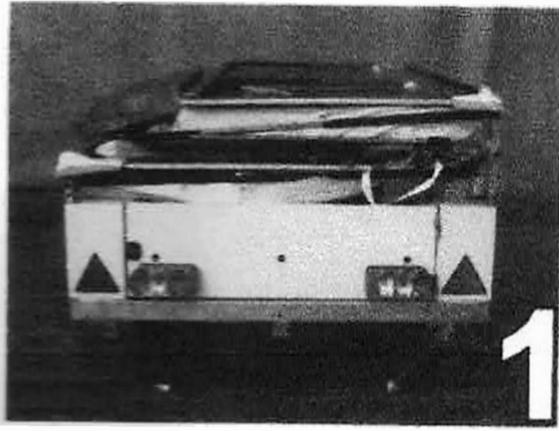

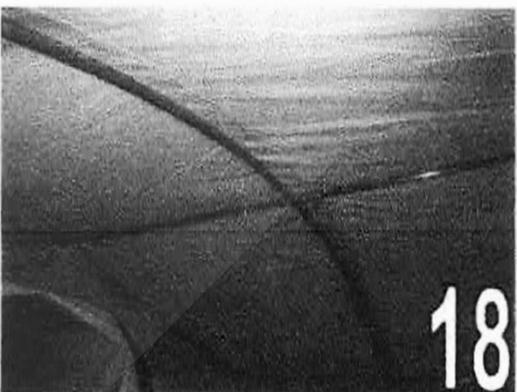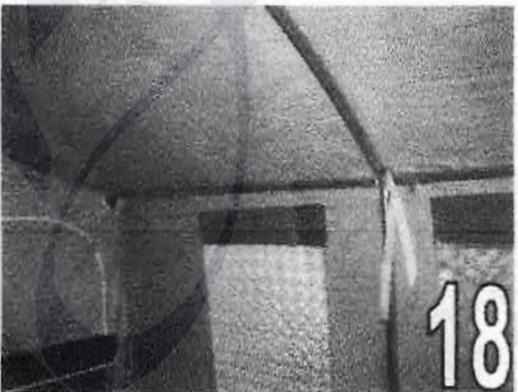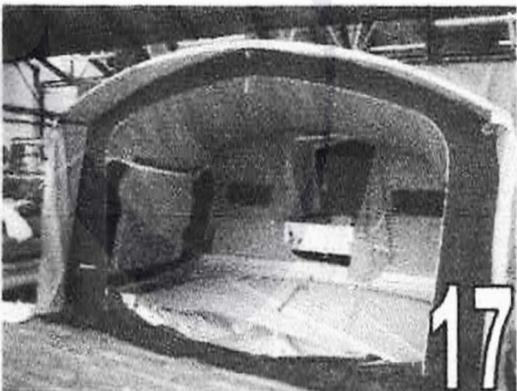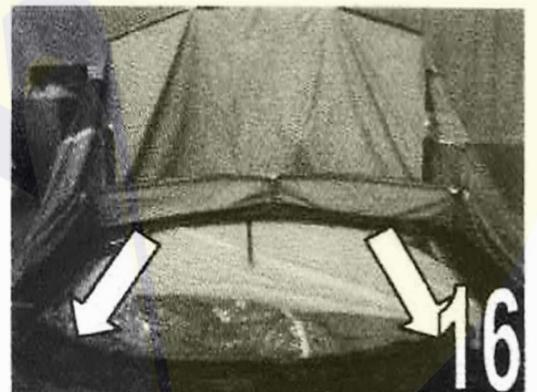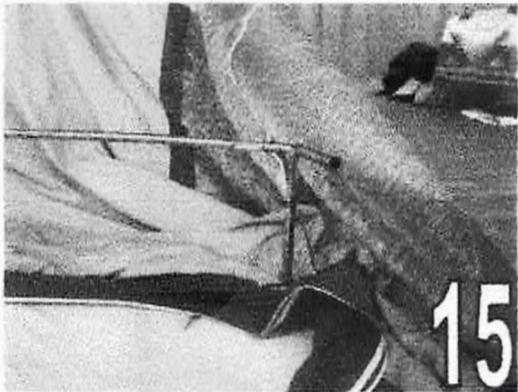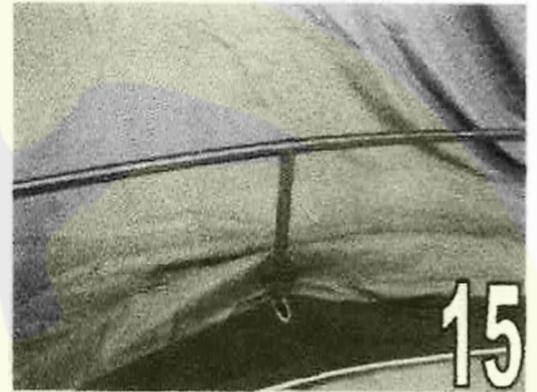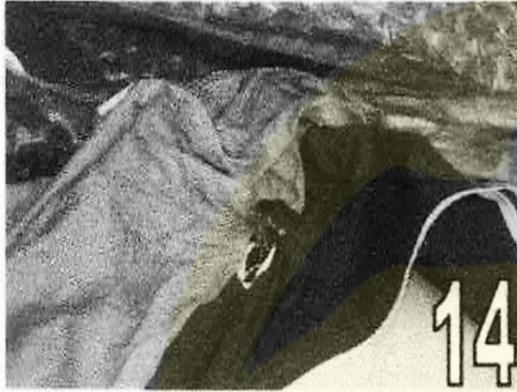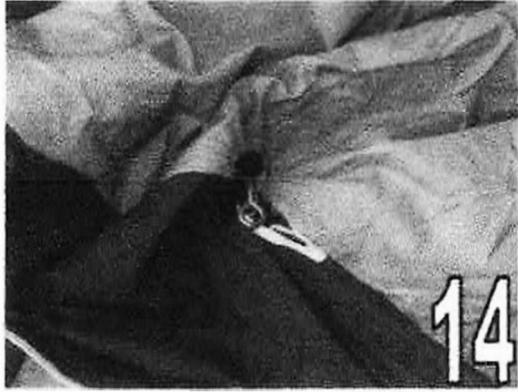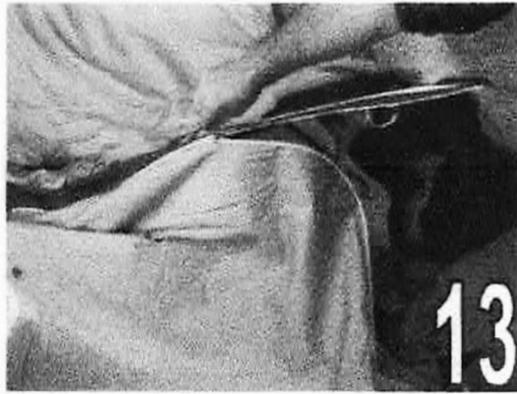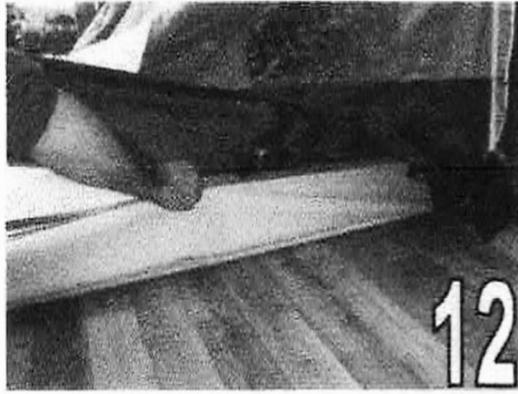

# ARMATURE AUVENT 3.15 Armada 904664

ACCESSOIRES	Nbre
Piquete fil (4 à 204)	50
Piquete fil (46 à 200)	50
Piquete cornière (à 200)	20
Sac armature PM	2

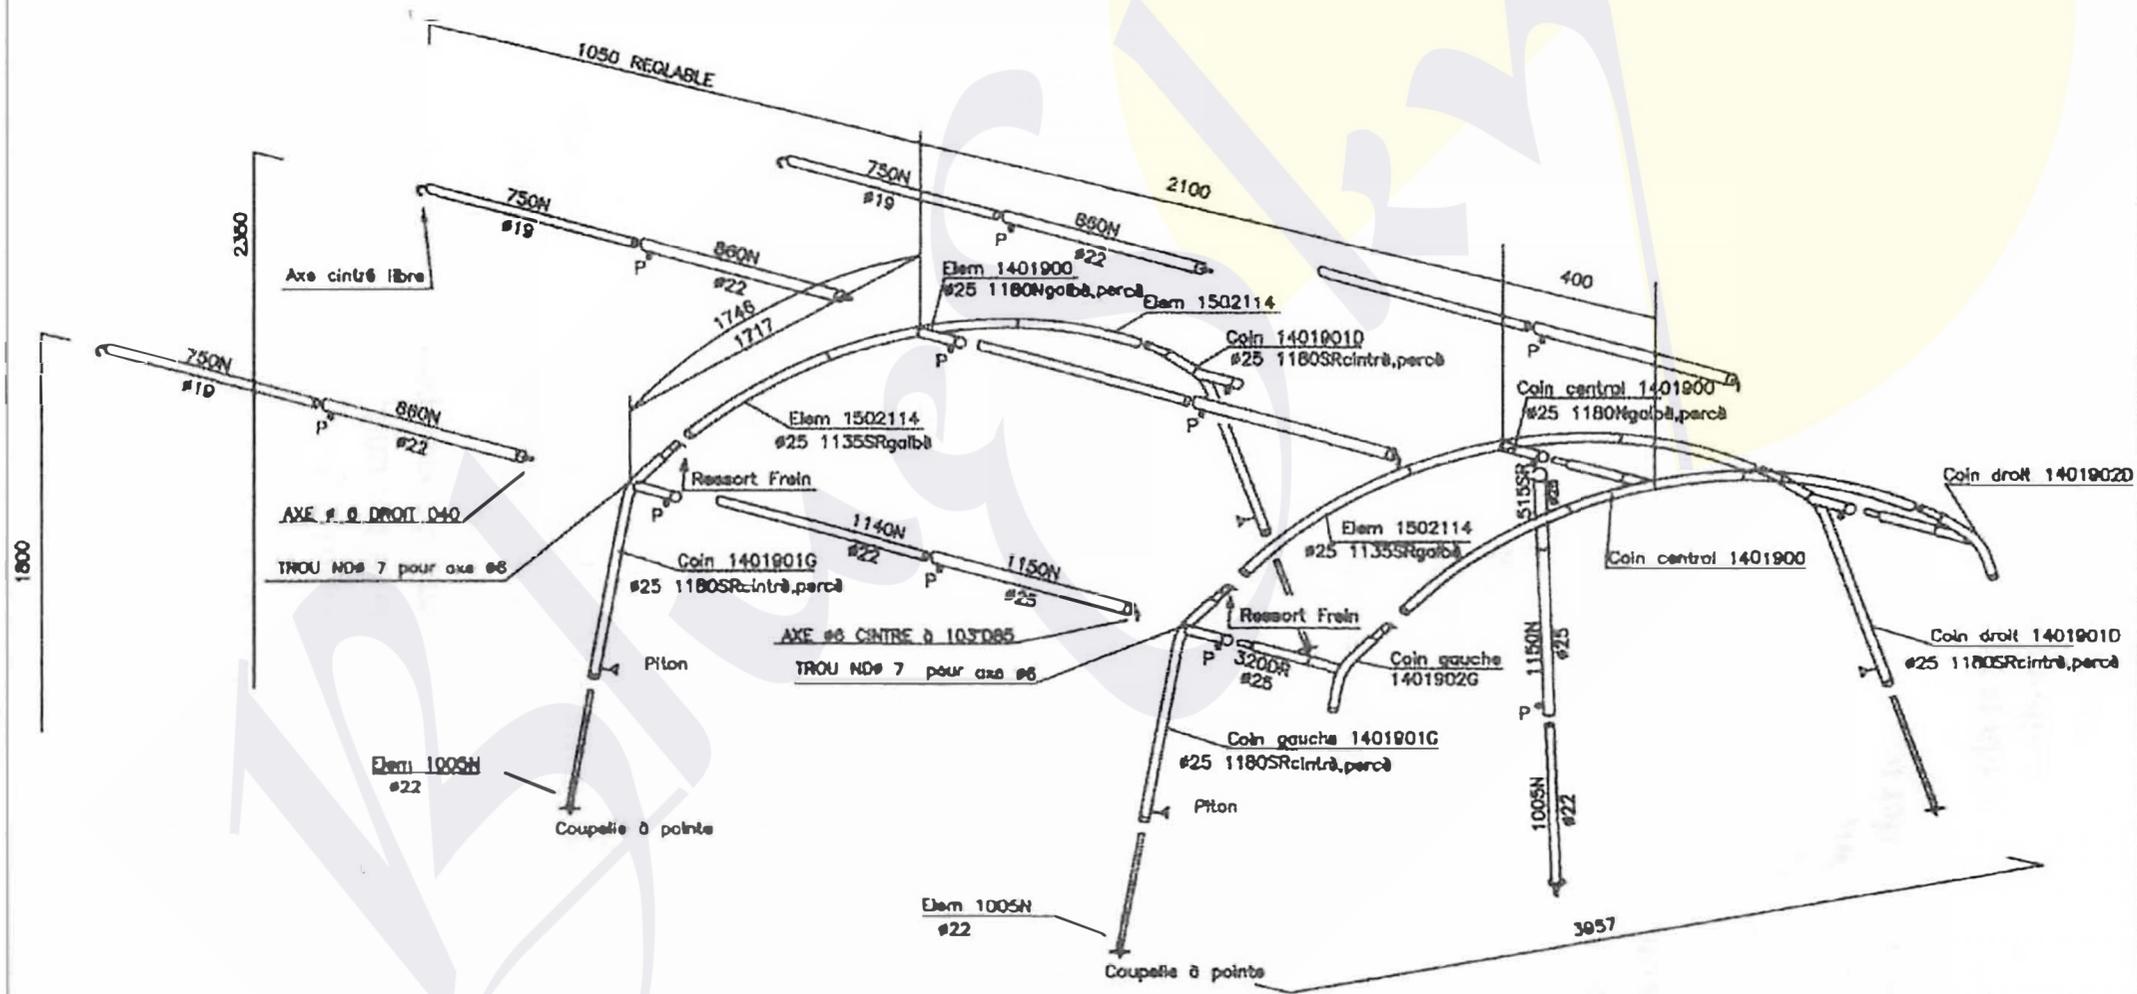

ATTENTION lors du montage de l'armature il faut positionner les trous des éléments cambrés vers l'intérieur (coté axe)

### **Step 1 – Opening of the cabin.**

Your Armada trailer tent requires only a few minutes to erect

- 1. Position the trailer on to your pitch. Wind down the 4 corner steadies and remove the transit cover. (The corner steadies are not designed to lift the weight of the trailer tent)**
- 2. Open the right bedboard and then the left bedboard as you look at the unit from the back (Road lights) Use the adjustable legs to level the bedboards**  
**When you close the Armada, take care to always close the left Bedboard first. As you look at the Unit from the back (Road lights).**
- 3. Pull the canvas down on all sides of the unit,**
- 4. On each side of the Armada extend the side poles until the pole locks into position (Photo 5a) Take care before closing the Armada: you must lower these poles before closing**
- 5. Push the central roof pole to the top so that the 2 fixing grips hold the roof (Photo 4a). These fixing grips are on the upright pole on the right side of the Armada, one in the front and one at the end of the cabin. Take care when closing your Armada to always lower this pole before trying to close the bedboards.**
- 6. Close the door and peg out the canvas. Start with the corners.**  
The Armada cabin is now finished and can be used as a standalone unit.

### **Step 2 – Setup the awning**

Follow these steps to setup your awning. One person can erect the awning alone, but the setup is easier with 2 people.

- 7. Zip the ground sheet to the cabin and peg its corners. Make sure the eyelet in the Middle is at the front of the groundsheet. (Photo 8)**
- 8. Prepare the awning frame from the frame diagram. Don't forget the poles that are attached To the cabin (Photo 9a)**
- 9. To make it easier to attach the centre awning pole to the cabin frame, the centre cabin pole (Step 3 above) can be temporarily lowered**
- 10. Zip the awning canvas to the cabin canvas**
- 11. Staying outside the awning, zip the bottom of it to the groundsheet at the front and on the Two sides**
- 12. Open the awning door to access the frame**
- 13. Put the 3 poles that connect the canopy through the openings on the awning canvas**
- 14. Setup the awning canopy poles to the awning stub canopy (3 connections and 2 covers)**
- 15. Lengthen the 2 frame feet (keep them under the awning canvas)**
- 16. Use the centre guy line to lift the awning and peg down so that the awning is now standing.**
- 17. Go inside and setup the rest of the awning frame. We recommend connecting the 3 poles that connect the cabin frame to the awning frame last.**
- 18. Peg down the awning canvas, don't forget to use all the guy lines**
- 19. Your Armada trailer tent is now ready.**

### **Closing**

Packing away your Armada is the reverse procedure. Ensure you have lowered all the cabin poles before folding the bedboards

If you feel any tension at all, when trying to close the bedboards, check that the 2 side poles and centre pole are lowered and the centre pole can move freely.