

# CONWAY TRAILERS 1981

Step-by-step assembly instructions by Photographs.  
Hints on assembly and dismantling.

# 2

## All Conway Trailer Tents feature this:

### ASSEMBLY INSTRUCTIONS


MODEL	FOLLOW PAGE NO'S.
CAMPA DE LUXE	2-3-4-5
CORNICHE	2-3-6-7
COLT	2-3-8

For every model follow the instructions illustrated on these pages, then to complete assembly —


for Campa de Luxe see Pages 4,5  
for Corniche see Pages 6,7  
for Colt see Page 8

These simple instructions show you in easy stages all you need to know on how to assemble your Conway Trailer Tent. Every model shares the same basic assembly system but there are variations in the final stages for each model. When you have completed all the stages shown here, just unfold the relevant pages for your model to finish off.


A Conway Trailer Tent will take you only minutes to erect, and needs the minimum of effort — it really is child's play.

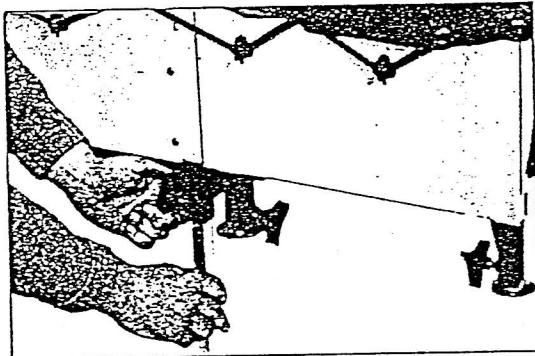


1. Unhitch trailer from car. Position on as level ground as possible. Drop down the four trailer corner jacks.

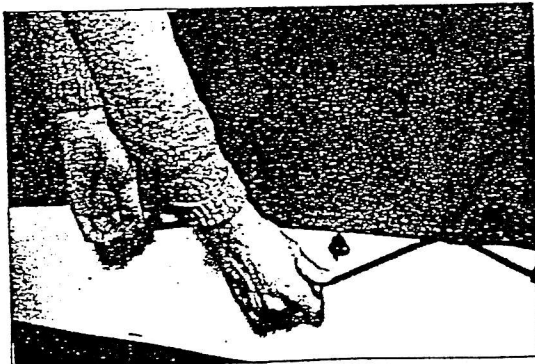


2. Remove cover by detaching elastic cord from black plastic cleats.

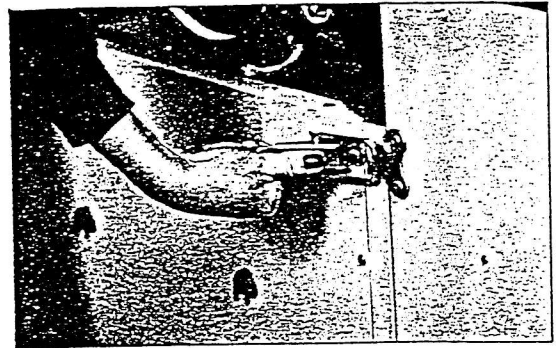

3. Drop the four corner kitchen support jacks to within 1/2 inch of ground. Release the two protex fasteners on either side of the kitchen, which will in turn release the kitchen from trailer.

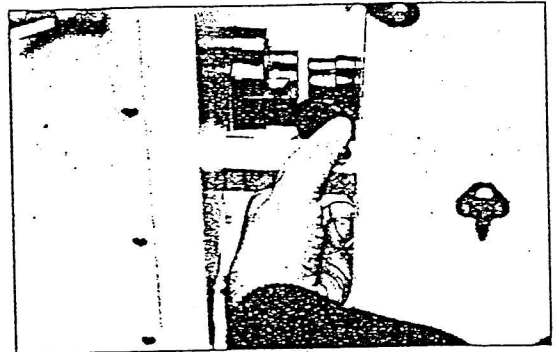

4. Now slide kitchen away enough to disconnect 7 pin plug.

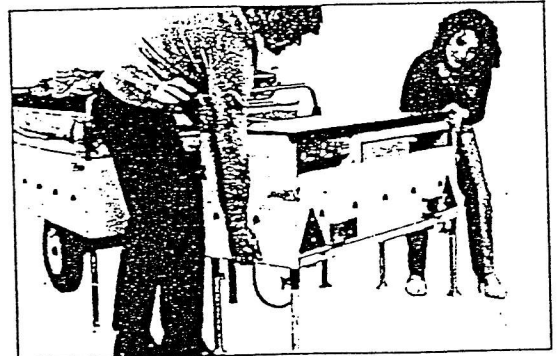


5. Slide the kitchen off carrying rails and away from the trailer.




6. Swing over left hand cabin roof support frames and then same on right hand side.

# Initial fast simple assembly system


# 3

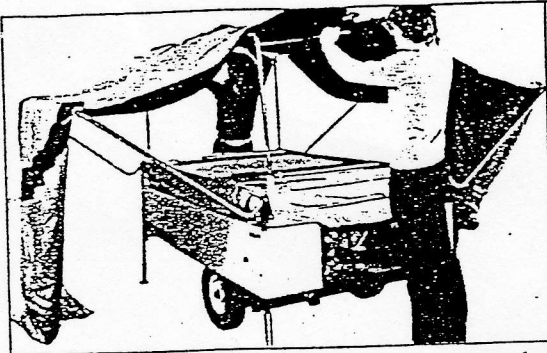


7. Lift up the two hinged arms to form the 5th roof support pole.

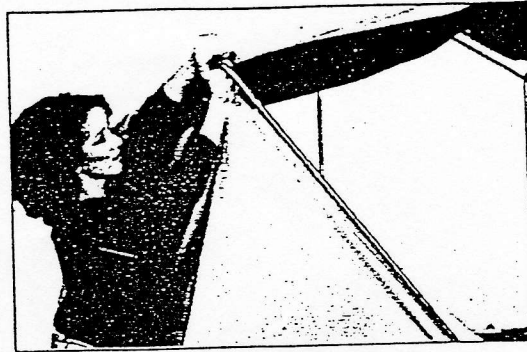


11. Clip the inner tents to the framework.

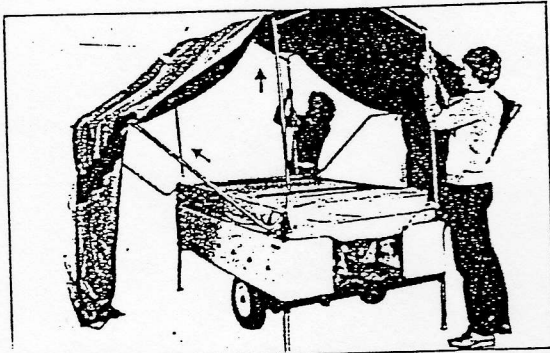

8. Extend each of the 4 cabin support poles by pushing upwards simultaneously at front and back. Locate the small button clip in the centre at the back of 5 holes in each pole. Adjust as necessary when pegging out.

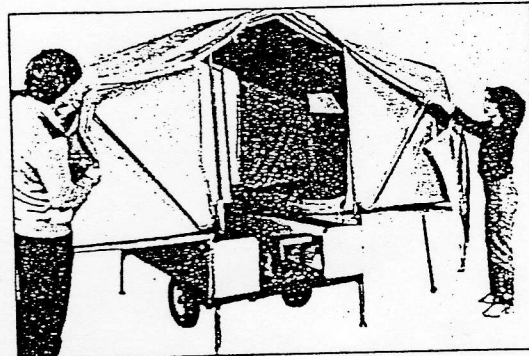


12. Pull down all walls of cabin canvas.

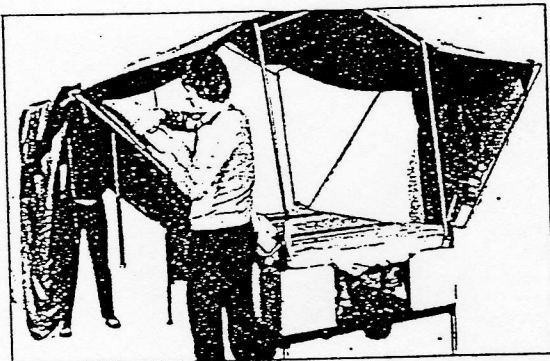

9. Fold over each bed board and mattress to each side. Check that each bed leg is securely located and adjust as necessary.




10. Release elastic bands restraining inner tents and mattresses.

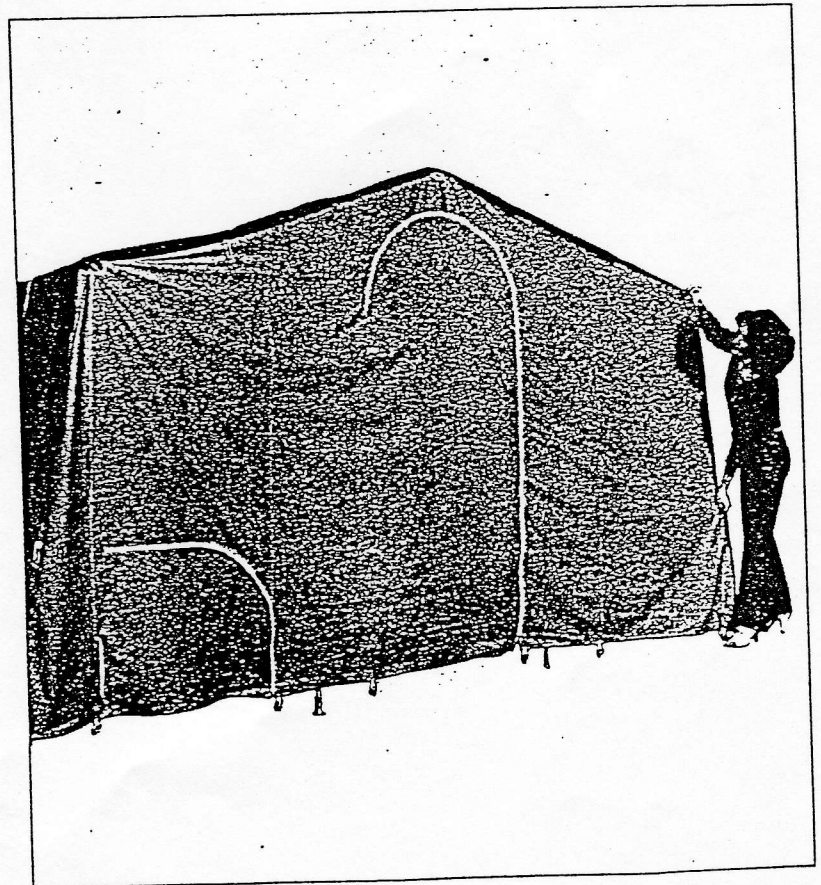


# 4

# CONWAY CAMPA DE LUXE


An ideal touring trailer tent, the Campa de Luxe has a sleeping section which can be erected in only 4-5 minutes for easy overnight stops. And its canopy and zip-on extension give a huge 4 x 3 metre lounge area so that you can enjoy longer stops in complete comfort.

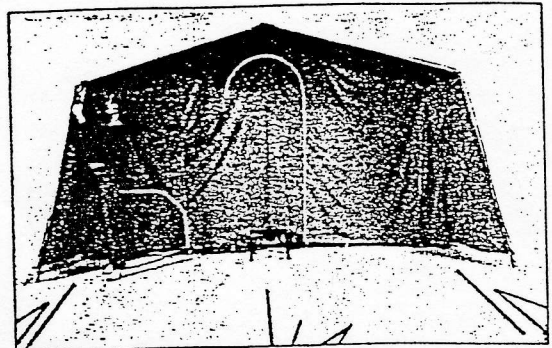


17. Attach outside support legs and then adjust roof support poles.

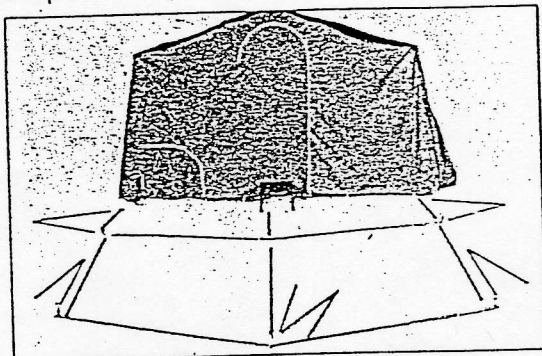


14. Layout structure of framework. See parts list overleaf for detailed diagram.

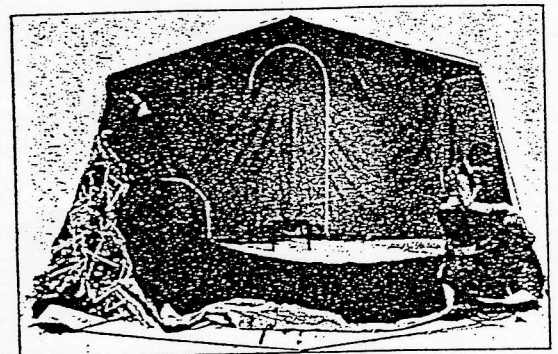


18. Unroll extension canvas on your ground sheet and zip canvas to main tent.

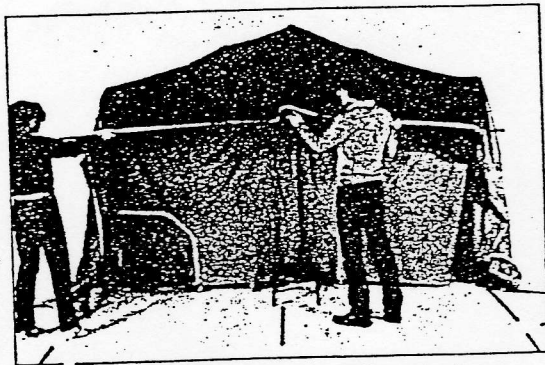


15. Slide front roof awning poles through sleeve.

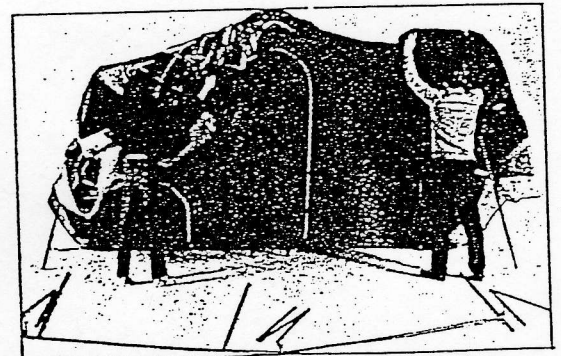


19. Throw extension canvas over roof of main tent.

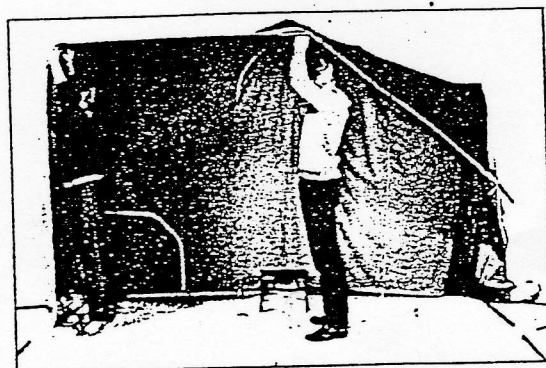


16. Connect three roof support poles to front roof awning poles.

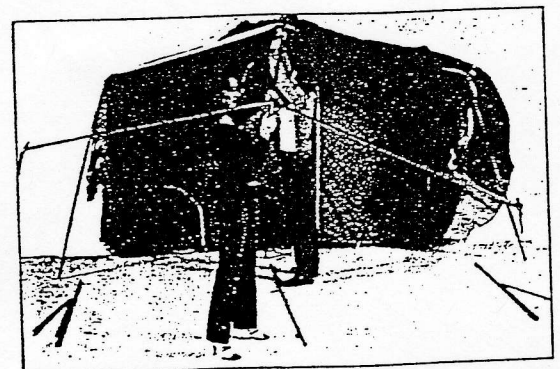


20. Connect centre cabin roof pole to main tent frame and attach to centre extensions "A frame".

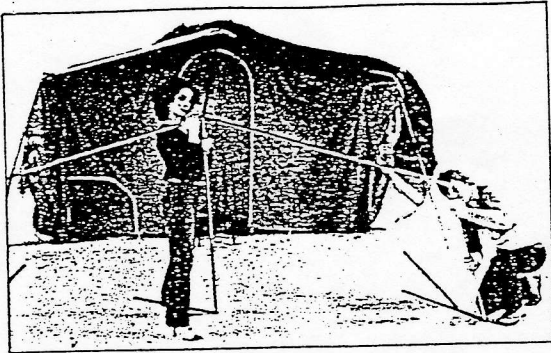


21. Add side cabin roof poles and legs leaving bottom of front support legs broken.

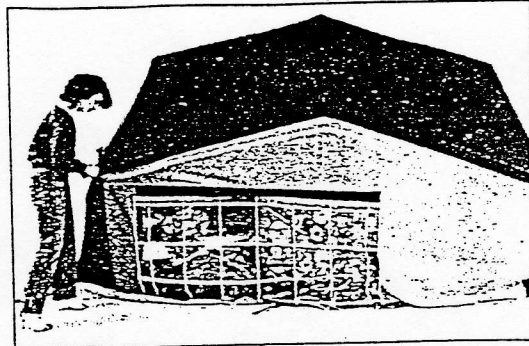

23. Locate over the spikes.

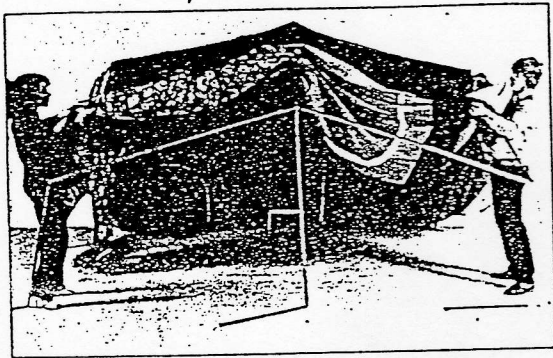

22. Pull extension canvas down over roof support frame.

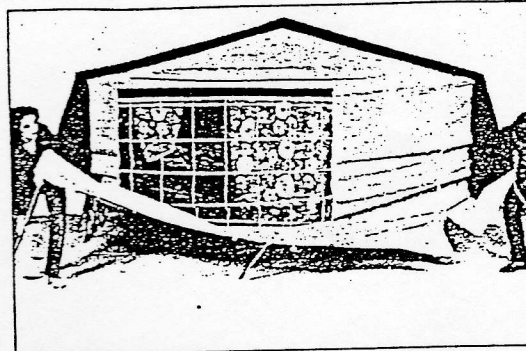

24. Connect front legs and raise extension to full height.

