

Cardinal

Laser & Tardis

Step-by-Step Instruction Leaflet



Conway Products Limited Skull House Lane, Appley Bridge, Wigan WN6 9DW

Due to a process of ever-continuing product improvement, some details contained in this 1988 brochure may change. However, the information is correct at the time of going to press.




Cardinal, Laser & Tardis *Please follow these simple and easy instructions to set up your*




1

Park trailer in position required on site, fully brake trailer, unplug electrics, uncouple trailer from car. Level off trailer longitudinally by using jockey wheel. Level off sideways by means of proprietary caravan leveller or blocks. Wind down corner steadies onto wooden pads (i.e. no pressure).

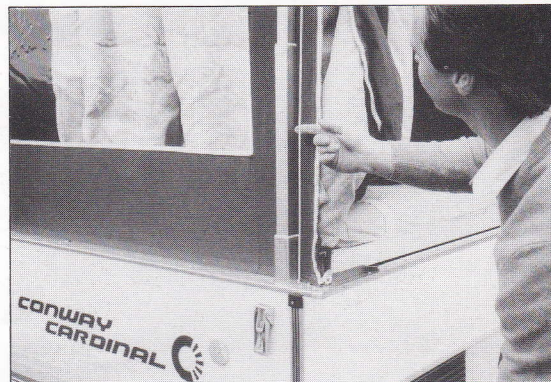


5

Turn handle clockwise to wind up roof, until the setting wire is taut, check periodically that the roof is rising equally.

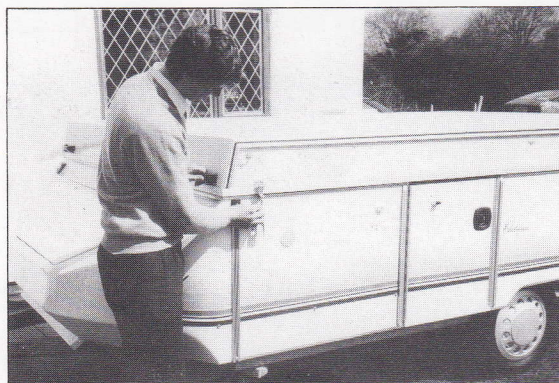


2

Release all four corner catches.

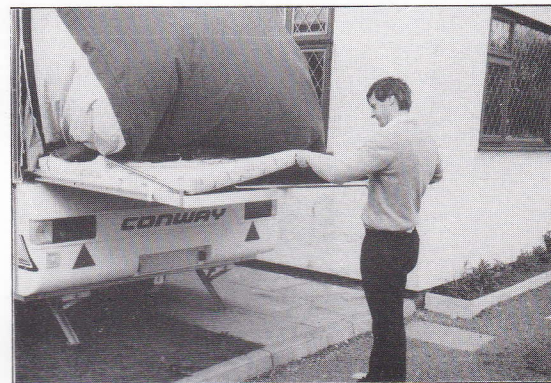

6

Pull out rear bed until it reaches the bed end stop and remove rear bed support bars from under each mattress.

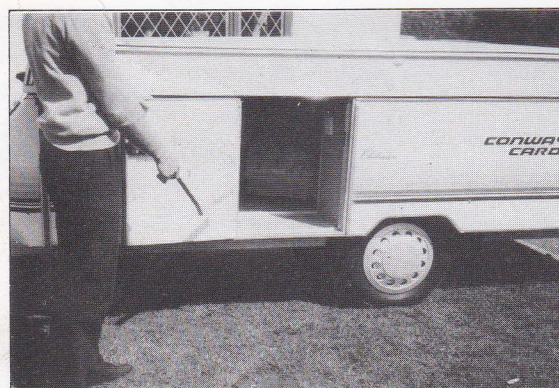


3

Lift roof corner by hand near door to avoid damage to draft seal on top of door. Open door and remove winch handle from interior of trailer.




7

Fit rear bed support bars, pull over bed end canvas but do not elasticate.

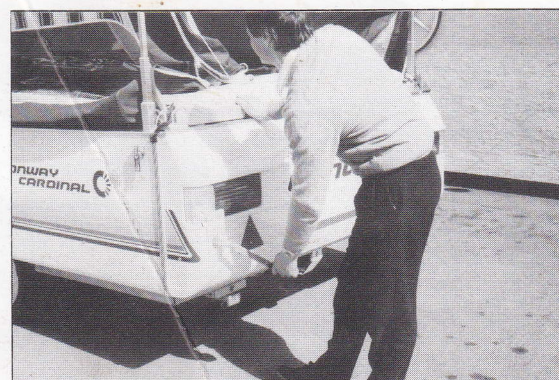


4

Slide up socket cover. Insert winch handle into winch socket.

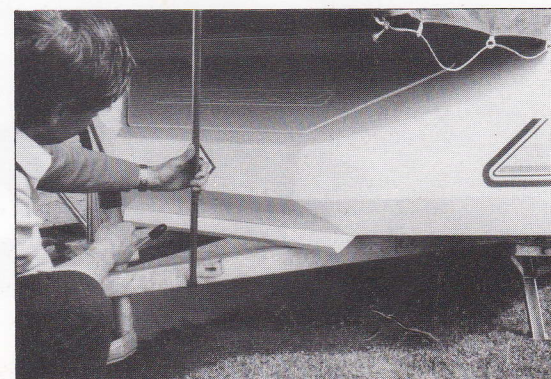


8

Pull out front bed until it reaches bed end stop and fit front bed support bars. Pull over bed end canvas but do not elasticate.

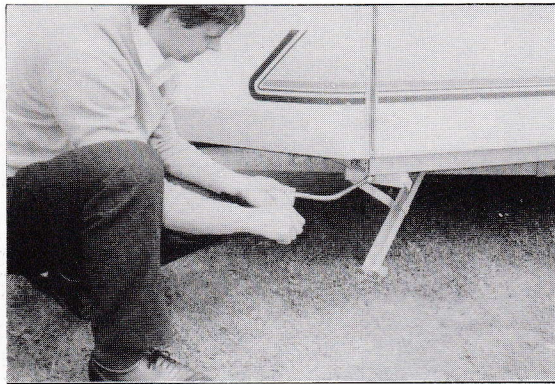


9

Finish off the four corner steadies by giving each steady a full 1½ turns with the corner steady handle.

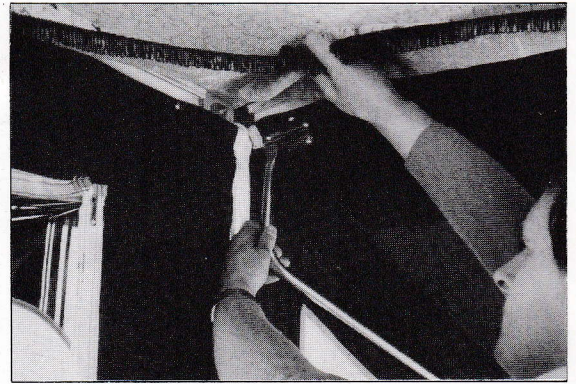


13

Now push out bed end frame and locate shaped flat end of roof support pole into the bracket situated at each roof corner.

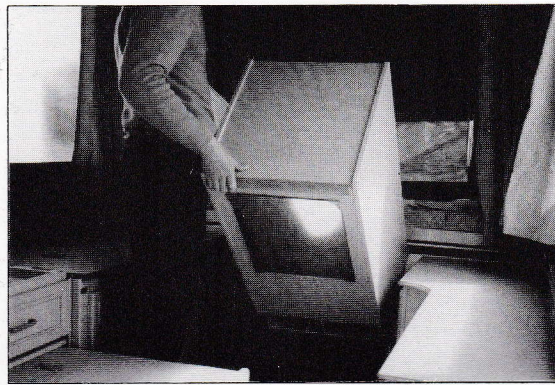


10

Step inside trailer, lift up hinged wardrobe and slide into position on top of base cabinet.

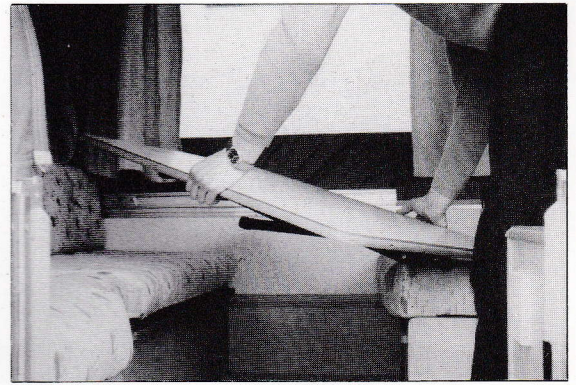

14

Place table and cushions to one side.

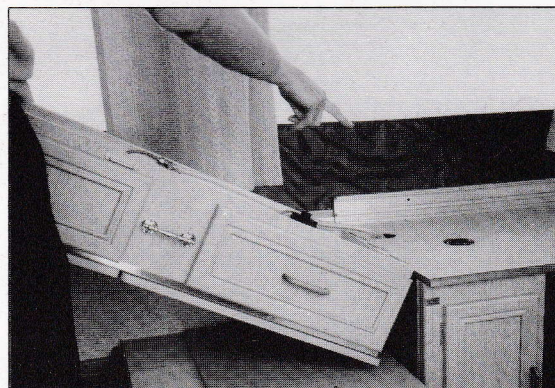

11

Lift over hinged kitchen unit into position, ensure that the waste outlet sits into drain outlet correctly.



15

Unclip door from roof position, lower the door while you walk outside.



12

Remove bed end roof frame bars from under each mattress, locate open end over white plastic lugs at corner of each bed end frame.




16

Close the lower door, take hold of top door section on both sides, lift against the spring hinge, lower top door onto bottom door, locating the oblong pegs into the mating holes at each side of the lower door and then pull the top door towards you.



17

Release chrome clips on top door. Open door and step inside. Secure top door with turn buckles. To fit wall canvas to door, insert canvas hard edge into door channel by folding through 180° starting at the bottom, firmly press canvas into channel.

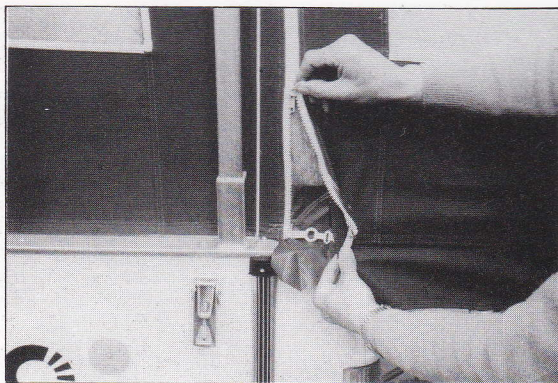


18

Zip up the four corners ensuring that the hook and eye fittings have been engaged and that the small PVC rain deflector is in position.



19

Elasticate the bed end underflaps onto the location buttons under the bed board.

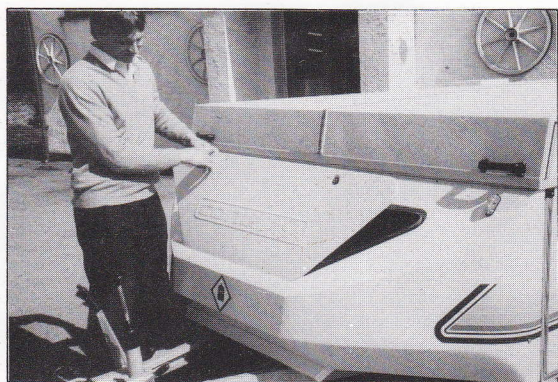

20

Removal of gas bottle box lockable lid. Unlock lid to position as shown then lift off.



21

The underslung spare wheel is removed by using the corner steady/wheel brace to remove the retaining bolt, drop to floor then slide out spare wheel.

Special points to note:

1

The roof should not be raised or lowered when the corner steadies are under full tension.

2

Failure to fit the bed support bars when the beds are in the extended position will result in damage to the sliding mechanism.

3

Check when lowering the roof that all corners come down evenly: if one tends to stick, possibly due to ground being uneven, stop winding and assist the sticking corner. If the roof is persistent in sticking, then wind up fully and start again.

4

Be careful not to over wind the crank, either when raising or lowering the roof.

5

Always check that the kitchen, wardrobe, door and roof light etc. have been folded away/closed before attempting to fold the trailer.

6

Should the tent be wet when folding away, the mattresses which are vinyl backed, should be turned upside down to protect the bedding.


7

If the door casing is not quite square with the door, this can be adjusted by raising or lowering the corner steadies by up to one full turn, thus correctly aligning the door.




Awning

Please follow these instructions to erect your awning.

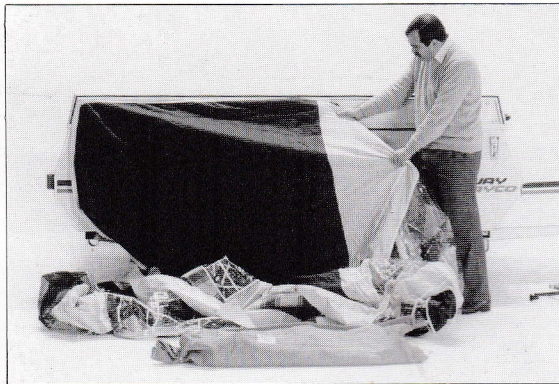

1

Remove awning canvas from its bag and slide white corded section through the awning channel fitted to the side of the roof. As illustrated it is simpler to do this when your camper is in the folded position.

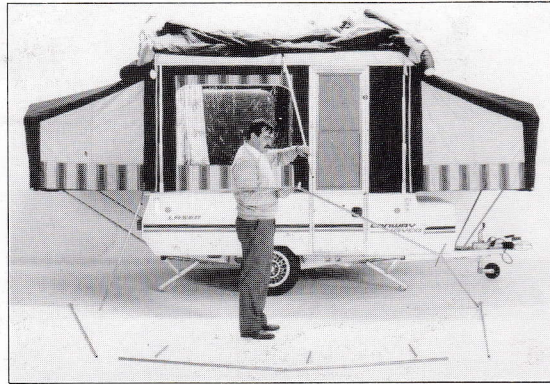


5

Hook centre roof pole into the eye on the front of the camper roof and then connect to the front 'A' frame.



2

Fold the canvas back onto the roof of the camper.

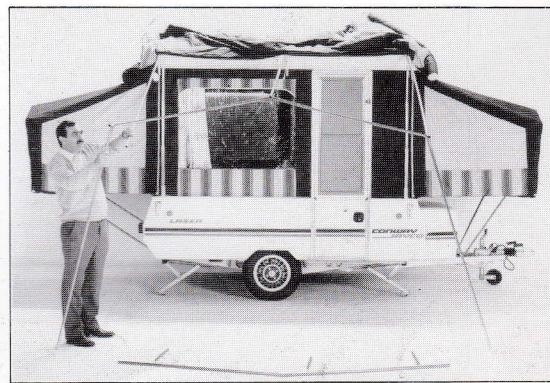


6

Repeat for the 2 side roof poles.




3

Fully erect the camper body as previously illustrated.

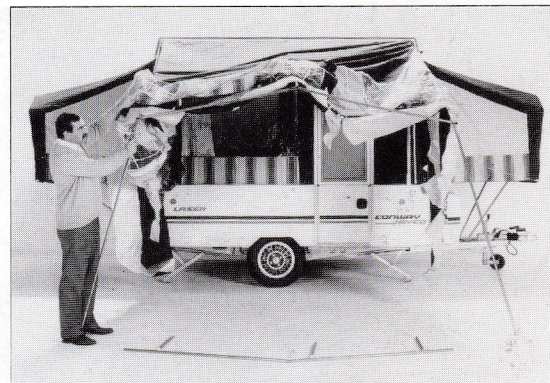

7

Pull canvas forward from roof of camper.

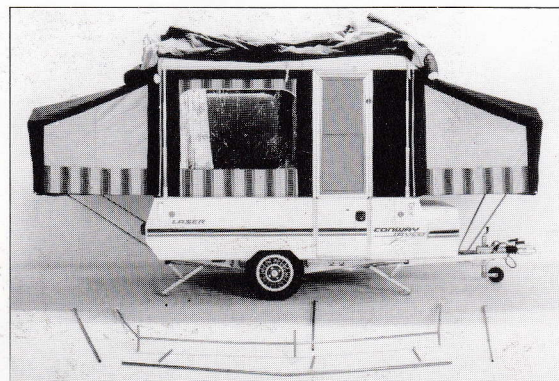

4

Lay out the frame as shown after connecting together the various frame sections.



8

Pull down front of awning and locate gussets over centre and corner angles. (Care should be taken at this point not to snag the canvas or windows on the frame).

Toilet Extension



9

Slide front 'V' section through the sleeve in the front of the short stub canopy. Ensure that the holes punched in the tubing in the centre and at either end face towards the awning.



1

Zip out the panel in the right hand awning wall.




10

Fit the 3 short canopy poles between the main extension frame and front 'U' frame.




2

Zip in the toilet/wardrobe extension.

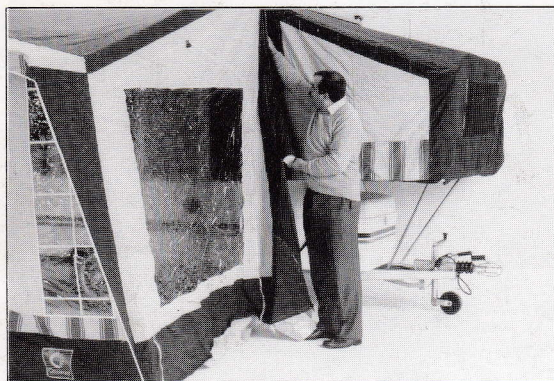

11

Push the foam rubber draught excluder behind corner lifter posts.

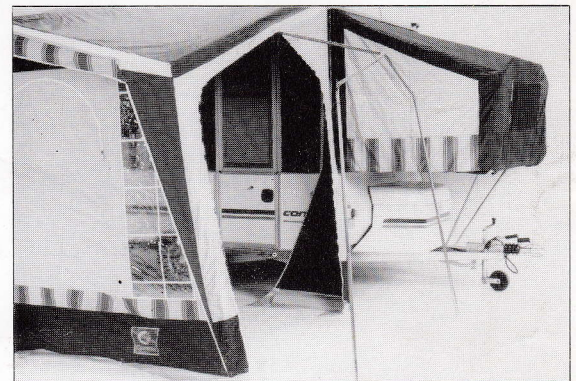

3

From inside the awning, fit the frame as shown.



12

Peg out ensuring that the canvas is square and that the filllets returning inside the awning fully cover the gap at the edge.



4

Tension frame and peg out.

**TARDIS
LASER**

The awning skirt supplied with the trailer fits into the awning channel, which runs underneath the trailer. A small loose flap is supplied with press studs to cover the wheel arch.

**CARDINAL
CLUBMAN
CARDINAL**

The awning skirt supplied fits to the trailer by press studs. These are not factory fitted, but are included in the awning bag.

To fit, start by fixing the two press studs by the door and then work outwards.