



Trailer Tents *Main Body Erecting Instructions*




All Conway Trailer Tents feature the same simple speedy method of erecting the main Cabin frame and canvas. Please refer to separate sheet for instructions to erect the extension frame and canvas.

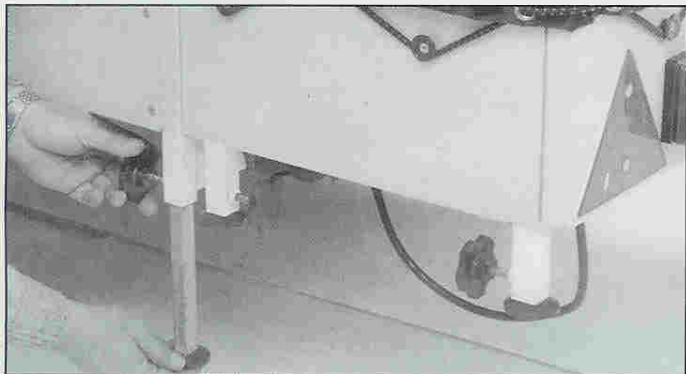


1 Unhitch trailer from car. Position on as level ground as possible. Release jack-leg screws to drop down four trailer corner jack-legs. Retighten screws.

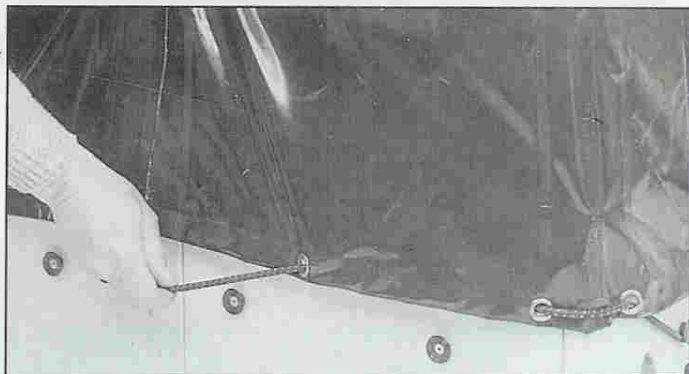


2 Remove cover by detaching elastic cord from plastic cleats.

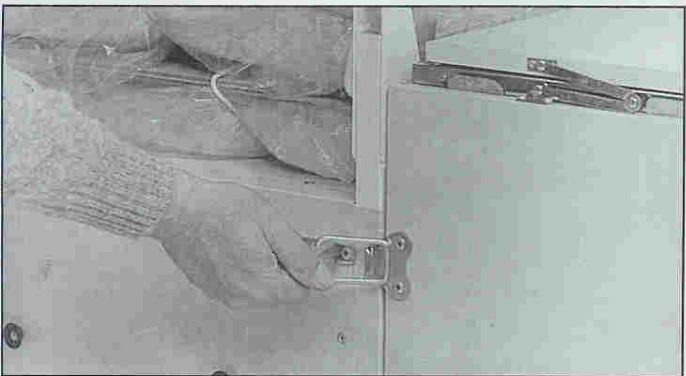

3 Drop the four kitchen jack-legs to within half-an-inch of ground. Unclip the two protex fasteners on either side of the kitchen, which will in turn release the kitchen from trailer. (Deluxe models only).

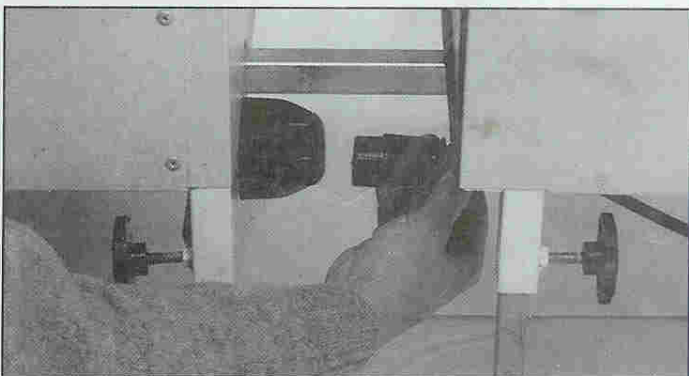

4 Now slide kitchen away enough to disconnect 7-pin plug. (Deluxe models only).

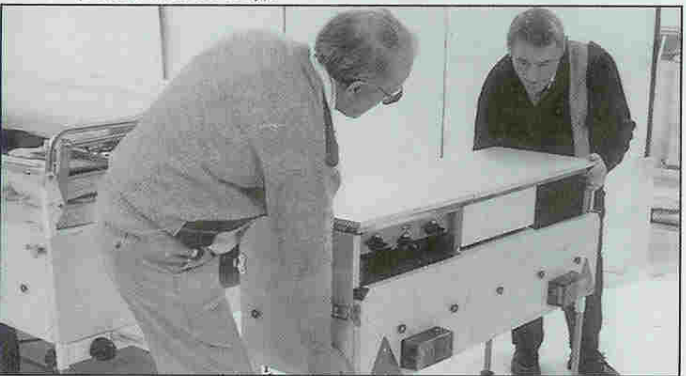

5 Slide the kitchen off carrying rails and away from the trailer. Retract kitchen carrying rails by releasing locking screws. (Deluxe models only).



6 Swing over left hand cabin roof support frames and then same on right hand side.



7 Lift up the two hinged arms to form the 5th roof support pole.




8 Extend each of the four cabin support poles by pushing upwards simultaneously at front and back. Locate the small button clip in the centre of the bank of five holes in each pole. Adjust as necessary when pegging out.



9 Fold over a bed board and mattress to each side. Check that each bed leg is securely located and adjust as necessary.




10 Release elastic bands restraining inner tents and mattresses.

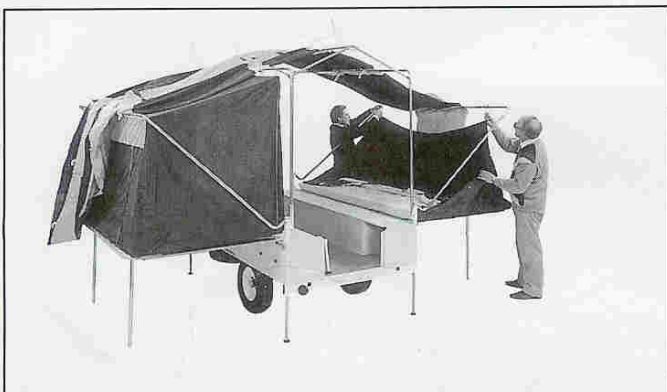

11 Clip the inner tents to the framework.



12 Pull down all walls of cabin canvas.

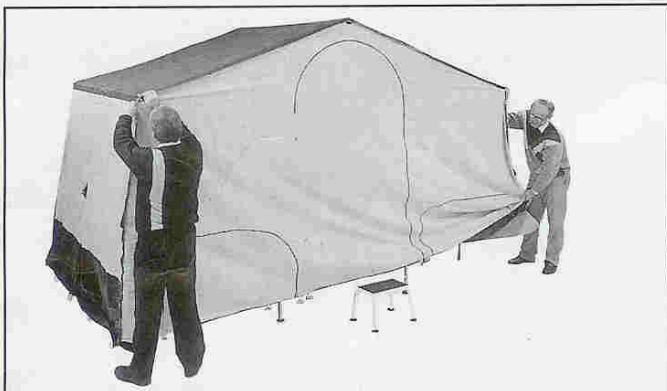

13 Ensure snug fit on cabin frame. If not fitting extension, peg out at this stage.

Note: to fold down reverse procedure.

ADDITIONAL HELPFUL HINTS


Setting the Conway Trailer and Cabin Tent Area:

1. Drop down front two jack legs onto plywood pads leaving trailer nose high by approximately 1 in.
2. Drop down rear two body jack legs onto plywood pads, lift body to take spring from suspension and tighten leg screws (trailer should now be level).
3. Remove transit cover, open out frame and beds as manual and fit inners.
4. Extend all cabin framework to the top adjustment holes.
5. Pull over front cabin canvas wall.
6. Pull over rear cabin canvas wall.
7. Peg out under towbar peg points 1 and 2, ensuring gap of 6 in. at bed height level **do not pull out as in incorrect sketch.**

8. Peg out points 3 and 4, ensure that canvas is in a straight line as in sketch, lower cabin frame if necessary.
9. Peg out points 5 and 6, ensure that all zips are closed when pegging out and that canvas is kept taut when pegging 5 and 6.
10. Peg out intermediate pegging points keeping a straight line.
11. In wind and wet conditions, the bed perimeter guying points should be guyed out. **These are not strengthening guys** - they should only be slightly tensioned in this order: AA, BB, CC, EE.


Comment: By keeping the canvas walls vertically taut and pegging out as above, with bed perimeter guy points tensioned correctly, you will avoid wet canvas coming into contact with your inner tent and mattresses.

Fig. 1

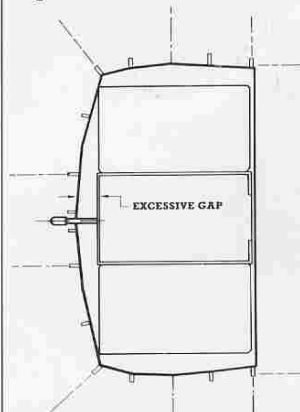

INCORRECT

Fig. 2

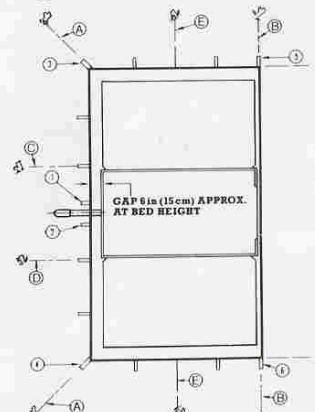


CORRECT




Conway Products Ltd.
Skull House Lane, Appley Bridge, Wigan WN6 9DW
Tel: (02575) 4535 Fax: (02575) 4547

Miami L & D/L Extension Fitting Instructions

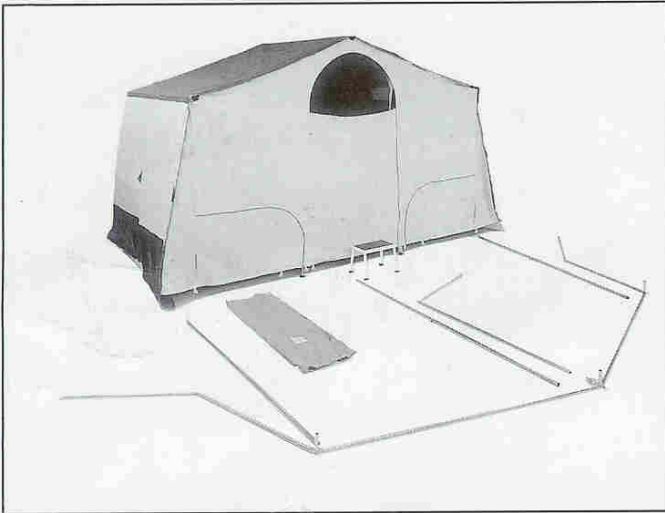


1 When Cabin canvas has been completely erected, lay out awning poles as shown. Spring together front 'A' frame and lay flat.

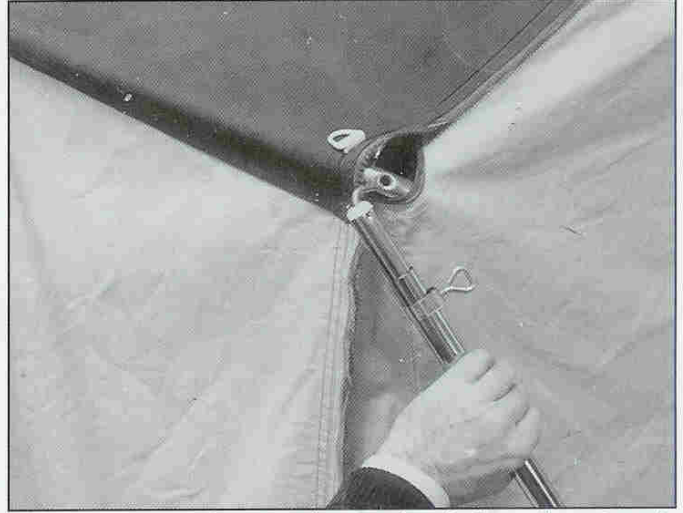


2 Hook in 3 roof support poles to main cabin frame, the centre pole has the shortest hook.



3 Lift 'A' frame and connect centre leg, leaving all legs with "broken" bottom section.

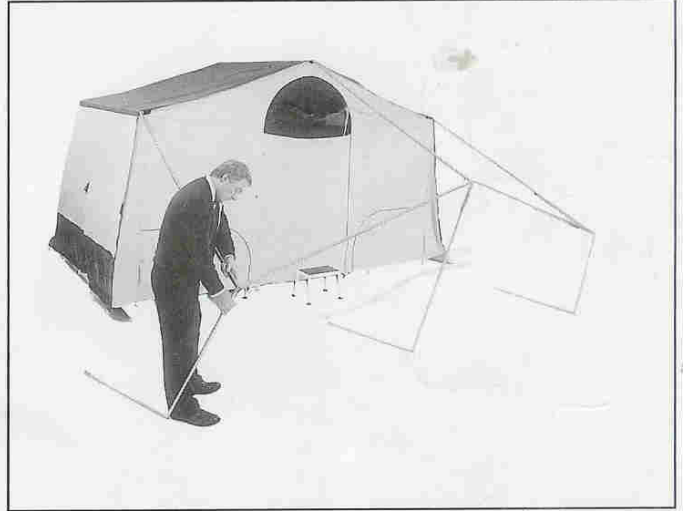

4 Fit 3 roof support poles to front 'A' frame with legs still "broken".

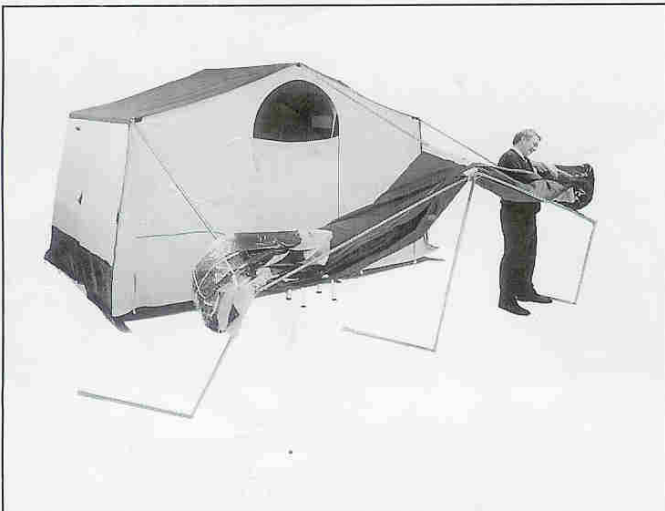


5 Unroll main awning canvas along roof support poles.



6 Unfold extension canvas and zip onto main cabin canvas.

continued

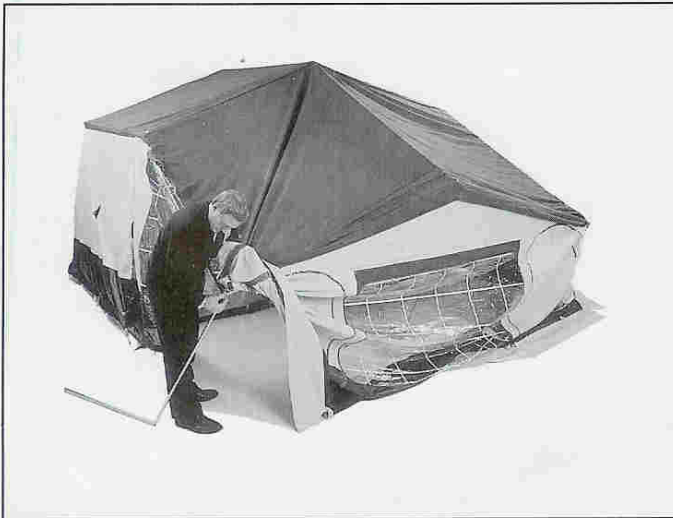

7 Pull canvas over front 'A' frame taking care to locate eyelets over spikes to avoid damage to canvas or windows.




8 Spring together bottom section of frame legs and raise to full height.




9 With all zips closed tension roof poles and adjust leg heights. Pull flap over connecting zip and peg out. (See Cabin instructions).

Note: to fold down reverse procedure.

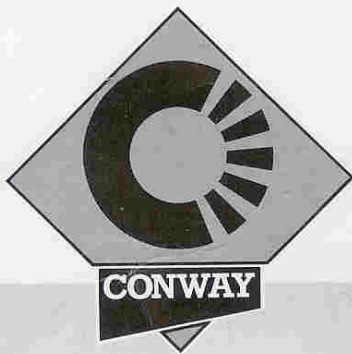

Conway Products Ltd.
Skull House Lane, Appley Bridge, Wigan WN6 9DW
Tel: (02575) 4535 Fax: (02575) 4547

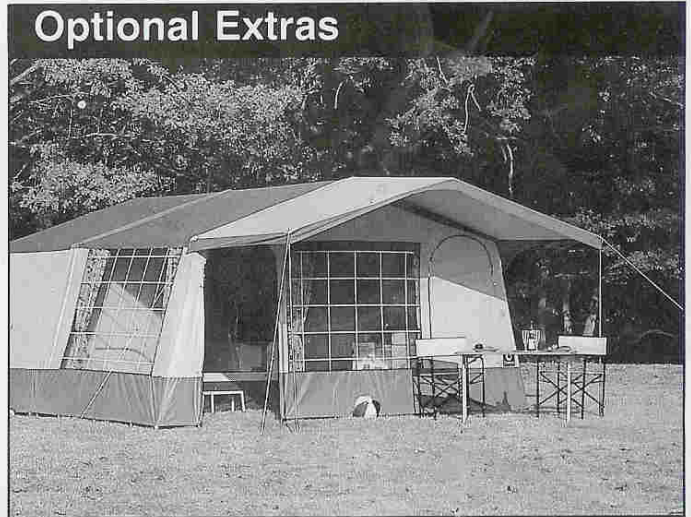

Sun Canopy



Carry Rack

Other optional extras that can be purchased: ● Ground Sheet ● Jockey Wheel ● Spare Wheel ● Cupboard Cushions.

Due to the process of ever continuing product improvements, some details contained in this brochure may change. However, the information is correct at the time of going to press.