
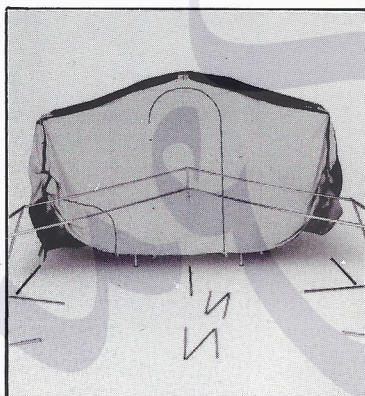


1987-88-89

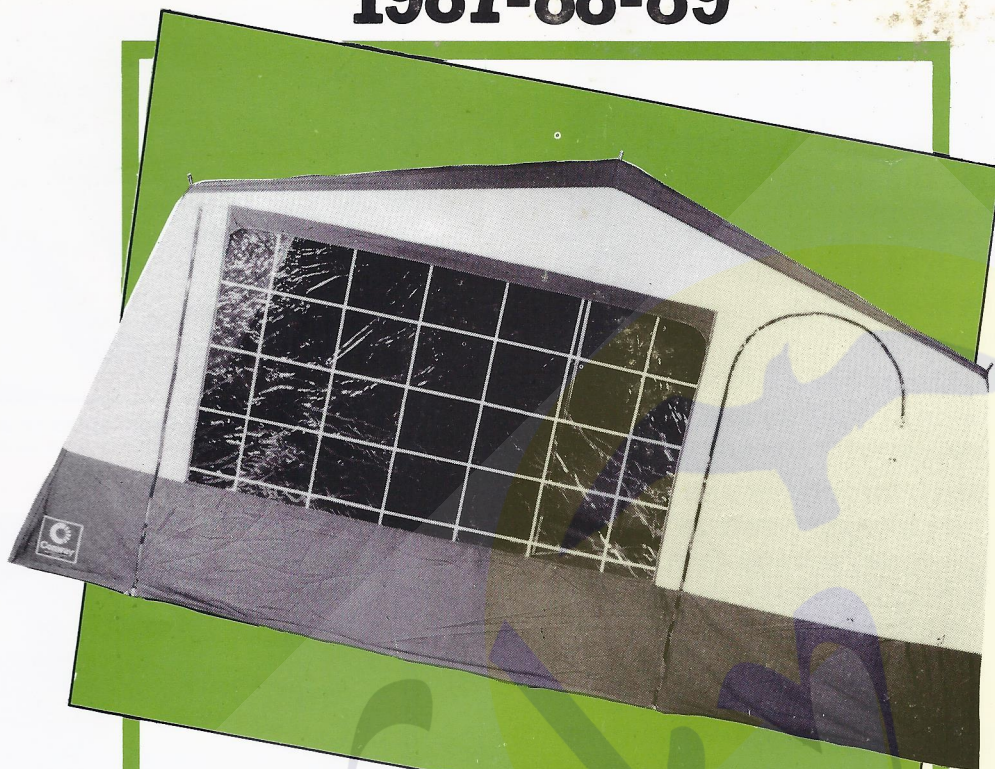

CONWAY TRAILER TENTS

Step by step pictorial assembly instructions
and parts list

Hints on assembly and dismantling

All Conway Trailer Tents feature a fast,

ASSEMBLY INSTRUCTIONS


For all models follow the instructions illustrated on these pages, then to complete assembly:

for Contiki/L/De Luxe	see pages 4-5
for Corniche L/De Luxe	6-7
for Camargue	8-10


Pages 11, 12, 13 and back cover show exploded views of trailers and extension frames with lists of parts.

These simple instructions show you in easy stages all you need to know in order to assemble your Conway Trailer Tent. Every model shares the same basic assembly system but there are variations in the final stages for each model. When you have completed all the stages shown here, just turn to the relevant page to finish off your particular model.


A Conway Trailer Tent will take you only minutes to erect and needs the minimum of effort — it really is child's play.

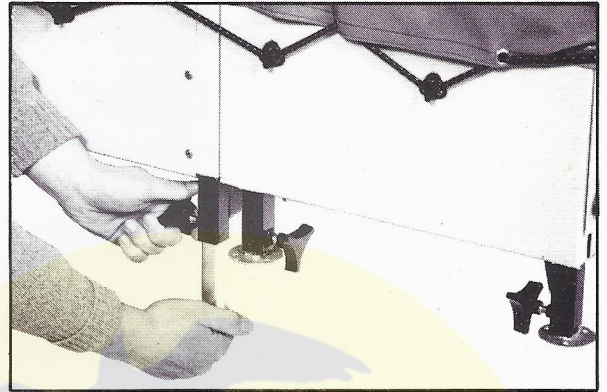

1 Unhitch trailer from car. Position on as level ground as possible. Drop down the four trailer corner jacks.

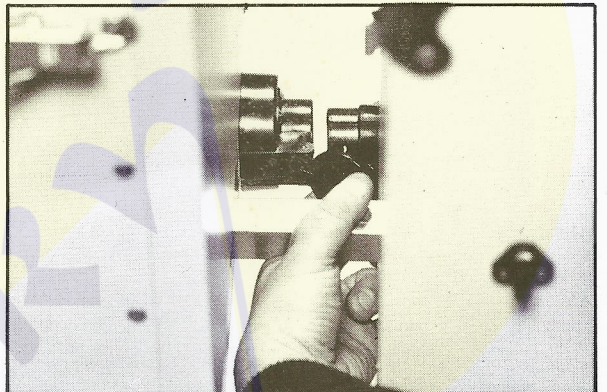

4 Now slide kitchen away enough to disconnect 7-pin plug. (Deluxe models only).

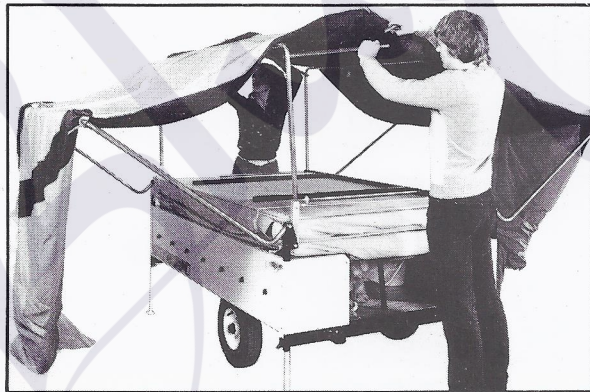

7 Lift up the two hinged arms to form the 5th roof support pole.



8 Extend each of the four cabin support poles by pushing upwards simultaneously at front and back. Locate the small button clip in the centre at the back of five holes in each pole. Adjust as necessary when pegging out.




11 Clip the inner tents to the framework.




12 Pull down all walls of cabin canvas.


simple assembly system

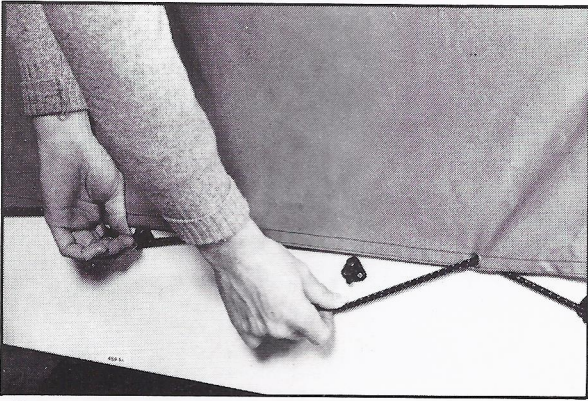

2 Remove cover by detaching elastic cord from black plastic cleats.

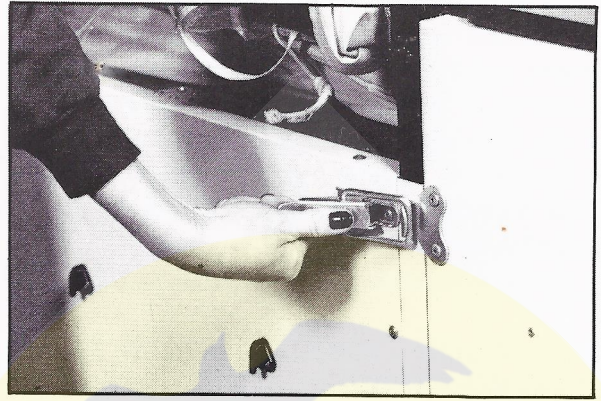

3 Drop the four corner kitchen support jacks to within half-an-inch of ground. Release the two protex fasteners on either side of the kitchen, which will in turn release the kitchen from trailer. (Deluxe models only).

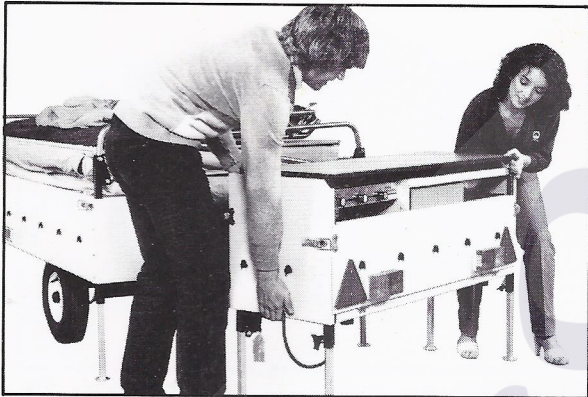

5 Slide the kitchen off carrying rails and away from the trailer. (Deluxe models only).




6 Swing over left hand cabin roof support frames and then same on right hand side.



9 Fold over each bed board and mattress to each side. Check that each bed leg is securely located and adjust as necessary.



10 Release elastic bands restraining inner tents and mattresses.

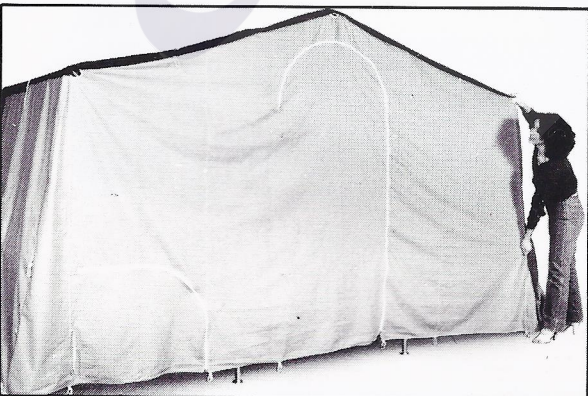

13 Ensure snug fit on cabin frame.

14 (a) First peg out under draw bar keeping canvas approximately 6 in away from top of trailer body; (b) Peg out each rear corner; (c) Peg out each front corner; (d) Peg out all intermediates.


Note: Peg out in straight lines, ensure all zips are fully closed.

CONTIKI/L/De Luxe Extension


Both models feature an integral 4 m × 2 m extension. Should you wish to stop overnight however, and would like to erect only the sleeping area, this can be done. The extension canvas should be pulled back 'inside out' over the roof and rear wall of the cabin canvas and pegged out as a double skin.

ATTENTION - AWNING CURTAINS - CONTIKI ONLY

Each window should have one wide and one narrow curtain.

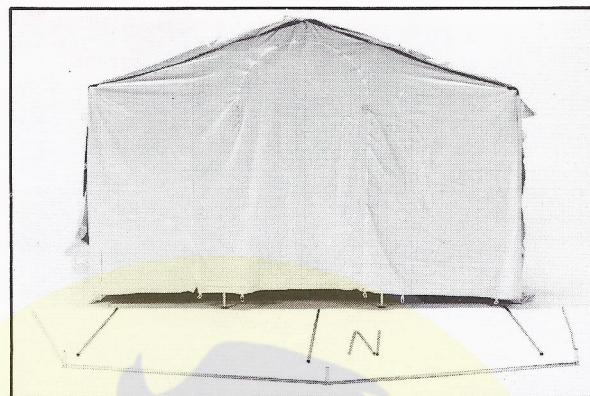


1 Remove extension frame from the bag and lay out as shown. See parts list for a detailed diagram.

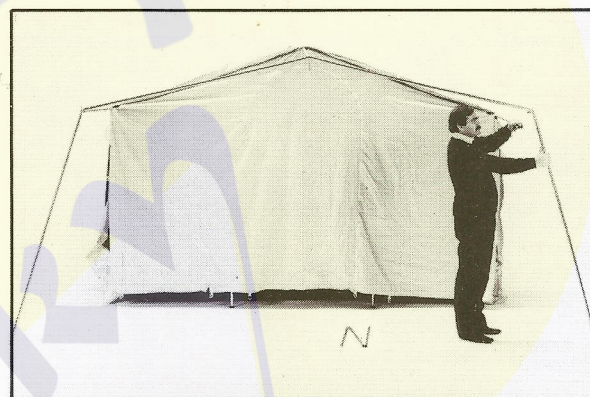

4 Repeat for two side roof poles.




7 Pull down front of extension and locate eyelets over three spikes on frame. Care should be taken at this stage to prevent damage to canvas and front window.

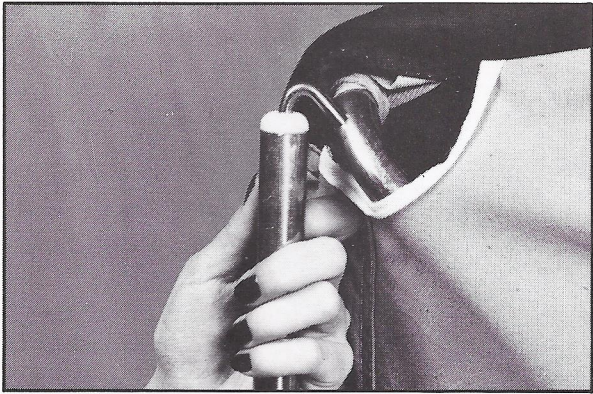

2 Connect three roof support bars to main cabin frame by means of hooks. Please note centre pole has smallest hook.




3 Connect centre roof pole to front extension 'A' frame.

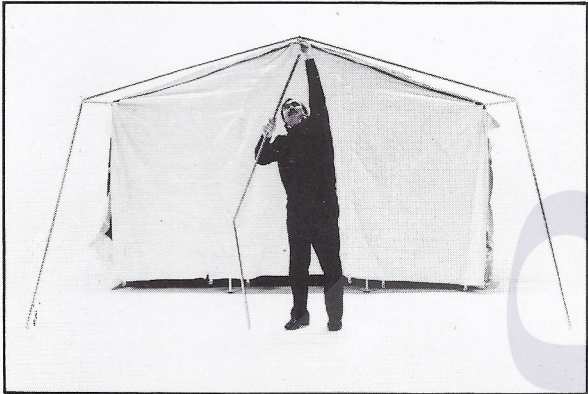

5 Connect centre leg.



6 Pull canvas forward from roof of cabin section.

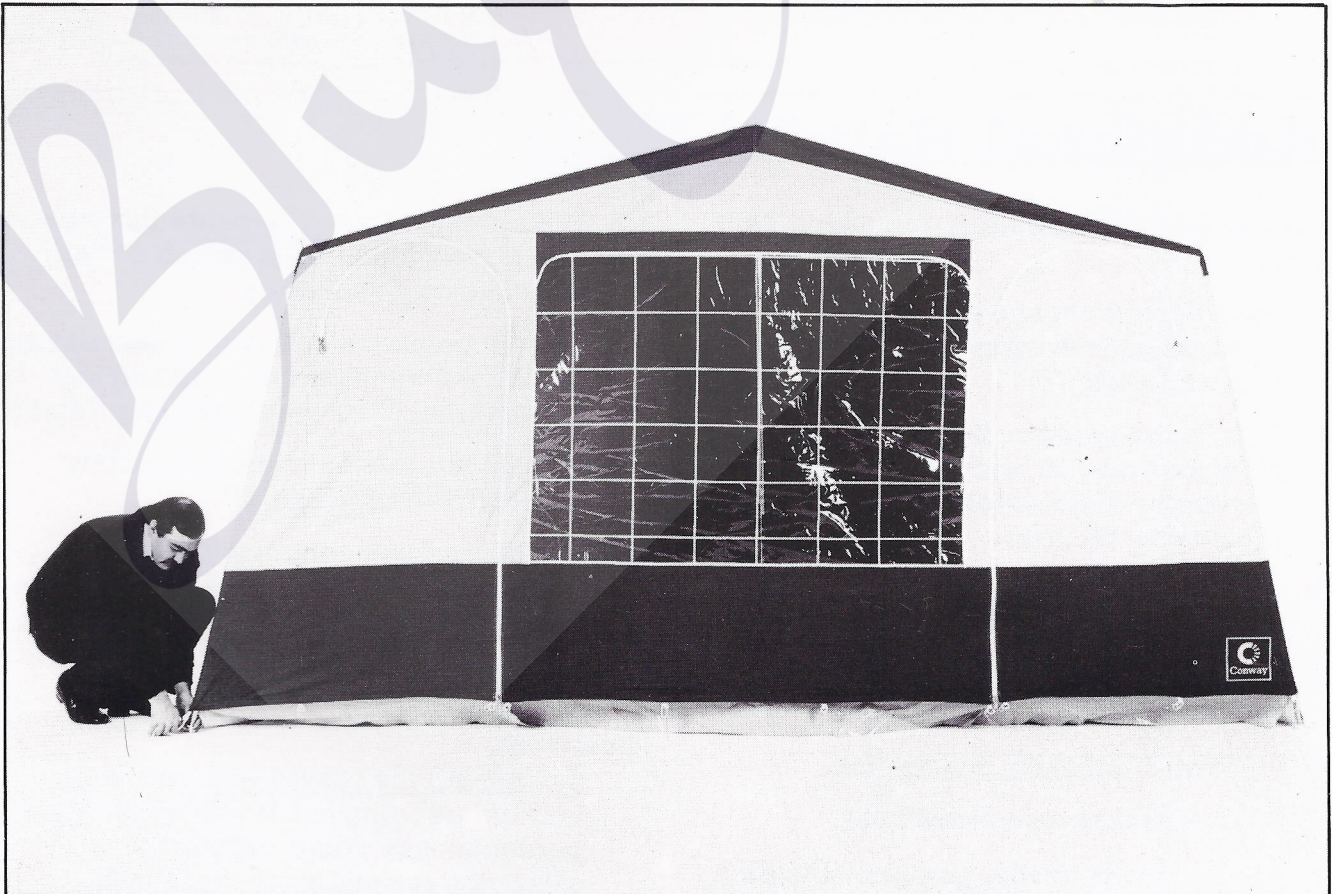


8 Ensure all zips are closed and then peg out. The gusset at the rear should be in line with the towbar and pegging out should start at the canvas.

CORNICHE/L/De Luxe Extension

The sleeping area of the Corniche can be erected in 4–5 minutes and the large zip-on extension added for those longer stops.


If you do not intend to use the sleeping section only then the extension can be left permanently zipped to the sleeping area. To fold the tent, pull the extension canvas back over the roof of the sleeping area and then follow instructions as per the sleeping area.

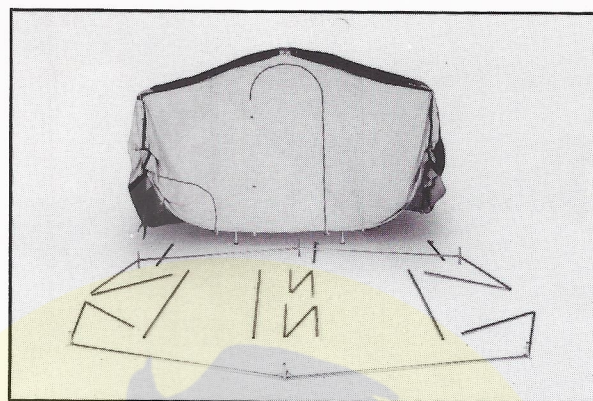

1 Once the cabin section is complete, remove the awning frame and lay out as shown.



4 Locate the three short middle section roof poles, note the centre roof pole has a shorter hook.

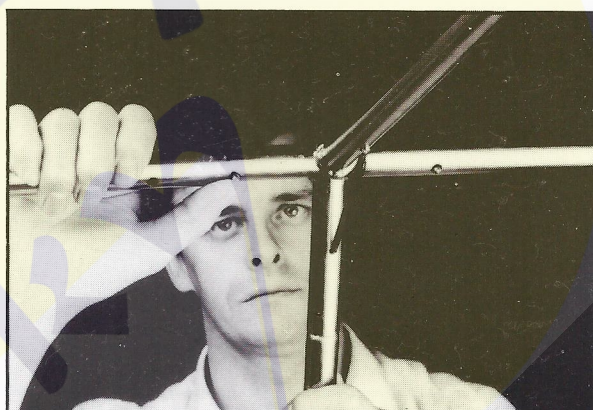

5 Locate the opposite end to the main awning frame.

Note: In windy conditions you will need to fit guy ropes to each front corner over the spikes after bringing over the front canvas.


Additional Helpful Hints

Setting the Conway Trailer and Cabin Tent Area:


1. Drop down front two jack legs onto plywood pads leaving trailer nose high by approximately 1in.
2. Drop down rear two body jack legs onto plywood pads, lift body to take spring from suspension and tighten leg screws (trailer should now be level).
3. Remove transit cover, open out frame and beds as manual and fit inners.
4. Extend all cabin framework to the top adjustment holes.
5. Pull over front cabin canvas wall.
6. Pull over rear cabin canvas wall.
7. Peg out under towbar peg points 1 and 2, ensuring gap of 6in at bed height level **do not pull out as in incorrect sketch**.
8. Peg out points 3 and 4, ensure that canvas is in a straight line as in sketch, lower cabin frame if necessary.
9. Peg out points 5 and 6, ensure that all zips are closed when pegging out and that canvas is kept taut when pegging 5 and 6.
10. Peg out intermediate pegging points keeping a straight line.
11. In wind and wet conditions, the bed perimeter guying points should be guyed out. **These are not strengthening guys** – they should only be slightly tensioned in this order: AA, BB, CC, EE.

Comment:


By keeping the canvas walls vertically taut and pegging out as above, with bed perimeter guy points tensioned correctly, you will avoid wet canvas coming into contact with your inner tent and mattresses.

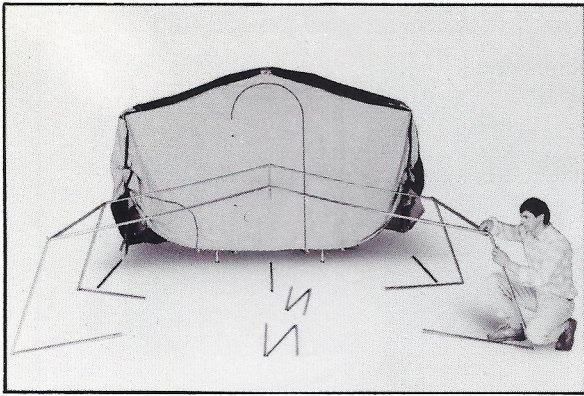


2 Assemble the free standing front awning frame as shown.

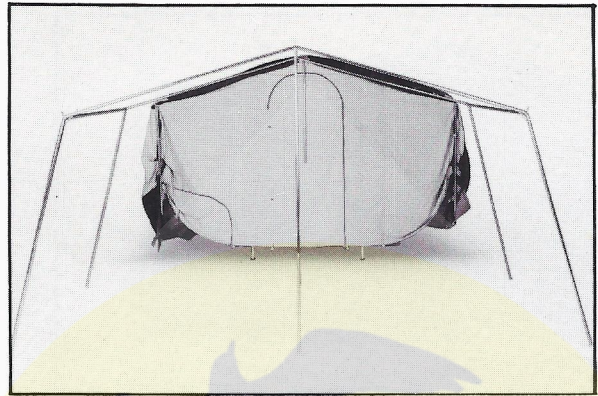



3 Lift up front awning frame and position approximately 3ft from the cabin section, locate the front frame centre leg.

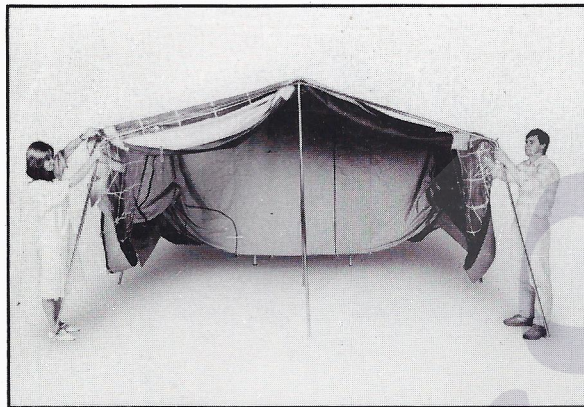

6 Zip onto the cabin the awning canvas, then pull over the awning canvas towards the front framework.
Note: When pulling the canvas over the front framework, ensure that you protect the canvas from snagging on the three front frame metal spikes.

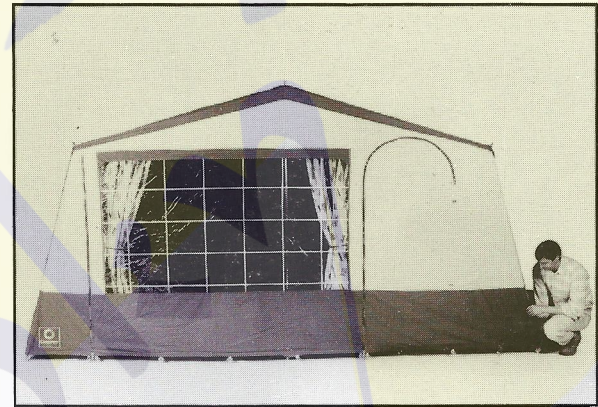


7 Pull down the front canvas over the framework and locate the eyelets over the three metal spikes. Go inside the awning and tension the three short middle section roof poles until the roof canvas is taut. Peg out.

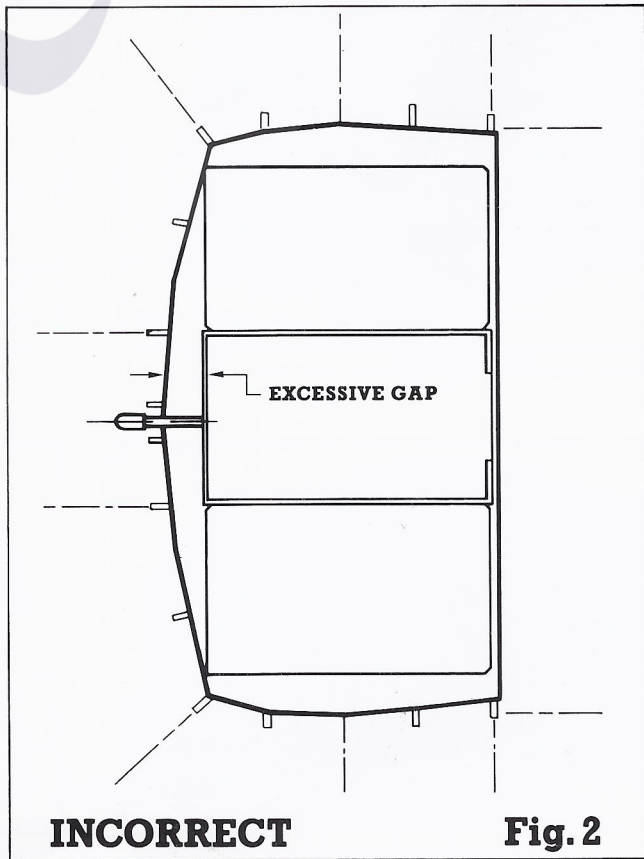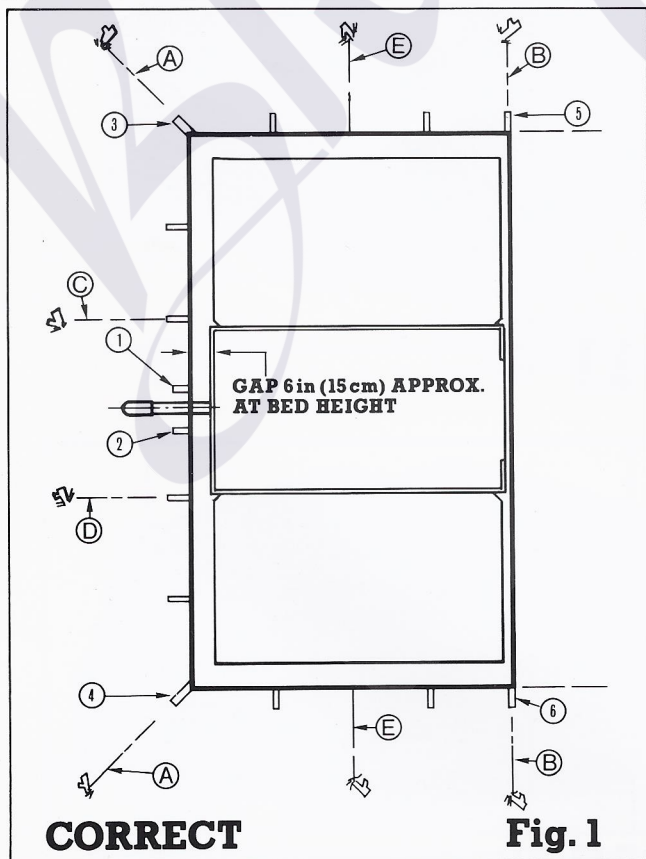

CAMARGUE Extension

The zip-on extension and intermediate zip-in section mean the Camargue is ultra versatile. However, if you use your Camargue solely as a complete holiday home, both extensions can be left permanently zipped to the sleeping area. Care should be taken, however, to see canvas is not trapped between the end frames as per our instructions in the separate handbook.

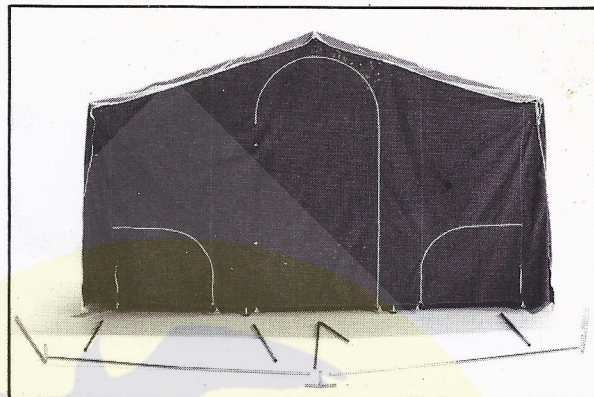


1 Layout the first part of the extension frame as shown. This is initially packed in the canvas sack. See parts list for detailed diagram.




4 Connect in centre with small 'A' piece.




5 Hook roof support bars to main cabin frame. The centre pole has the shortest hook.

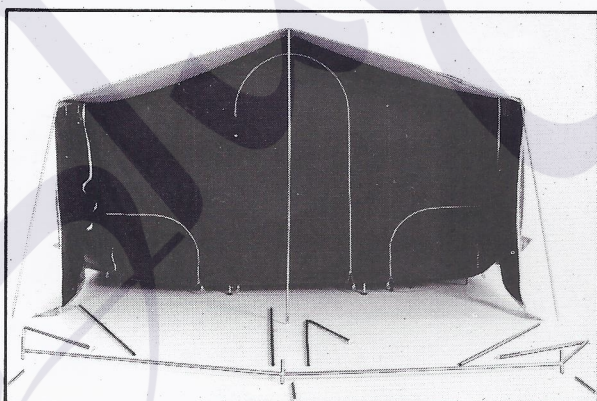


8 Remove main extension frame from bag and lay out on floor as shown. Connect front 'A' frame.

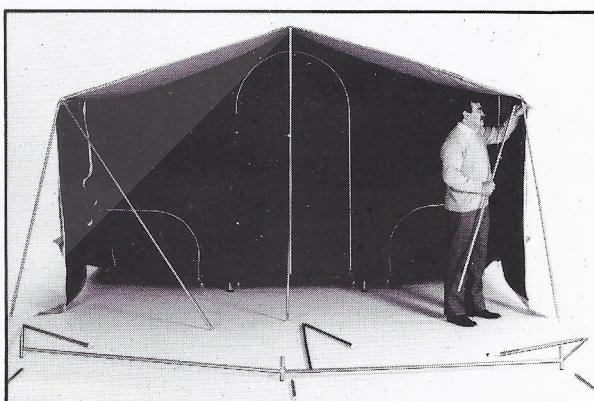


9 Connect three roof support poles to erected sub extension frame by means of hooks. Please note: Centre pole has shortest hook.

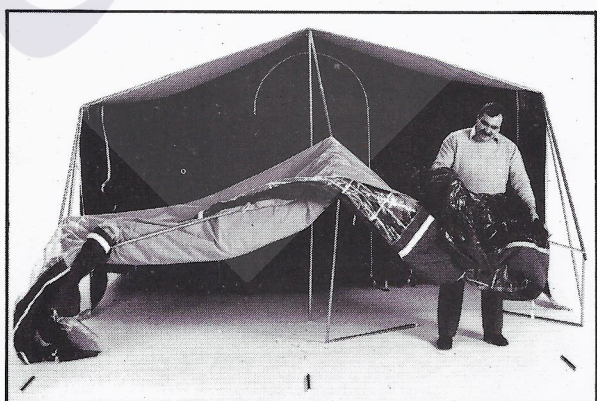


12 Unroll main extension canvas along the extension 'A' frame.

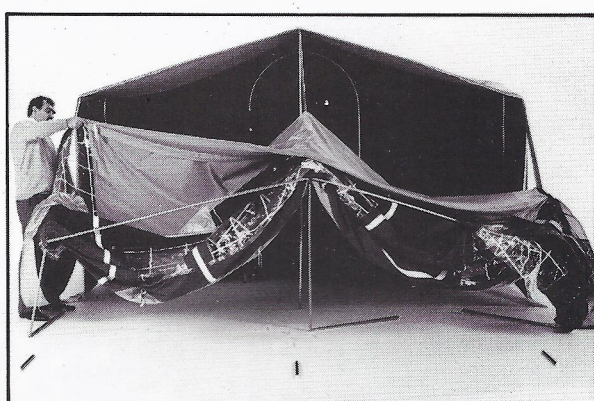

13 Unfold canvas. Pull back and zip to intermediate extension. Ensure that the protective canvas flap covers the zip.

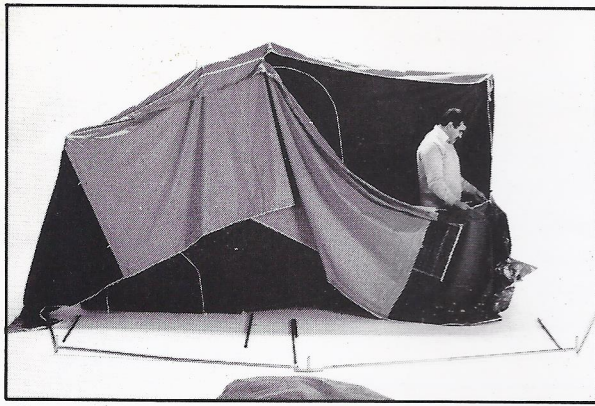


2 Zip short panel onto main cabin canvas.

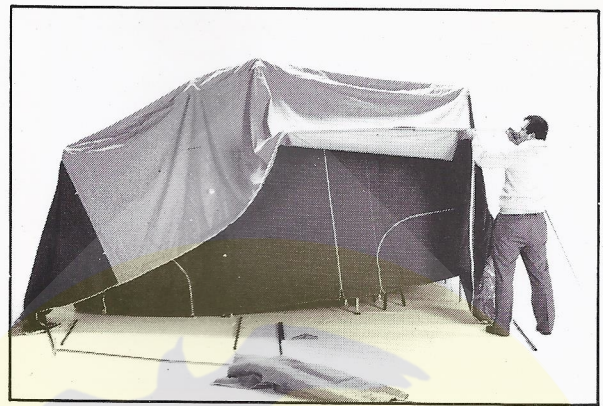


3 Slide two side frame members into the sleeve at front of small panel. Note: The small right-angled frame pieces should face towards main cabin.




6 Fasten roof support poles to front 'A' frame.

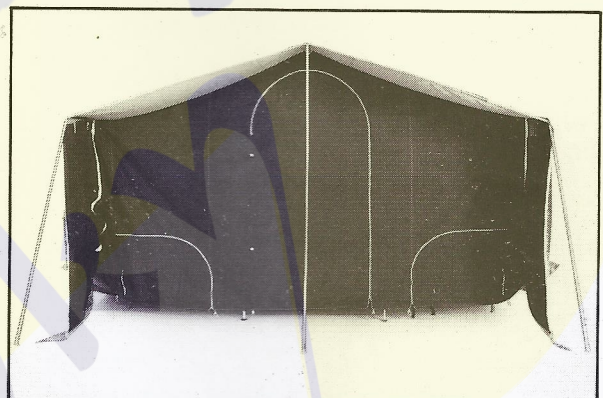


7 Clip centre leg in position.

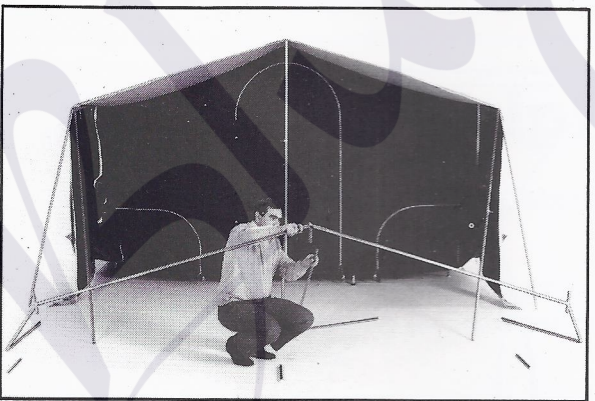

10 Connect centre leg to front 'A' frame. Leave bottom section of each leg 'broken'.

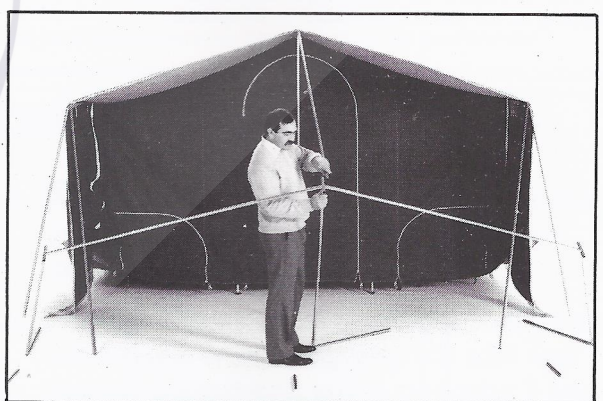


11 Connect three roof support poles to the front 'A' frame.

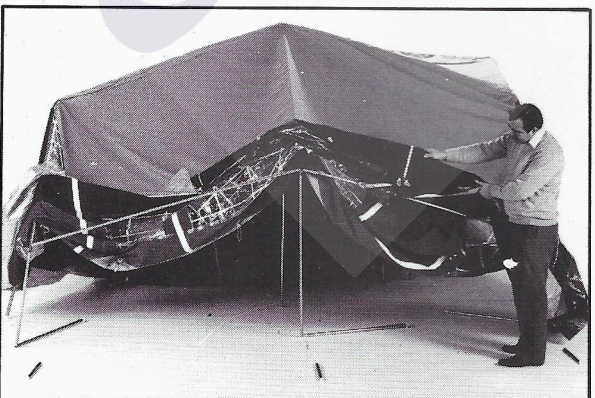

14 Pull front of canvas forward and locate corner angles through gusset in canvas. Care should be taken at this stage not to snag the canvas or windows on the frame.



15 Fit three short canopy poles and locate in canvas pockets.

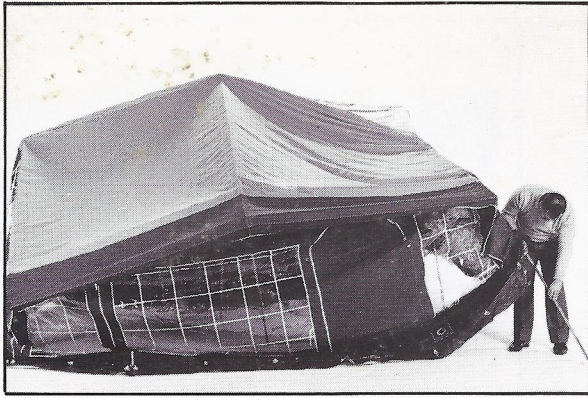

16 Connect bottom 'broken' section of extension legs and raise tent to full height.



17 Tension roof and leg poles. With all zips closed, peg out, ensuring that gusset in rear wall is in line with drawbar.
 NB: The main extension canvas can be attached direct to the cabin. Simply follow instructions 8-18 only.

CONWAY Trailer Tents

Conway Products Ltd., Skull House Lane, Appley Bridge, Wigan WN6 9DW.

Due to a process of ever continuing product improvement some details contained in this 1987 brochure may change.
 However the information is correct at the time of going to press.

www.foldingcampers.net