
# Cruiser

#### **Step-by-Step Instruction Leaflet**





Conway Products Limited Skull House Lane, Appley Bridge, Wigan WN6 9DW

Due to a process of ever-continuing product improvement, some details contained in this brochure may change. However, the information is correct at the time of going to press.

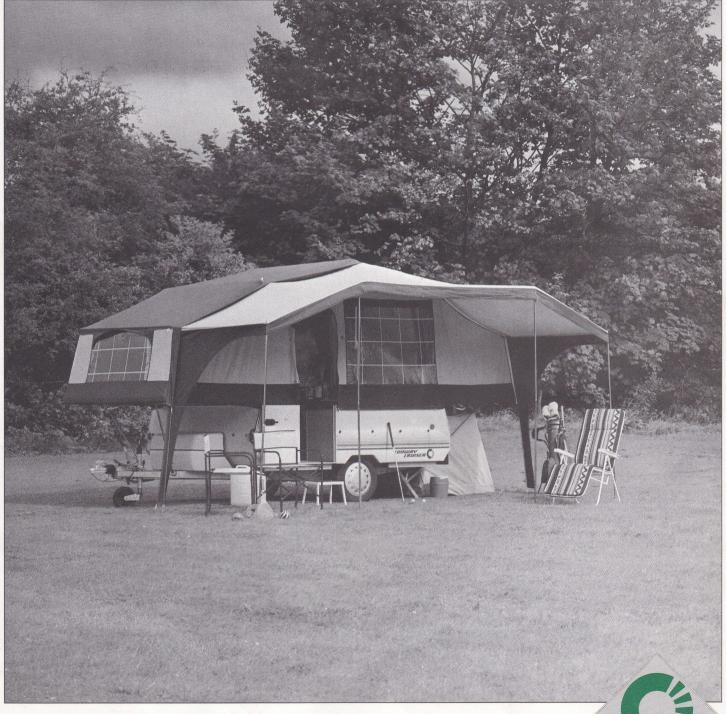


6

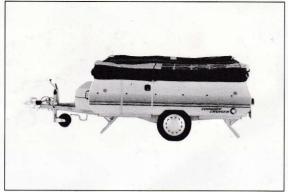






Still holding up the cross frame, pull steadily on the bed handle, slide bed out fully until it hits the end stops, the frame will automatically raise the cabin canvas.

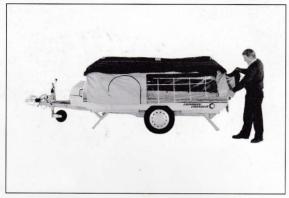

Pull down folded sides of canvas and loosen canvas tucked into the ends.




Repeat the operation for the front bed.

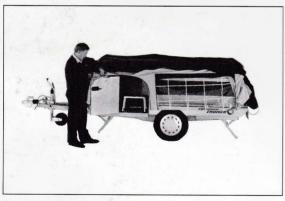


Open both canvas and trailer doors and fold back.



Fit bed support legs to both bed boards. Fasten elasticated shock cord attached to bed end canvas to cleats located underneath bed board.

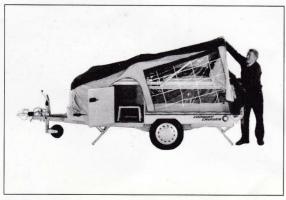

Standing at the back of the trailer, lift up the top cross frame and work up and down a few times. This allows air to get under the canvas enabling smooth slide out of the bed frames.

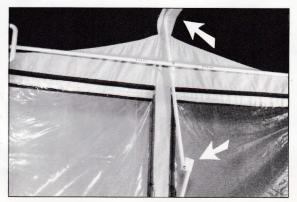

Step inside trailer making sure the centre roof ridge pole is central on double roof canvas strip then straighten ridge frame upright by closing the bracket.




3




# + 1


If horizontal bar has to be adjusted to tension canvas. **REMEMBER** button clip has to be returned to centre hole before lowering the frame to close down trailer.

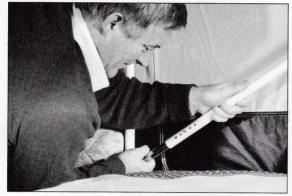

Extend side frames at each end and adjust with button clips as necessary to tension body canvas.

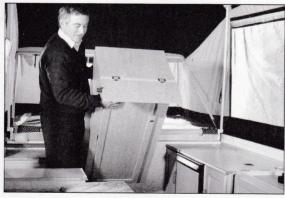

Lift over wardrobe and slide onto locker top. Locate four bed stop pins into holes in bed runner slides.

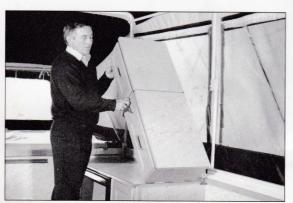

Lift over kitchen unit, arrange dinette cushions, clip up inner tents and roof liner. Reverse procedure to close trailer.

#### Special points to note:

Ensure that all cabin frame sections are in their lowest position and that the upright bracket is in the 'OPEN' position before closing the trailer.

Always site the trailer on as level ground as possible. Where necessary use the jockey wheel to level the trailer. The four corner steadies should NOT be used to level the trailer.

Both the canvas and the trailer doors should be OPEN when erecting, and CLOSED when folding the trailer.

Remove roof lining and curtains before closing the trailer.



Remove awning frame from bag and lay out flat as shown.



Hook five roof poles into holes in trailer frame through gussets in the canvas.




Lift front awning frame and connect the five roof poles with front legs "broken".




10



13

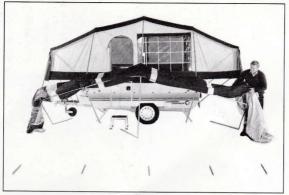

Fit two inner legs and centre leg to front frame. Take canvas from bag and lay out over roof poles.

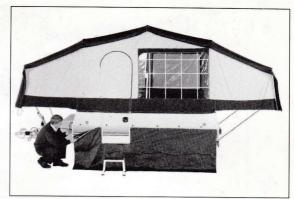

Fit draught skirt.




Raise frame to full height.

16

18


19

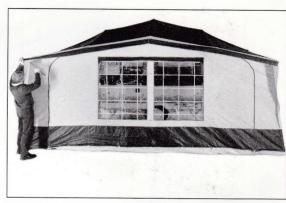

Pull awning canvas over front frame, fit stub canopy poles and then tension awning frame. Ensure zip cover is in place and peg out awning.




Pull canvas towards main cabin remove and relocate both side roof poles through gusset in corner of awning canvas.

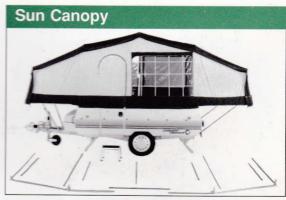


Take sun canopy frame from bag and lay out as shown.



Zip awning canvas to main body canvas and locate elasticated side walls on cleats under bed boards.

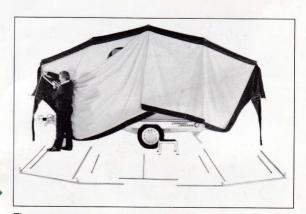

Zip sun canopy canvas to main body canvas ensuring zip cover is over zip.





#### Erection Instructions continued



Lift canopy canvas and hook into main cabin frame five roof support poles.



Connect left hand leg assembly to centre pole. Ensure eyelets are located over corner spikes.

26

27




Connect straight front centre pole to right hand side leg assembly and feed through canvas sleeve.



Connect five roof poles to front frame, fit the two other front legs and raise to full height. Tension roof poles and guy out.

### **Parts List**

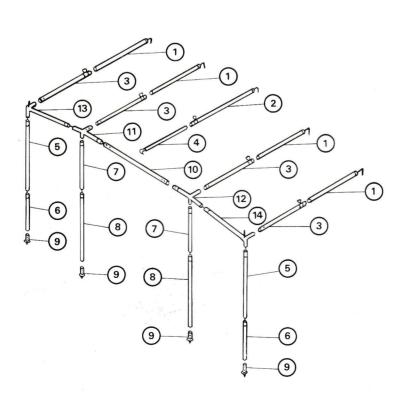


Sun Canopy				
Ref.	Qty.	Description		
1	4	Long Hooked Pole		
2	1	Long Hooked Pole with Thumbscrew		
3	4	Roof Adjuster with Thumbscrew		
4	1	Roof Pole with Clip		
5	2	Upper Support Leg		
6	2	Lower Support Leg		
7	2	Upper Support Leg		
8	2	Lower Support Leg		
9	4	Adjustable Foot		
10	1	Centre Branch		
11	1	Four Way L/H Branch		
12	1	Four Way R/H Branch		
13	1	Three Way Spike Branch L/H		
14	1	Three Way Spike Branch R/H		



## Parts List continued

Extension				
Ref.	Qty.	Description		
1	2	Main Frame Outer Leg - Upper		
2	2	Main Frame Outer Leg – Lower		
3	1	Main Frame Central Roof Pole		
4	1	Main Frame Inner Roof Pole L.H.		
5	1	Main Frame Inner Roof Pole R.H.		
6	1	Main Frame Outer Roof Pole L.H.		
7	1	Main Frame Outer Roof Pole R.H.		
8	2	Inner Leg Upper Poles		
9	2	Inner Leg Lower Poles		
10	1	Central Leg Upper Pole		
11	1	Central Leg Middle Pole		
12	1	Central Leg Lower Pole		
13	5	Adjustable Feet		
14	5	Roof Poles Inner		
15	5	Roof Poles Outer		
16	5	Adjuster Screws		
17	5	Canopy Poles		

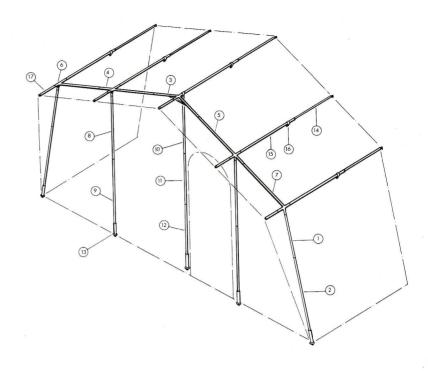

Cabin Frame				
Ref.	Qty.	Description		
1	4	Outer Bed Frame Bottom Upright		
2	4	Outer Bed Frame Middle Upright		
3	4	Outer Bed Frame Upper Upright		
4	2	Outer Bed Frame Corner Pole R.H.		
5	2	Outer Bed Frame Corner Pole L.H.		
6	2	Outer Bed Frame Roof Pole		
7	4	Inner Bed Frame Upright		
8	2	Inner Bed Frame Corner Pole R.H.		
9	2	Inner Bed Frame Corner Pole L.H.		
10	2	Inner Bed Frame Roof Pole		
11	4	Horizontal Ties Outer Pole		
12	2	Horizontal Ties Central Pole		
13	2	Central Ridge Frame Lower Upright		
14	2	Central Ridge Frames Upper Upright		
15	1	Central Ridge Frame Corner Piece R.H.		
16	1	Central Ridge Frame Corner Piece L.H.		
17	1	Central Ridge Frame Roof Pole		
18	2	Central Ridge Frame Upright Brackets		
19	2	Bed End Brackets R.H.		
20	2	Bed End Brackets L.H.		

